

ROW CROP PLANTERS

USAP 3200 AP SUPREMA ALP - FRAME 9520

Code: 0501099031
Series: S-0523
Revision: 00
Date Revision: JULHO/2023

PARTS CATALOGUE



MARCHESAN



PRODUCTS

Code	Description
0111510146	USAP 3200 AP 18E500 SUP ALP S-0523
0111510171	USAP 3200 AP 18E500 SUP ALP S-0523

ATTENTION: IMPORTANT

Marchesan S.A. reserves the right to improve and/or modify the technical features of its products, without obligation to do the same with those products already sold and without prior knowledge of the dealer or the customer. The photos are only illustrative.



MARCHESAN

INDEX

0909096768	ASSY FRAME	1
0909096769	FRAME RIGHT SIDE ASSY	2
0909096770	ASSY CENTRAL FRAME	3
0909096771	LEFT SIDE FRAME ASSY	4
0541050880	COMPLETE HEADER	5
0541050764	COMPLETE HEADER	6
0541050567	REAR HEADER	7
0531059893	SIDE ARM LATCH ASSEMBLY	8
0531059877	CYLINDER HYDRAULIC 44,45 X 85,70 X 398 X 93	9
0521059886	SEMI-ASSEMBLED REST	10
0531057052	DRAWBAR ASSY	11
0531057067	DRAWBAR ESTABILIZER ASSY	12
0541050566	LARGER SEMI-ASSEMBLED FRONT HEAD	13
0531059899	PANTOGRAPHIC HEADER	14
0531059875	CYLINDER HYDRAULIC	15
0531059876	CYLINDER HYDRAULIC	16
0541050757	ARTICULATED MAT SET	17
0531057160	FULL FRENCH MAO	18
0521057793	KNEECAP WITH RIGHT EXTENSION AXLE	19
0541050145	GUIDE SET	20
0541050144	GUÍA SENSORES	21
0531059147	FERTILIZER ENGINE SUPPORT	22
0541050663	SUPPORT PDM	23
0541050081	SENSOR LIFTING SUPPORT	24
0541050181	ASSY SUPPORT	25
0541050183	MOUNTED SUPPORT RIGHT SIDE VAPPLY MODULE	26
0541051373	HYDRAULIC HOSE ASSY 3C DKO APT VDRIVE 18E500	27
0541051272	HYDRAULIC HOSE ASSY 6C DKO APT ISOBUS 18E500	28
0541051358	HOSE ASSY DKO APT/18E500/VDR	29
0541051266	LOCKING DKO HOSE SET 18E500	30
0541051267	PANTOGRAPHIC DKO HOSE SET 18E500	31
0541051268	DKO OPEN/CLOSE HOSE SET 18E500	32
0541051269	DKO LIFT HOSE SET 18E500	33
0541051270	HOSE ASSY DKO ARTICULATION/WHEELS 18E500	34
0541051271	HOSE ASSY DKO TURBINE 18E500	35
0541051265	HOSE ASSY DKO APT/18E500	36
0531057194	3F/AP LIGHTING/CONTROL ASSY	37
0531052361	LABELS SET	38
0541050662	VDRIVE SET 18L 45/50 MS WV	39
0531054594	CONTROL 3 VAPPLY CHANNELS	40
0521056496	MOTOR EMD 80 WITH BLOCK BLFP2618	41
0511056972	FILTER HYDAC	42
0541050776	ASSY SHT	43
0541050881	ASSY SHT	44
0541050020	DOUBLE ROTATING DIVIDER	45
0541050680	DOUBLE PUMP MULTIPLIER	46
0541050014	HYDRAULIC PUMP	47
0541050681	HYDRAULIC PUMP	48
0541050677	PASSAGE BLOCK SET	49
0541050297	BLOCK PASSAGE	50
0531059989	PASSAGE BLOCK	51
0541050774	DIVIDER VALVE	52
0541050762	SET OF COMMAND BLOCKS	53
0531059987	DRIVING BLOCK	54
0531059990	ROTATING DIVIDER	55



MARCHESAN

INDEX

0531059985	BLOCK HYDRAULIC COMMAND	56
0541050775	CYLINDER COMMANDER BLOCK	57
0531059986	DRIVE COMMAND BLOCK	58
0541050773	BLOCK COMMAND	59
0541050504	HEAT EXCHANGER	60
0541050012	RADIATOR EQUIPMENT	61
0531059117	FULL HEAD HOSE STABILIZER	62
0541050498	TANK 180 LITER	63
0541050526	DOUBLE PUMP MULTIPLIER	64
0541050530	HYDRAULIC PUMP	65
0541050505	BLOCK COMMAND	66
0541050594	ISO SET 6 CHANNELS	67
0521054490	FLOW DIVIDING VALVE ASSY	68
0541050743	MECHANICAL SET APT 6C	69
0541050552	BOX MODULES	70
0531056908	SUPPORT SEED ENGINE	71
0531056094	ASSY BEARING	72
0521055372	ROW SEED BEARING	73
0521059948	ASSY LOCK AXLE	74
0521059839	ASSY REAR HEADLIGHT	75
0531052853	RIGHT LADDER SET	76
0531050901	ASSY STABILIZER	77
0531052852	LEFT SUPPORT TRANSMISSION 22/23	78
0531057167	SIDE SUPPORT	79
0531055920	MINOR DUCT COMPLETE FERTILIZER	80
0531057157	RIGHT SIDE SILO 06 MOUTH	81
0531057185	RIGHT SIDE SILO 06 MOUTH	82
0531059144	FERTILIZER DOSER ALPHA II	83
0531055863	ASSY TRANSMISSION HUB	84
0531055875	ALPHA II FERTILIZER FIXING GUIDE SET	85
0531059138	COMPLETE COLLECTOR	86
0531055273	ALPHA FERTILIZER METERING CLAMP	87
0531051685	CENTRAL BEARING SHAFT	88
0531051684	SIDE AXLE	89
0501053788	3/4" SQUARE AXLE FASTENER	90
0531050918	TOP SUPPORT MOUNTED LIFT EXTENSOR	91
0521051407	FERTILIZER HOPPER FIXER	92
0531057158	HANDRAIL/PLATFORM ASSY	93
0531059883	ASSY HOSE SUPPORT	94
0541050562	MONO RIGHT WHEEL TIRE 500/50 DKO	95
0531055358	COMPLETE SIDE CYLINDER BEARING	96
0531055357	LOCK PIN SET	97
0531059818	HYDRAULIC RIGHT CYLINDER	98
0541050292	MONO RUEDA DERECHA NEUMÁTICO 500 X 50	99
0541050195	MOUNTED LEFT WHEEL	100
0541050294	FULL WHEEL BOX	101
0531057693	HOSE SUPPORT	102
0541050557	SIDE SUPPORT	103
0541050570	SIDE ARTICULATION CYLINDER 44,45X85,70X291X657 DKO	104
0541050616	CYLINDER 101,55 X 618 X 353	105
0541050589	CONDUCTOR TUBE AIR 06 OUTLETS	106
0541050590	TURBINE SUCTION	107
0531053062	SUPPORT WITH VACUOMETER 18/25 LINES	108
0541050667	RIGHT SIDE DUCT ASSEMBLY	109
0909096772	COMPLETE FERTILIZER ROW	110



MARCHESAN

INDEX

0531055175	LONG FERTILIZER ROW SMALLER DC20 SHANKS	111
0531055166	SHORT DC20 FERTILIZER ROW WITHOUT LUBRICATION ROD	112
0541050617	SHORT RIGHT SEED ROW PPH/VDR/CPERRA	113
0541050376	SHORT RIGHT SEED ROW TCC/SPICRR	114
0541050618	LONG SEED ROW LEFT PPH/VDR/CPERRA	115
0541050373	LONG SEED ROW LEFT TCC/SPICRR	116
0541050378	SUPER LONG LEFT SEED ROW TCC/SPICRR/SEM ABA/PPH	117
0531055165	20 COMPLETE CURVED CORRUGATED CUTTING DISC	118
0521057681	BOX WITH DISC CUTTING 20 BEARING CONICO	119
0521057680	DISC CUTTING BOX	120
0521053673	SCARIFIER ROD WITH NOZZLE	121
0531053737	MOUNTED SUPPORT	122
0521057679	ASSY CUTTING DISK 20	123
0531054007	SHORT/LONG FRONT SEED ROW	124
0521056936	RIGHT REAR P.P CSC/V-DRIVE	125
0521056955	RIGHT DDD ASSY	126
0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 FERTILIZER / SEED	127
0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 FERTILIZER / SEED	128
0521055865	ASSY LEFT HUB DDD FERTILIZER / SEED	129
0521055864	ASSY RIGHT HUB DDD FERTILIZER / SEED	130
0521056952	ASSY P.P CSC/V-DRIVE	131
0521052131	VSET2 DISTRIBUTOR WITH CORN DISC WITHOUT PROTECTION	132
0531050978	DEPTH CONTROL WITH FAST ANGLE REGULATING AXIS	133
0531050980	SEM SEMI-ASSEMBLED CONTROL WITHOUT LUBRICATION	134
0531051094	MOUNTED HOSE GUIDE ASSEMBLY	135
0531050975	LEFT ARM WHEELS DEPTH WITH HUB WITHOUT LUBRICATION	136
0531050974	CUBE CONTROL DEPTH WITHOUT LUBRICATION	137
0501052297	DEPTH WHEELS REGULATOR ASSY	138
0521054990	LEFT COMPACTOR WHEEL	139
0521055017	RIGHT COMPACTOR WHEEL	140
0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	141
0511055819	DEPTH BAND WITH RIM	142
0541050377	REAR WITH RIGHT DDD SPICRR WITHOUT FLAP / TCC PPH	143
0531059830	REAR WITH RIGHT DDD WITHOUT FLAP WITHOUT FULL WHEEL	144
0531059833	DEPTH REGULATOR	145
0531059832	ASSEMBLED RIGHT ARM	146
0521055056	WHEEL RAYED ASSY BAND	147
0521055073	ASSEMBLY DEPTH WHEEL HUB	148
0521056640	PRECISION PLANTING CSC CABLE / TRANSMISSION ASSY	149
0531059836	COMPACTOR WHEEL ASSEMBLY	150
0531059837	SPA COMPACTING BODY WITHOUT BOLT	151
0531051264	FULL SUPPORT FOR ENCAPSULATED CURRENT FIXATION	152
0541050062	P.P. TRANSMISSION GEAR BOX RIGHT	153
0541050079	SEED ROW UPPER TRANSMISSION GEAR BOX	154
0541050067	FRONT LONG SEED ROW	155
0521056937	LEFT REAR P.P CSC/V-DRIVE	156
0521056954	LEFT DDD ASSY	157
0541050375	REAR WITH LEFT DDD SPICRR WITHOUT FLAP /TCC/PPH	158
0531059835	REAR WITH LEFT DDD SPICRR WITHOUT FLAP WITHOUT FULL WHEEL	159
0521056634	LEFT ASSY DDD INTEGRATED DEPTH SYSTEM SPI	160
0541050048	SUPER LONG FRONT TCC	161
0511057159	TRANSMISSION HOPPER SEED ROW	162




MARCHESAN

INDEX

0501057684	SIDE BEARING FRONT SUPPORT SEED ROW	163
0521055869	LEFT DUAL FERTILIZER DISC	164
0521055868	RIGHT DUAL FERTILIZER DISC	165
0521052549	CLAMP	166
0531055349	CENTRAL HOPPER WITH 07 NOZZLES ALPHA/APT/AP	167
0531055350	CENTRAL SUPPORT WITH 07 NOZZLES	168
0531055376	TRANSMISSION ALPHA FERTILIZER METERING HUB	169
0521054282	BEARING	170
0501056444	BEARING WITH ROLLER	171
0531055368	ASSY RIGHT ARTICULATION ARM AP	172
0531055369	ASSY LEFT ARTICULATION ARM AP	173
0531054350	DEPOSIT MOVEMENT SUPPORT	174
0531055424	CENTRAL SUPPORT WITH 06 FERTILIZER DUCTS	175
0531055919	MINOR DUCT COMPLETE FERTILIZER	176
0531059845	CYLINDER HYDRAULIC 50,80 X 127 X 965 X 534	177
0541050565	LEFT TELESCOPIC WHEELSET	178
0541050564	RIGHT TELESCOPIC WHEELSET	179
0531054036	ASSY CENTER CYLINDER BEARING	180
0541050194	COMPLETE CENTRAL CUBE	181
0531059817	HYDRAULIC CYLINDER 44,45X85,70X326	182
0541050196	MOUNTED RIGHT WHEEL	183
0541050556	SOPORTE CENTRAL MONTADO	184
0541050555	SILO ASSY CSC 2500L DKO	185
0531054354	CENTRAL SEED BOX 2500 LITERS	186
0531054357	LOWER SYSTEM 28 PIPES	187
0531058201	HYDRAULIC TURBINE WITH SCREEN	188
0541050569	HYDRAULIC CYLINDER 38,10X63,50X225X375	189
0541050588	AIR CONDUCTOR TUBE 06 OUTLETS 02 COMPLETE NOZZLES	190
0541050679	LEFT LANTERN SET	191
0541050678	RIGHT LANTERN SET	192
0531059250	DOOR MANUAL	193
0531059630	KIT WITH ALPHA COMPONENTS - 20 ROWS	194
0531052854	LEFT STAIRS SET	195
0531058135	LEFT SIDE SILO WITH 06 OPENINGS 175L ALPHA	196
0531058136	LEFT SIDE SILO WITH 06 MOUTHS ALPHA	197
0541050563	LEFT WHEEL TIRE 500/50 DKO	198
0531057692	LEFT COMPLETE HOSE SUPPORT	199
0541050293	LEFT WHEEL TIRE 500 X 50	200
0541050668	LEFT SIDE DUCT ASSEMBLY	201

ASSY FRAME

0909096768

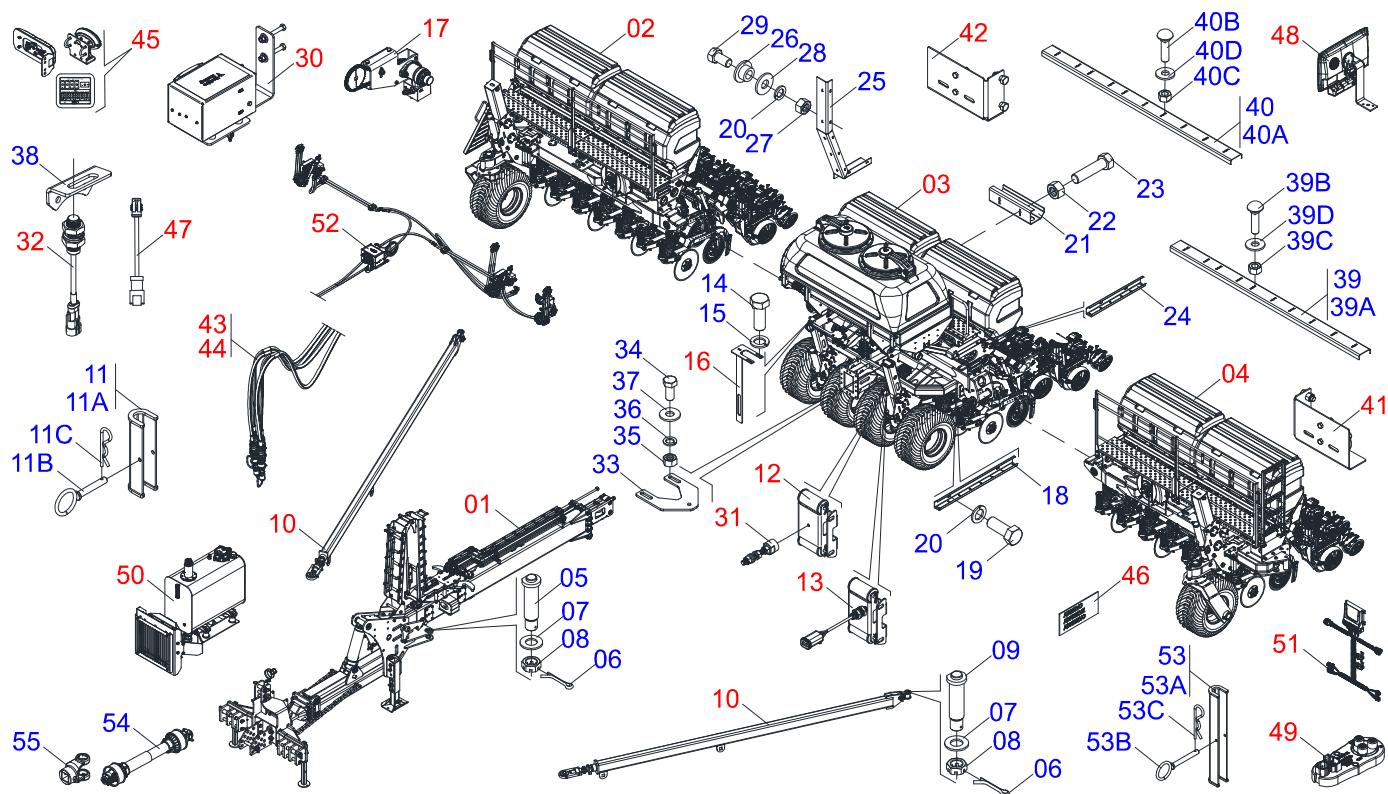


Item	Code	Description	See page	QT
01	0541050880	COMPLETE HEADER	5	01
01.	0541050764	COMPLETE HEADER	6	01
02	0909096769	FRAME RIGHT SIDE ASSY	2	01
03	0909096770	ASSY CENTRAL FRAME	3	01
04	0909096771	LEFT SIDE FRAME ASSY	4	01
05	0531061069	FRONT HAND FRENCH AXLE		02
05.	0531061650	FRONT HAND FRENCH AXLE		02
06	0503010038	3/16 X 2 COTTERPIN		04
07	0501017779	32 X 60 X 4.75 FLAT WASHER		04
08	0503011052	1.1/4" X 0.77" CASTLE NUT		04
09	0531061650	FRONT HAND FRENCH AXLE		02
09.	0531061069	FRONT HAND FRENCH AXLE		02
10	0531057160	FULL FRENCH MAO	18	02
11	0531055394	MOUNTED TRANSPORT LOCK 315MM		04
11A	0531064139	TRANSPORT LOCK 315MM		01
11B	0531060392	PIN LOCK TRANSPORT		01
11C	0503030168	HITCH PIN CLIP		01
12	0541050145	GUIDE SET	20	01
13	0541050144	GUÍA SENSORES	21	01
14	0503015321	3/8 UNC X 5/8 C S G.2 ZN BOLT		06
15	0501013518	FLAT WASHER		06
16	0531066193	RULER		01
17	0531059147	FERTILIZER ENGINE SUPPORT	22	03
18	0501312548	GUTTER 55 X 50 X 800		02
19	0503011334	BOLT 3/8 UNC X 3/4 CS G.5 ZN		08
20	0503010025	3/8 SPRING WASHER		10
21	0501312919	GUTTER 55 X 50 X 200		02
22	0503011075	3/4" UNC NUT		04
23	0501010125	3/4" X 2-1/2" BOLT		04
24	0501312917	GUTTER 55 X 50 X 450		02
25	0501312921	RIGHT SIDE GUTTER		01

ASSY FRAME

0909096768

Item	Code	Description	See page	QT
26	0501312922	GLOVE 10.50 X 29 X 24		02
27	0503010026	3/8" NUT		02
28	0501016103	FLAT WASHER		02
29	0503011236	3/8" X 2" BOLT		02
30	0541050663	SUPPORT PDM	23	01
31	0503018775	MAGNET ACTUATOR LH7.4.000091		01
32	0503018774	MAGNETIC SENSOR		01
33	0501311516	UPPER SHEET		01
34	0503010743	1/4" X 1-1/4" BOLT		02
35	0503010144	1/4" NUT		02
36	0503010143	1/4" SPRING WASHER		02
37	0591012160	7 X 23 X 2.00 ZN FLAT WASHER		02
38	0501311515	SENSOR LIFTING SUPPORT		02
38.	0541050081	SENSOR LIFTING SUPPORT	24	01
39	0541050080	6S X 500 GUTTER		02
39A	0501311403	GUTTER 6S 50 X 30 X 2950		02
39B	0503013029	3/8" X 3/4" BOLT		12
39C	0503013357	3/8 SELF-ADJUSTING NUT		12
39D	0501010984	10,50 X 27 X 3,00 FLAT WASHER		12
40	0541050366	GUTTER 4S X 500 WITH CENTRAL BOLT		01
40A	0501311956	GUTTER 4S 50 X 30 X 2250 CENTER		01
40B	0503013029	3/8" X 3/4" BOLT		01
40C	0503013357	3/8 SELF-ADJUSTING NUT		04
40D	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
41	0541050181	ASSY SUPPORT	25	01
42	0541050183	MOUNTED SUPPORT RIGHT SIDE VAPPLY MODULE	26	02
43	0541051373	HYDRAULIC HOSE ASSY 3C DKO APT VDRIVE 18E500	27	01
44	0541051272	HYDRAULIC HOSE ASSY 6C DKO APT ISOBUS 18E500	28	01
45	0531057194	3F/AP LIGHTING/CONTROL ASSY	37	01
46	0531052361	LABELS SET	38	01
47	0513011769	EXTERNAL ADAPTER		01
48	0541050662	VDRIVE SET 18L 45/50 MS WV	39	01
49	0531054594	CONTROL 3 VAPPLY CHANNELS	40	01
50	0541050776	ASSY SHT	43	01
50.	0541050881	ASSY SHT	44	01
51	0541050594	ISO SET 6 CHANNELS	67	01
52	0541050743	MECHANICAL SET APT 6C	69	01
53	0531055395	MOUNTED TRANSPORT BEAM 600MM		04
53A	0531064140	TRAVA FOR TRANSPORTATION 600MM		04
53B	0531060392	PIN LOCK TRANSPORT		04
53C	0503030168	HITCH PIN CLIP		04
54	0503063897	CARDAN 21Z 1.3/8 X 21Z 1.3/8 800MM		01
55	0513011183	TERMINAL CARDAN TRIANGULAR 20Z 1.3/4 SERIE 06		01

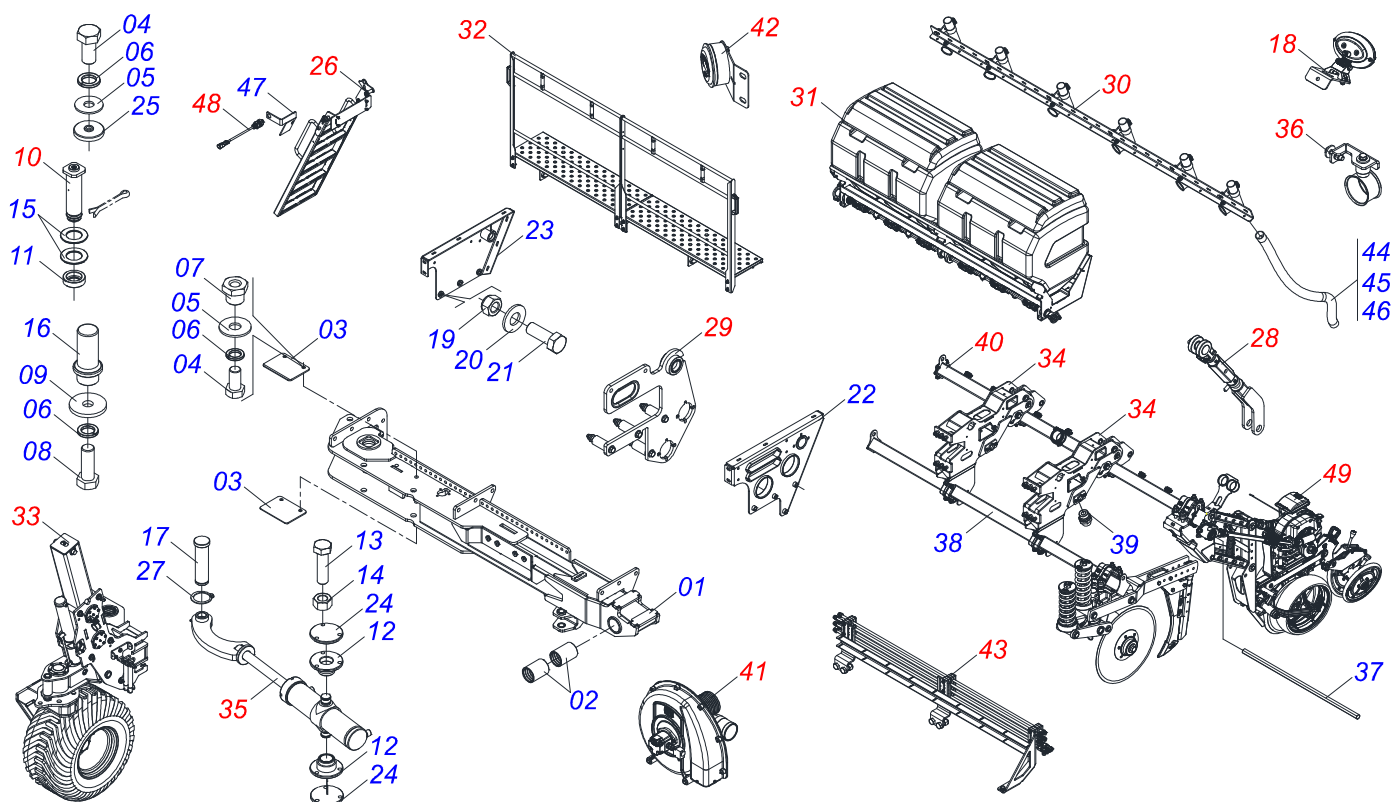

Item	Code	Description	See page	QT
01	0531064369	RIGHT FRAME		01
02	0591019522	SLEEVE WEAR		02
03	0591018042	FRICTION PLATE		02
04	0503010962	5/8" X 1-1/4" BOLT		06
05	0501010453	FLAT WASHER		06
06	0503010027	5/8 SPRING WASHER		07
07	0591015962	SEPARATOR GLOVE		04
08	0503010232	5/8" X 1.3/4" BOLT		01
09	0511010721	FLAT WASHER		01
10	0521059948	ASSY LOCK AXLE	74	01
11	0591018044	WASHER 65 X 130 X 20		01
12	0501111058	ASSY FIXING GLOVE		02
13	0503011239	1/2" X 2" BOLT		06
14	0503011336	1/2" HEX SELF ADJUSTING NUT		06
15	0591018045	FRICTION TRACK		02
16	0591015374	HITCH AXIS		01
17	0501210615	SIDE WHEEL JOINT AXLE		01
18	0521059839	ASSY REAR HEADLIGHT	75	01
19	0503013389	5/8" SELF LOCKING NUT		04
20	0591011409	FLAT WASHER 16,5 X 35 X 3,00		04
21	0503010233	5/8" X 2-1/2" BOLT		04
22	0531062505	LARGE SIDE LEFT		01
23	0531062503	LOWER RIGHT SIDE COMPLETE		01
24	0591018541	SWIVEL CYLINDER COVER		02
25	0591018043	BODY SUPPORT		02
26	0531052853	RIGHT LADDER SET	76	01
27	0503010391	501038 CLAMPING RING (FOR AXLE)		01
28	0531050901	ASSY STABILIZER	77	02
29	0531052852	LEFT SUPPORT TRANSMISSION 22/23	78	01
30	0531057167	SIDE SUPPORT	79	01
31	0531057157	RIGHT SIDE SILO 06 MOUTH	81	01


FRAME RIGHT SIDE ASSY

0909096769

Item	Code	Description	See page	QT
32	0531057158	HANDRAIL/PLATFORM ASSY	93	01
33	0541050562	MONO RIGHT WHEEL TIRE 500/50 DKO	95	01
34	0541050557	SIDE SUPPORT	103	02
35	0541050616	CYLINDER 101,55 X 618 X 353	105	01
36	0531057693	HOSE SUPPORT	102	01
37	0581018254	HEX AXLE 3/4 X 2700 STM 29 USG		01
38	0531061847	FIXING TUBE SEED/FERTILIZER LINES		01
39	0513011678	ADAPTER TERMINAL 3/4 UNF ORING X MF TB12L		08
40	0541050589	CONDUCTOR TUBE AIR 06 OUTLETS	106	01
41	0541050590	TURBINE SUCTION	107	01
42	0531053062	SUPPORT WITH VACUOMETER 18/25 LINES	108	01
43	0541050667	RIGHT SIDE DUCT ASSEMBLY	109	01
44	1164920015	BLACK SUCTION HOSE		34
45	1164920014	BLACK LIGHT SUCTION HOSE		11
46	1163920004	BLACK LIGHT SUCTION HOSE		04
47	0501311685	SUPPORT LIFTING STAIRS RIGHT		01
48	0503018774	MAGNETIC SENSOR		01
49	0909096772	COMPLETE FERTILIZER ROW	110	11

ASSY CENTRAL FRAME

0909096770

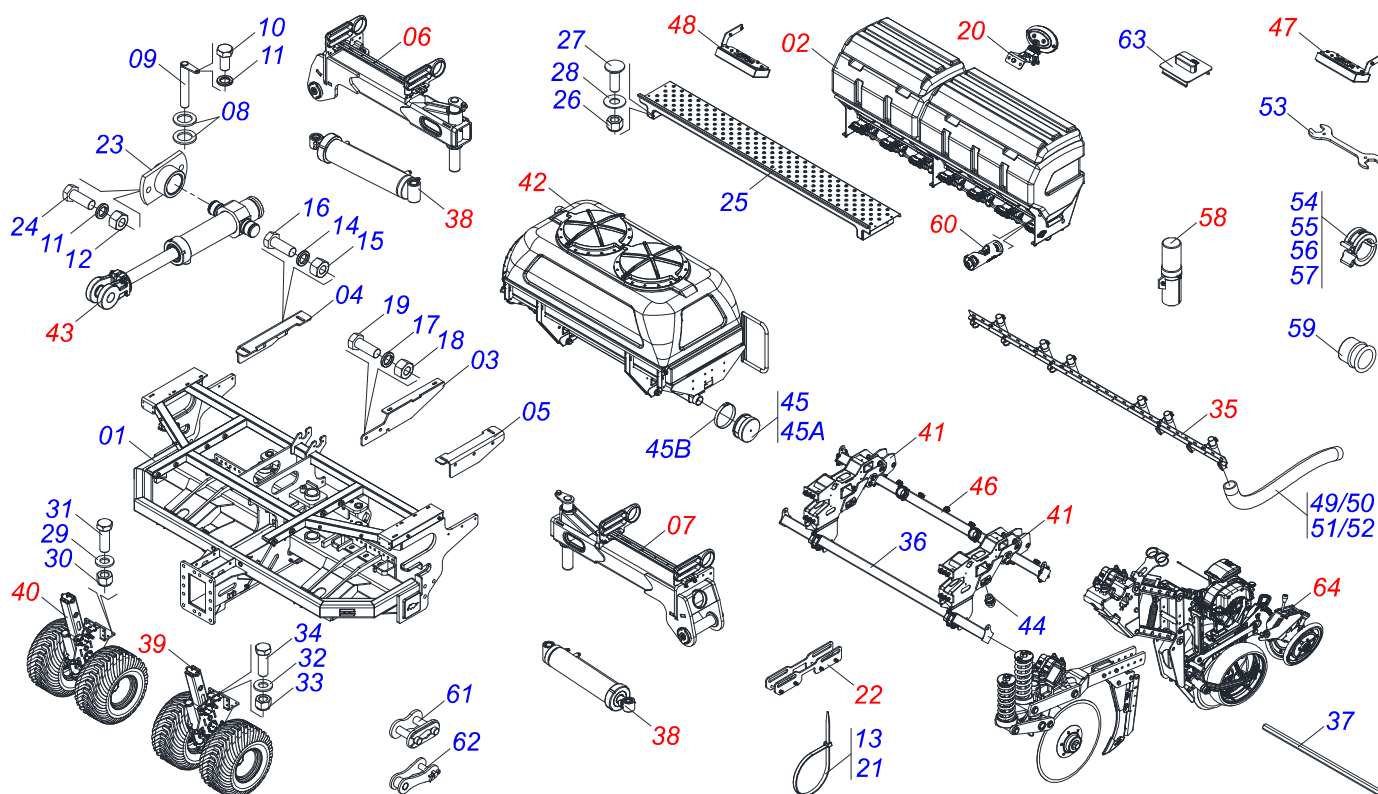

Item	Code	Description	See page	QT
01	0531064288	CENTRAL FRAME CSC 2500L		001
02	0531055349	CENTRAL HOPPER WITH 07 NOZZLES 167		001
03	0531064101	SILO CENTRAL SUPPORT		001
04	0531064081	RIGHT CENTRAL SILO SUPPORT		001
05	0531064100	LEFT CENTRAL SILO SUPPORT		001
06	0531055368	ASSY RIGHT ARTICULATION ARM AP	172	001
07	0531055369	ASSY LEFT ARTICULATION ARM AP	173	001
08	0521011100	FLAT WASHER		004
09	0531062245	233 CYLINDER JOINT AXIS		002
10	0503010834	1/2 X 1 BOLT		002
11	0503010019	1/2" SPRING WASHER		002
12	0503010060	1/2 UNC G.5 ZN HEX NUT		004
13	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		200
14	0503010027	5/8 SPRING WASHER		006
15	0503010013	5/8 NUT		006
16	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN		006
17	0503010023	3/4" SPRING WASHER		002
18	0503010014	3/4" HEX NUT		002
19	0501010098	3/4" UNC BOLT		002
20	0521059839	ASSY REAR HEADLIGHT	75	001
21	0503018829	NYLON CLAMP		100
22	0531054350	DEPOSIT MOVEMENT SUPPORT	174	002
23	0501111056	BEARING SUPPORT CYLINDER WITHOUT LUBRICATION		002
24	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		004
25	0531063645	CENTRAL PLATFORM FOR BOX 28 MOUTH		001
26	0503010589	1/2" UNC SELF ADJUSTING NUT		004
27	0503014378	1/2" X 1-1/2" BOLT		004
28	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		004
29	0501017065	FLAT WASHER		002
30	0503019522	HEX NUT		002


ASSY CENTRAL FRAME

0909096770

Item	Code	Description	See page	QT
31	0503019521	SCREW 3/4 UNF 3 CSRP G.8 ZN		002
32	0511015994	FLAT WASHER		002
33	0503018754	1-8 UNC NUT		002
34	0501010276	BOLT		002
35	0531055424	CENTRAL SUPPORT WITH 06 FERTILIZER DUCTS	175	001
36	0531061847	FIXING TUBE SEED/FERTILIZER LINES		001
37	0581018254	HEX AXLE 3/4 X 2700 STM 29 USG		001
38	0531059845	CYLINDER HYDRAULIC 50,80 X 127 X 965 X 534	177	002
39	0541050565	LEFT TELESCOPIC WHEELSET	178	001
40	0541050564	RIGHT TELESCOPIC WHEELSET	179	001
41	0541050556	SOPORTE CENTRAL MONTADO	184	002
42	0541050555	SILO ASSY CSC 2500L DKO	185	001
43	0541050569	HYDRAULIC CYLINDER 38,10X63,50X225X375	189	001
44	0513011678	ADAPTER TERMINAL 3/4 UNF ORING X MF TB12L		014
45	0521053176	COVER KAP		001
45A	0581017528	15 OUTPUT TUBE COVER		001
45B	0503011372	102 TO 121 CLAMP		001
46	0541050588	AIR CONDUCTOR TUBE 06 OUTLETS COMPLETE NOZZLES	02 190	001
47	0541050679	LEFT LANTERN SET	191	001
48	0541050678	RIGHT LANTERN SET	192	001
49	1164920015	BLACK SUCTION HOSE		025
50	1164920014	BLACK LIGHT SUCTION HOSE		010
51	1163920004	BLACK LIGHT SUCTION HOSE		010
52	1164920017	BLUE PVC FLAT HOSE		002
53	0541015451	FIXED KEY 2.3/8 X 2.3/4		001
54	0501047895	25 ROD STOP		004
55	0501047885	30 ROD STOP		008
56	0501047886	35 ROD STOP		004
57	0501047887	40 ROD STOP		008
58	0531059250	DOOR MANUAL	193	001
59	0503034345	DISPENSER COVER		010
60	0531059630	KIT WITH ALPHA COMPONENTS - 20 ROWS	194	010
61	0503011750	AMENDMENT WITH LOCK		006
62	0503011751	REDUCTION		006
63	0503032624	FERTILIZER HOPPER GUTTER		006
64	0909096772	COMPLETE FERTILIZER ROW	110	010

LEFT SIDE FRAME ASSY

0909096771

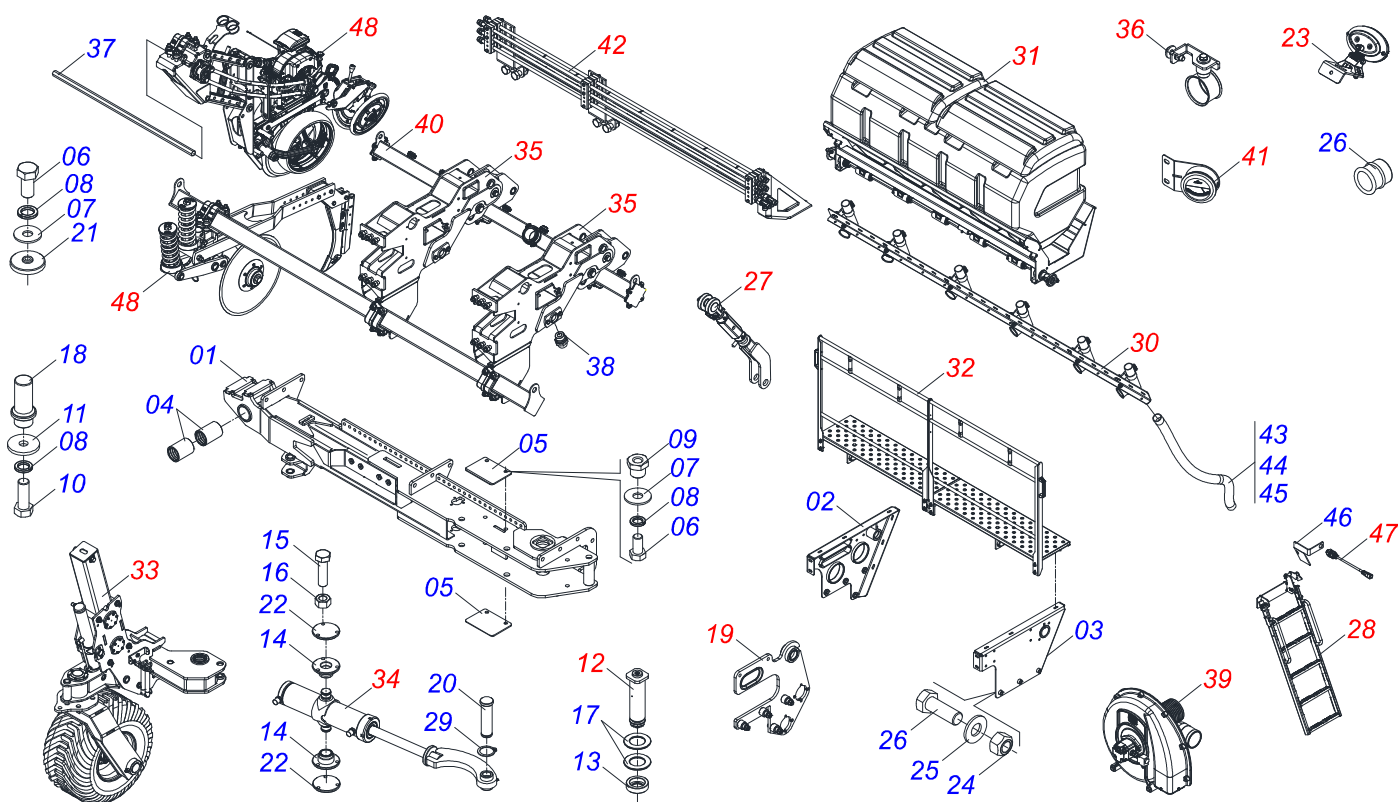

Item	Code	Description	See page	QT
01	0531064370	FRAME LEFT		01
02	0531062504	SIDE BIGGER RIGHT ASSY		01
03	0531062502	ASSY LEFT LOWER SIDE		01
04	0591019522	SLEEVE WEAR		02
05	0591018042	FRICTION PLATE		02
06	0503010962	5/8" X 1-1/4" BOLT		06
07	0501010453	FLAT WASHER		06
08	0503010027	5/8 SPRING WASHER		07
09	0591015962	SEPARATOR GLOVE		04
10	0503010232	5/8" X 1.3/4" BOLT		01
11	0511010721	FLAT WASHER		01
12	0521059948	ASSY LOCK AXLE	74	01
13	0591018044	WASHER 65 X 130 X 20		01
14	0501111058	ASSY FIXING GLOVE		02
15	0503011239	1/2" X 2" BOLT		06
16	0503011336	1/2" HEX SELF ADJUSTING NUT		06
17	0591018045	FRICTION TRACK		02
18	0591015374	HITCH AXIS		01
19	0531052852	LEFT SUPPORT TRANSMISSION 22/23	78	01
20	0501210615	SIDE WHEEL JOINT AXLE		01
21	0591018043	BODY SUPPORT		02
22	0591018541	SWIVEL CYLINDER COVER		02
23	0521059839	ASSY REAR HEADLIGHT	75	01
24	0503013389	5/8" SELF LOCKING NUT		07
25	0591011409	FLAT WASHER 16,5 X 35 X 3,00		07
26	0503010233	5/8" X 2-1/2" BOLT		07
27	0531050901	ASSY STABILIZER	77	02
28	0531052854	LEFT STAIRS SET	195	01
29	0503010391	501038 CLAMPING RING (FOR AXLE)		01
30	0531057167	SIDE SUPPORT	79	01
31	0531058135	LEFT SIDE SILO WITH 06 OPENINGS 175L ALPHA	196	01


LEFT SIDE FRAME ASSY

0909096771

Item	Code	Description	See page	QT
32	0531057158	HANDRAIL/PLATFORM ASSY	93	01
33	0541050563	LEFT WHEEL TIRE 500/50 DKO	198	01
34	0541050616	CYLINDER 101,55 X 618 X 353	105	01
35	0541050557	SIDE SUPPORT	103	02
36	0531057692	LEFT COMPLETE HOSE SUPPORT	199	01
37	0581018254	HEX AXLE 3/4 X 2700 STM 29 USG		01
38	0513011678	ADAPTER TERMINAL 3/4 UNF ORING X MF TB12L		08
39	0541050590	TURBINE SUCTION	107	01
40	0541050589	CONDUCTOR TUBE AIR 06 OUTLETS	106	01
41	0531053062	SUPPORT WITH VACUOMETER 18/25 LINES	108	01
42	0541050668	LEFT SIDE DUCT ASSEMBLY	201	01
43	1164920015	BLACK SUCTION HOSE		34
44	1164920014	BLACK LIGHT SUCTION HOSE		11
45	1163920004	BLACK LIGHT SUCTION HOSE		04
46	0501311685	SUPPORT LIFTING STAIRS RIGHT		01
47	0503018774	MAGNETIC SENSOR		01
48	0909096772	COMPLETE FERTILIZER ROW	110	11

COMPLETE HEADER

0541050880

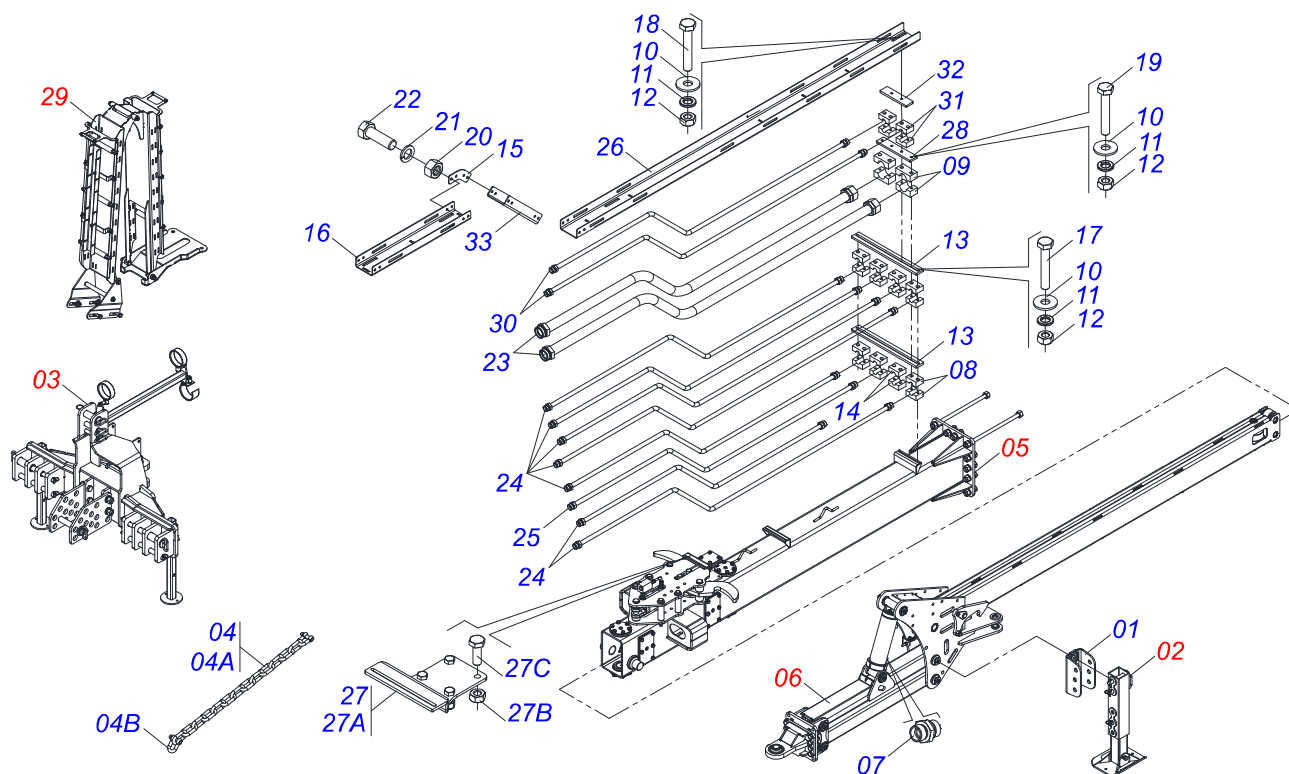

Item	Code	Description	See page	QT
01	0531060748	REST SUPPORT		01
02	0521059886	SEMI-ASSEMBLED REST	10	01
03	0531057052	DRAWBAR ASSY	11	01
04	0521058345	SAFETY CHAIN WITH SHACKLE		02
04A	0503014120	CHAIN		01
04B	0503014321	CABLE STEEL SHACKLE		02
05	0541050567	REAR HEADER	7	01
06	0541050566	LARGER SEMI-ASSEMBLED FRONT HEAD	13	01
07	0513011678	ADAPTER TERMINAL 3/4 UNF ORING X MF TB12L		04
08	0513010752	SINGLE STANDARD CLAMP 12 MM - BLACK		42
09	0513010755	STANDARD SIMPLE CLAMP		12
10	0503010305	FLAT WASHER		30
11	0503015110	M06 SPRING WASHER		18
12	0503014540	M6 NUT		18
13	0501312225	CLAMP 179 X 30 X 6.30		06
14	0513010746	STANDARD CLAMP SINGLE 10MM - BLACK		06
15	0501312881	SIDE FIXER		04
16	0501313435	GUTTER 70 X 33 X 407		01
17	0513011665	BOLT M6 X 1,00 X 90 - SXR6X90ZI		06
18	0513011851	BOLT M6 X 1,00 X 175		06
19	0513011670	BOLT M6 X 1,00 X 130		06
20	0503010144	1/4" NUT		16
21	0503010143	1/4" SPRING WASHER		16
22	0503013758	1/4" X 1-1/2" BOLT		16
23	0503036401	HYDRAULIC TUBE 386 PT28 X 1685 FG28 X 2307		02
24	0503036400	HYDRAULIC TUBE 402 PT12L X 1501 PT12L X 2077		07
25	0503036402	HYDRAULIC TUBE 404 PT10L X 1503 PT10L X 2077		01
26	0501313023	GUTTER 100 X 33 X 1309		01
27	0541051016	SUPPORT ASSEMBLED DUCTS		01
27A	0501313441	DUCT SUPPORT		01
27B	0503010589	1/2" UNC SELF ADJUSTING NUT		04


COMPLETE HEADER

0541050880

Item	Code	Description	See page	QT
27C	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04
28	0501311289	FIXER 2TB28		03
29	0541050757	ARTICULATED MAT SET	17	01
30	0503036408	HYDRAULIC TUBE 399 PT15 X 1496 PT15 X 2077		02
31	0513010753	SINGLE STANDARD CLAMP		12
32	0501313473	CLAMP 109 X 30 X 6,30		03
33	0501313434	GUTTER 70 X 33 X 195		01

COMPLETE HEADER

0541050764

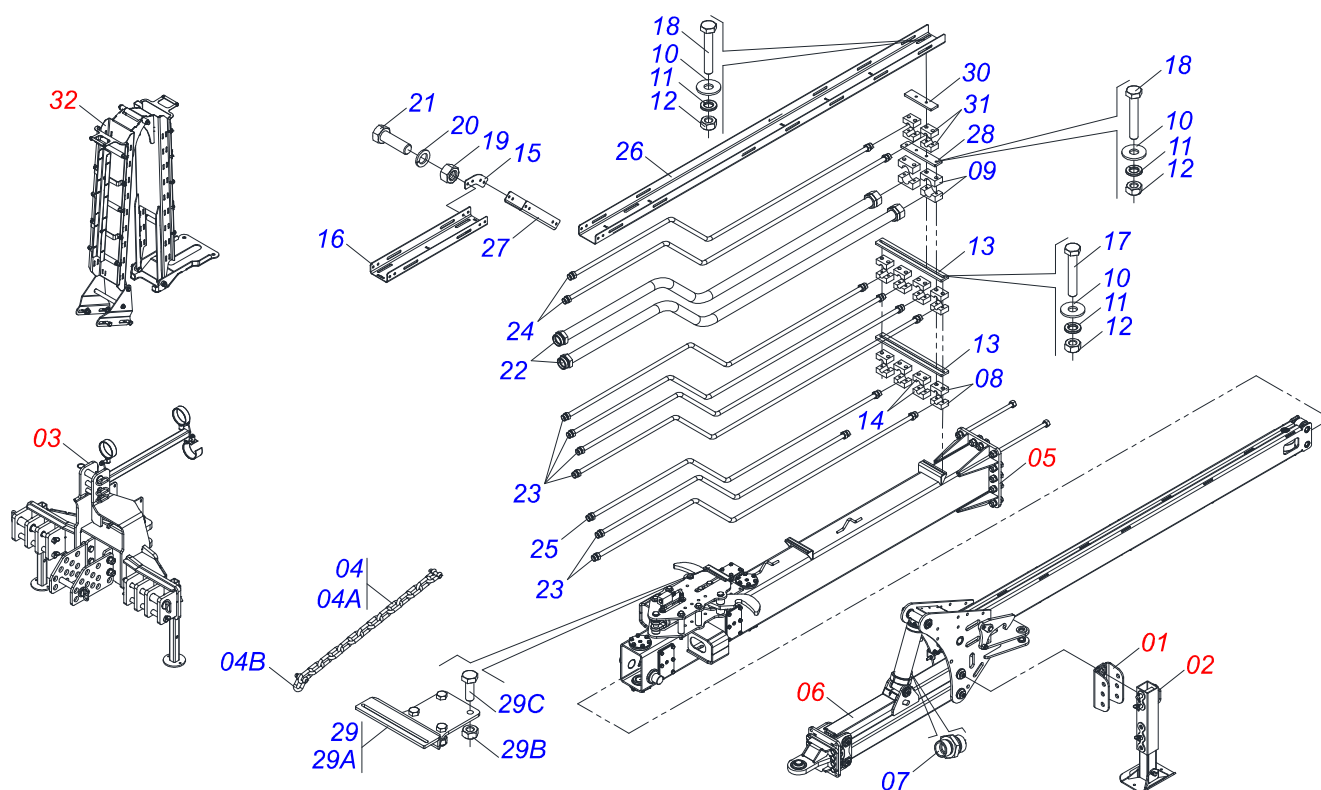

Item	Code	Description	See page	QT
01	0531060748	REST SUPPORT		01
02	0521059886	SEMI-ASSEMBLED REST	10	01
03	0531057052	DRAWBAR ASSY	11	01
04	0521058345	SAFETY CHAIN WITH SHACKLE		02
04A	0503014120	CHAIN		01
04B	0503014321	CABLE STEEL SHACKLE		02
05	0541050567	REAR HEADER	7	01
06	0541050566	LARGER SEMI-ASSEMBLED FRONT HEAD	13	01
07	0513011678	ADAPTER TERMINAL 3/4 UNF ORING X MF TB12L		04
08	0513010752	SINGLE STANDARD CLAMP 12 MM - BLACK		42
09	0513010755	STANDARD SIMPLE CLAMP		12
10	0503010305	FLAT WASHER		24
11	0503015110	M06 SPRING WASHER		12
12	0503014540	M6 NUT		12
13	0501312225	CLAMP 179 X 30 X 6.30		06
14	0513010746	STANDARD CLAMP SINGLE 10MM - BLACK		06
15	0501312881	SIDE FIXER		04
16	0501313435	GUTTER 70 X 33 X 407		01
17	0513011665	BOLT M6 X 1,00 X 90 - SXR6X90ZI		06
18	0513011851	BOLT M6 X 1,00 X 175		06
19	0503010144	1/4" NUT		16
20	0503010143	1/4" SPRING WASHER		16
21	0503013758	1/4" X 1-1/2" BOLT		16
22	0503036401	HYDRAULIC TUBE 386 PT28 X 1685 FG28 X 2307		02
23	0503036400	HYDRAULIC TUBE 402 PT12L X 1501 PT12L X 2077		06
24	0503036403	HYDRAULIC TUBE 428 PT22 X 1466 PT22 X 2090		02
25	0503036402	HYDRAULIC TUBE 404 PT10L X 1503 PT10L X 2077		01
26	0501313023	GUTTER 100 X 33 X 1309		01
27	0501313434	GUTTER 70 X 33 X 195		01
28	0501311289	FIXER 2TB28		03
29	0541051016	SUPPORT ASSEMBLED DUCTS		01




COMPLETE HEADER

0541050764

Item	Code	Description	See page	QT
29A	0501313441	DUCT SUPPORT		01
29B	0503010589	1/2" UNC SELF ADJUSTING NUT		04
29C	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04
30	0501313432	CLAMP 124 X 30 X 6,30		03
31	0513010754	SINGLE STANDARD CLAMP 22 MM - BLACK		12
32	0541050757	ARTICULATED MAT SET	17	01

REAR HEADER


0541050567

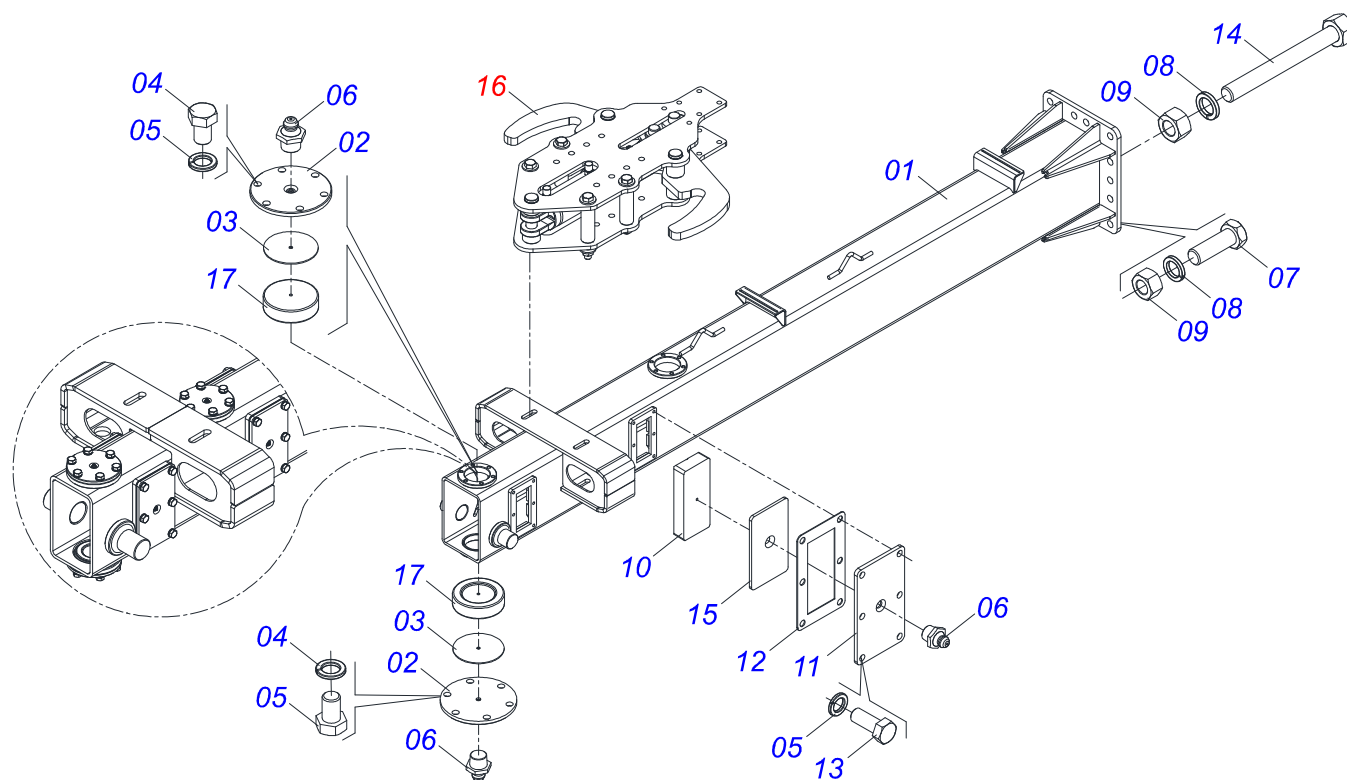


Item	Code	Description	See page	QT
01	0531066441	BODY REAR HEADLINE		01
02	0591015434	NYLON ADJUSTABLE BACK HEAD		04
03	0591015533	ADJUSTMENT SUPPORT		08
04	0503014007	1/2" X 1-1/4" BOLT		24
05	0503010019	1/2" SPRING WASHER		48
06	0503010002	1800 GREASE FITTING		08
07	0501010276	BOLT		12
08	0503010012	1" SPRING WASHER		14
09	0503012182	1" NUT		14
10	0591015435	NYLON ADJUSTMENT REGULATOR GUIDE		04
11	0591015432	HEAD ADJUSTMENT SUPPORT PLATE		04
12	0591015431	HEADER ADJUSTMENT SUPPORT		04
13	0503011401	1/2" X 3/4" BOLT		24
14	0531062795	PULL ROD 1 UNC 8 FPP X 510		02
15	0501310841	HEADER NYLON CALCO		08
16	0531059893	SIDE ARM LATCH ASSEMBLY	8	01
17	0501312901	LARGER CALCO HEADER		04

SIDE ARM LATCH ASSEMBLY


0531059893

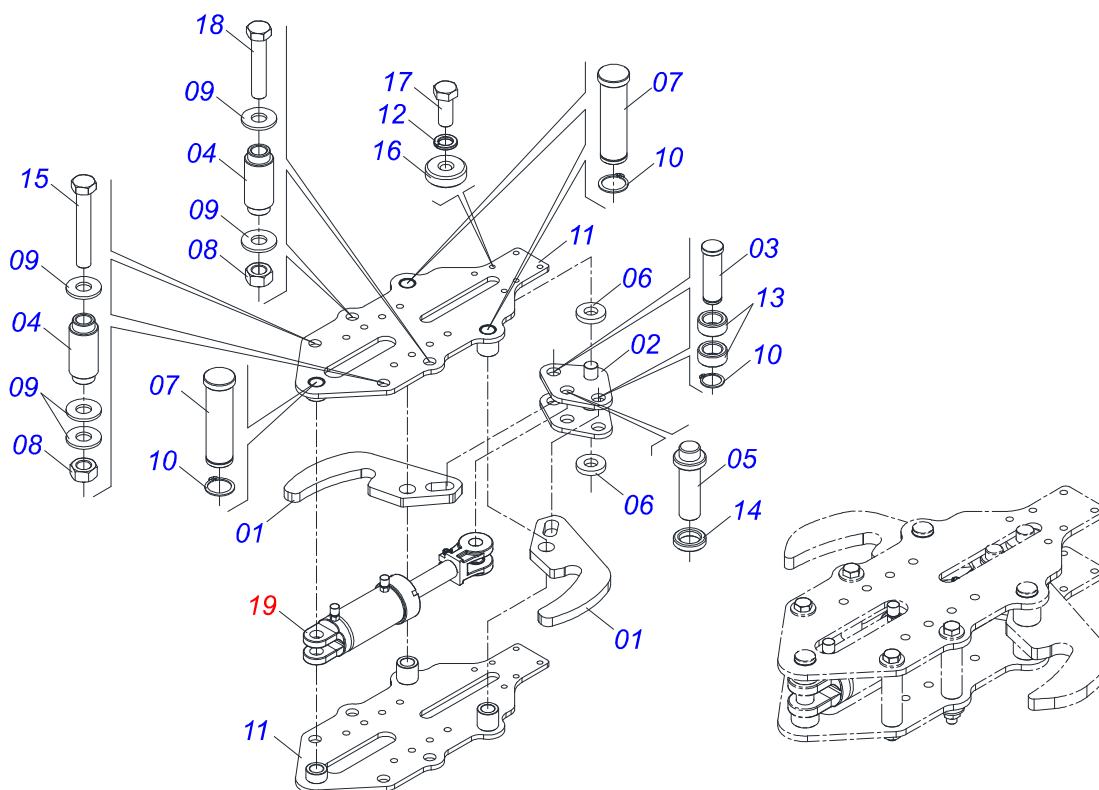

Item	Code	Description	See page	QT
01	0591015326	LATERAL FRAME LOCK		02
02	0531061411	STABILIZER ASSY LOCK ARM		01
03	0591015327	AXLE JUNCTION		02
04	0591015328	SPACING GLOVE		04
05	0591015329	CYLINDER GUIDE AXLE		01
06	0591015330	WASHER SUPPORT		02
07	0591015332	AXLE JUNCTION LOCK		03
08	0503019522	HEX NUT		04
09	0501010322	FLAT WASHER		10
10	0503010880	501032 CLAMPING RING (FOR AXLE)		05
11	0531061445	TOP PLATE WITH GLOVE		02
12	0503010019	1/2" SPRING WASHER		02
13	0591015341	GLOVE SUPPORT		04
14	0591015340	WASHER SUPPORT GUIDE AXIS		01
15	0511016281	3/4" X 8" BOLT		02
16	0501210625	SUPPORT GLOVE		02
17	0503013776	BOLT 1/2 UNC X 7/8 C S G.5 ZN		02
18	0501013475	3/4 UNC X 7.1/2 C S G.5 ZN BOLT		02
19	0531059877	CYLINDER HYDRAULIC 44,45 X 85,70 X 398 X 93	9	01

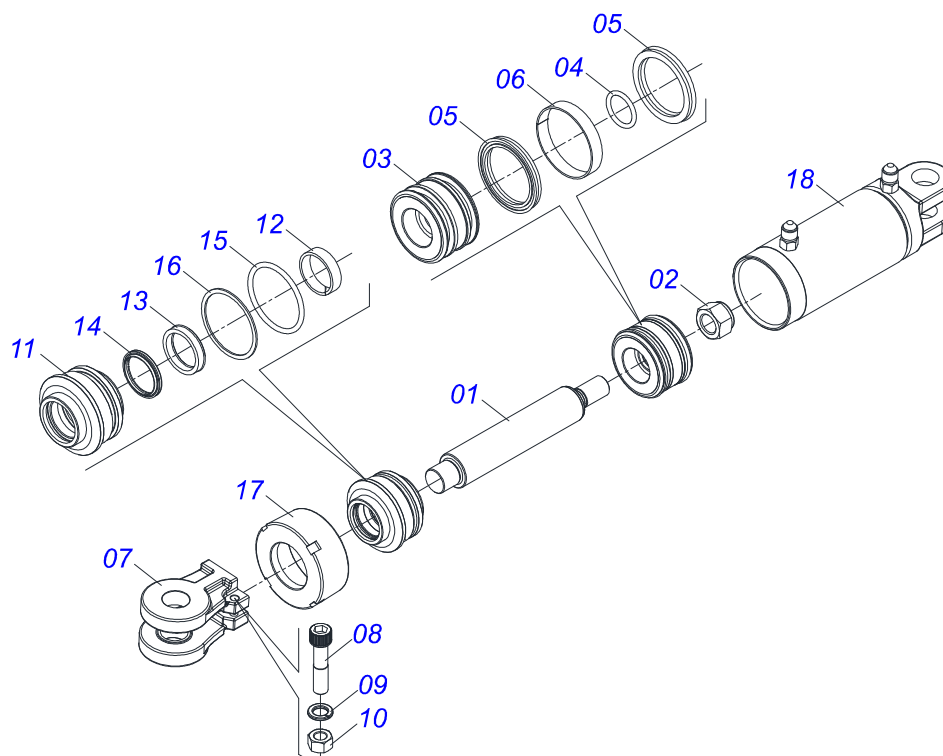


Item	Code	Description	See page	QT
01	0591015343	EXTENSOR 44,45 X 280MM		01
02	0503010063	1" SELF-ALIGNING NUT		01
03	0502010843	1.8" X 3.4" PISTON		01
04	0503010042	2-214 N 3006-9B O'RING		01
05	0503010170	PACKING 3120 2750		02
06	0503010948	W4-3346-590 PK RING G.E		01
07	0502040747	32.54 CLEVIS CLAMP		01
08	0503011094	3/8" X 2" BOLT		01
09	0503010025	3/8 SPRING WASHER		01
10	0503010026	3/8" NUT		01
11	0502010781	RING SUPPORT		01
12	0503010949	W2-2000-500 PK RING G.E		01
13	0503010990	GASKET		01
14	0503010761	D-1750 SCRAPER RING		01
15	0503010976	2-336 N 3006-9B O'RING		01
16	0503011060	8-336 BACK-UP RING		01
17	0502010993	DETACHABLE COVER		01
18	0531066085	CILINDER CASE 85,70 X 272		01

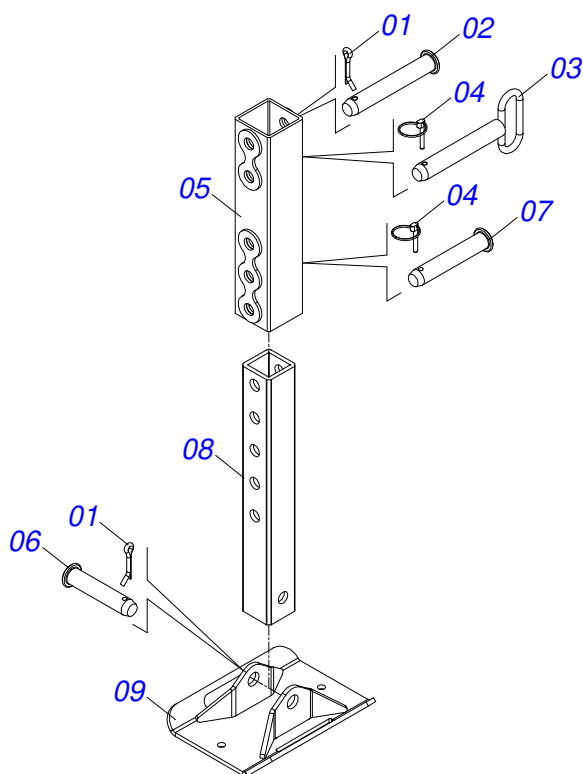

Item	Code	Description	See page	QT
01	0503010571	1/4" X 1.1/2 COTTERPIN		02
02	0521010784	COUPLING SHAFT		01
03	0531060758	AXLE JUNCTION 25.4 X 150 WITH HANDLE		01
04	0503030085	LOCK PIN		02
05	0531060667	REST		01
06	0521010580	COUPLING SHAFT		01
07	0521012533	COUPLING SHAFT		01
08	0591016111	TUBE 80 X 80 X 9,52 X 600MM		01
09	0531061640	REST		01

DRAWBAR ASSY


0531057052

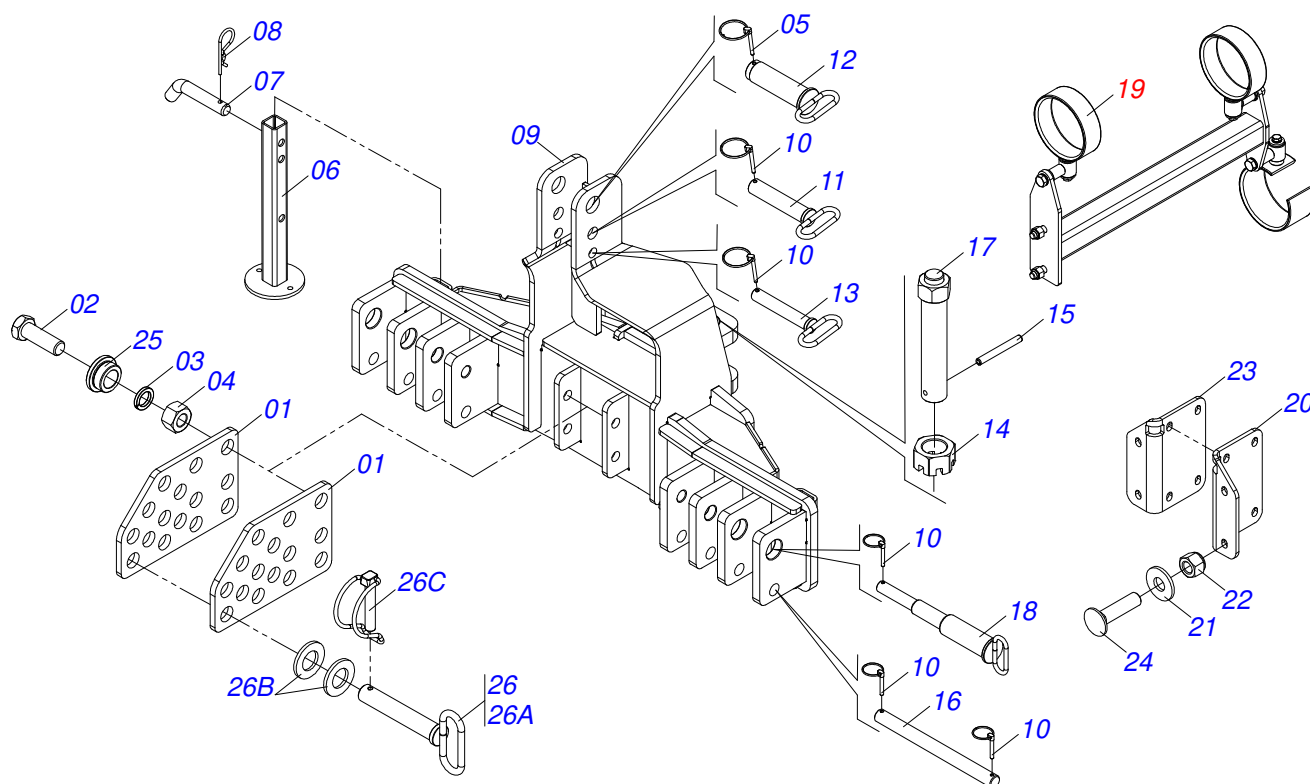


Item	Code	Description	See page	QT
01	0501217466	TRACTION BAR GUIDE		02
02	0501010276	BOLT		04
03	0503010012	1" SPRING WASHER		04
04	0501010059	1.5/8 NUT		04
05	0503030119	LOCK PIN		01
06	0511069471	PLOUGH SUPPORT		02
07	0501011075	PIN		02
08	0503030285	HITCH PIN CLIP		02
09	0531065020	3 POINTS DRAWBAR ASSY		01
10	0503030085	LOCK PIN		08
11	0521068018	UPPER AXLE		01
12	0521068015	UPPER AXLE		01
13	0521068013	UPPER AXLE		01
14	0503012809	2" CASTLE NUT		01
15	0503010833	10 X 90 SPRING PIN		01
16	0501213695	EJE 1.1/4 X 380 MM		02
17	0531063869	AXLE 50 X 245 MM WITH THREAD 2 UNS 10 FPP		01
18	0521068011	AXLE LOWER		02
19	0531057067	DRAWBAR ESTABILIZER ASSY	12	01
20	0501217367	LEFT SUPPORT BOX		01
21	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		04
22	0503010589	1/2" UNC SELF ADJUSTING NUT		04
23	0501217366	RIGHT BOX SUPPORT		01
24	0503019293	SCREW 1/2 UNC X 2 COVER G7 ZN		04
25	0501217467	3 POINT HEAD FIXING GUIDE GLOVE		04
26	0531057145	COMPLETE SAFETY LOCK AXIS		01
26A	0531064617	LOCK AXLE COUPLING		01
26B	0501217474	FLAT WASHER 38.50 X 70 X 6.30		02
26C	0513010701	LOCK PIN		01

DRAWBAR ESTABILIZER ASSY

0531057067

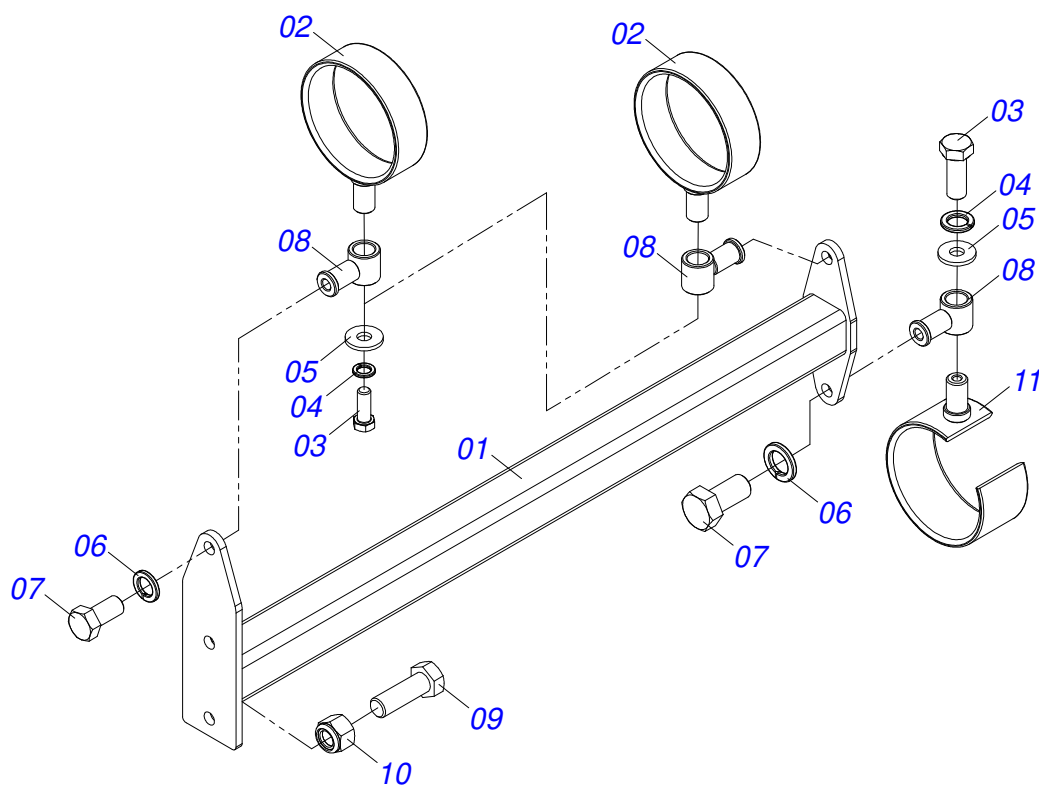

Item	Code	Description	See page	QT
01	0531065026	HEAD HOSE STABILIZER		01
02	0531061935	CONDUCTOR ARTICULATOR		02
03	0503010237	3/8" X 1" BOLT		03
04	0503010025	3/8 SPRING WASHER		03
05	0501010984	10,50 X 27 X 3,00 FLAT WASHER		03
06	0503010019	1/2" SPRING WASHER		03
07	0503012556	1/2" X 1" BOLT		03
08	0531061934	CONDUCTOR ARTICULATOR GUIDE		03
09	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		02
10	0503010589	1/2" UNC SELF ADJUSTING NUT		02
11	0531065130	HYDRAULIC HOSE ARTICULATOR		01

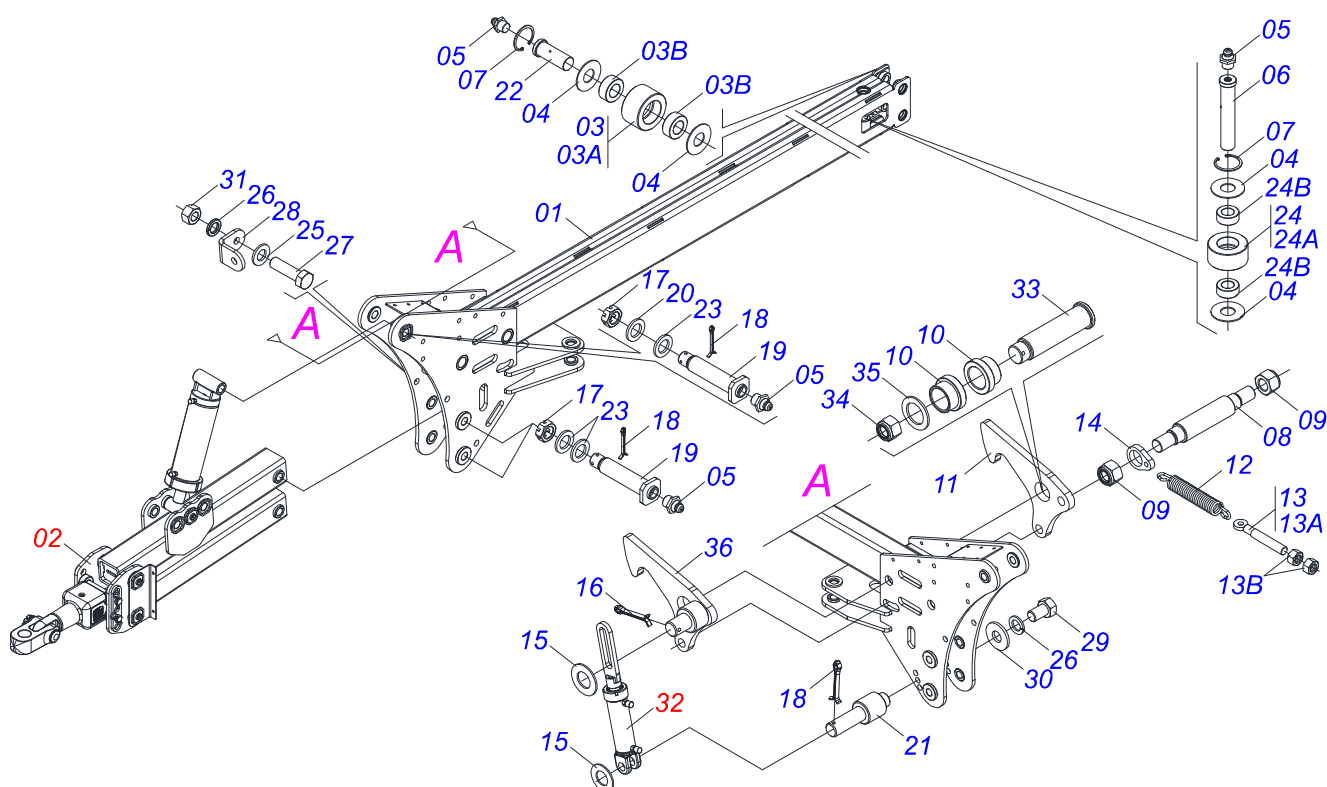


Item	Code	Description	See page	QT
01	0531062697	TELESCOPIC HEADER 18/19		01
02	0531059899	PANTOGRAPHIC HEADER	14	01
03	0531051649	HEADER LARGEST PULLEY		01
03A	0591018923	LARGER BODY HEADER PULLEY		01
03B	0551014862	NYLON PULLEY		02
04	0551014871	FLAT WASHER		06
05	0503010002	1800 GREASE FITTING		06
06	0591018925	AXLE BIGGER PULLEY		01
07	0503011105	SEAL RING		03
08	0591015449	AXLE LOCK HEADER		01
09	0503018754	1-8 UNC NUT		02
10	0591015450	LOCK BODY GLOVE		02
11	0591018926	BODY LOCK BIGGER		01
12	0503031741	1.8" X 11.4" 0.3" TRACTION SPRING		01
13	0511054270	TENSIONER SPRING		01
13A	0511069520	TELESC LOCK SPRING TENSIONER		01
13B	0503010013	5/8 NUT		02
14	0591015454	SPRING HITCH LOCK		01
15	0521011132	FLAT WASHER		02
16	0503010131	3/16" X 1-1/2" COTTERPIN		02
17	0503011052	1.1/4" X 0.77" CASTLE NUT		03
18	0503010038	3/16 X 2 COTTERPIN		03
19	0531060746	AXIS 278 TELESCOPIC HEADER		03
20	0591013764	FLAT WASHER 39 X 65 X 8,00 ZN		02
21	0591015457	CYLINDER GUIDE AXLE		01
22	0591018924	WHEEL BIGGEST SHAFT HEADER SIDE		02
23	0591018921	WASHER 63.5 X 39 X 6.30		03
24	0531051648	INTERNAL HEAD PULLEY		02
24A	0591018922	INTERNAL PULLEY BODY HEAD		01
24B	0551014862	NYLON PULLEY		02
25	0501012140	FLAT WASHER		01


Item	Code	Description	See page	QT
26	0503010027	5/8 SPRING WASHER		02
27	0503010962	5/8" X 1-1/4" BOLT		01
28	0501210174	SPRING SUPPORT		01
29	0503010233	5/8" X 2-1/2" BOLT		01
30	0501011299	FLAT WASHER		01
31	0503010013	5/8 NUT		01
32	0531059876	CYLINDER HYDRAULIC	16	01
33	0531064951	SIDE LOCK AXIS 381		01
34	0503010290	SELF ADJUSTING 1.1/2" UNF NUT		01
35	0551012215	FLAT WASHER		01
36	0531066463	BODY LOCKS WITH PIN		01

PANTOGRAPHIC HEADER


0531059899

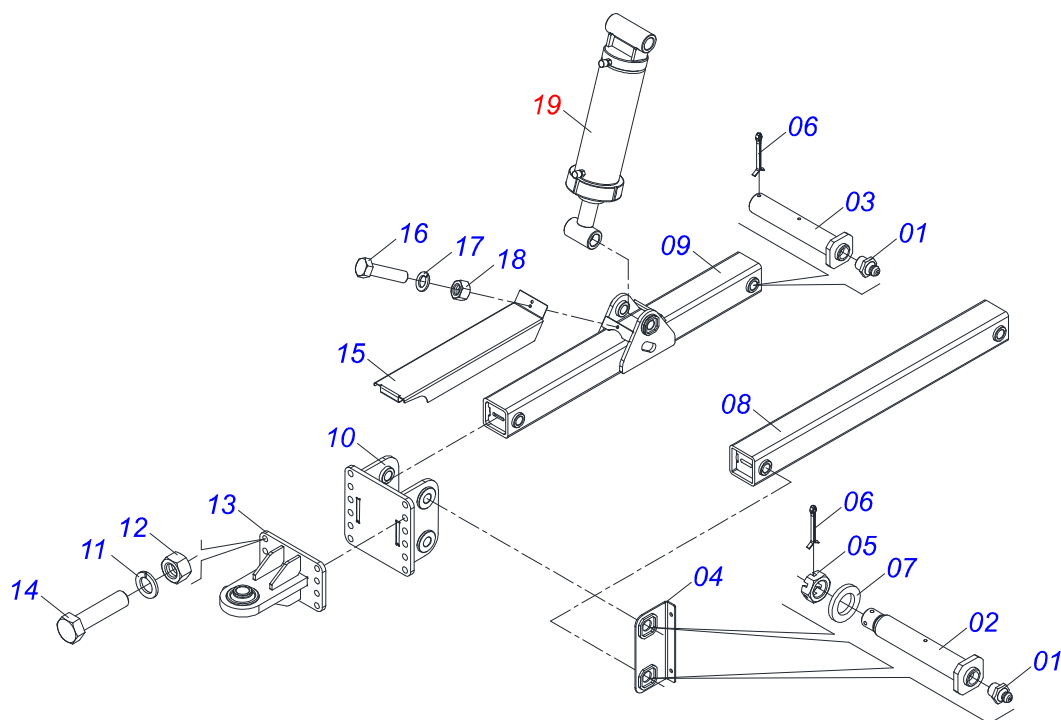


Item	Code	Description	See page	QT
01	0503010002	1800 GREASE FITTING		03
02	0531060746	AXIS 278 TELESCOPIC HEADER		02
03	0531060792	AXIS 200 TELESCOPIC HEADER		01
04	0531065027	AXLE FIXER		01
05	0503011052	1.1/4" X 0.77" CASTLE NUT		02
06	0503010038	3/16 X 2 COTTERPIN		03
07	0591013764	FLAT WASHER 39 X 65 X 8,00 ZN		02
08	0531063225	LOWER ARM PANTOGRAPHIC HEAD		01
09	0531063226	UPPER ARM PANTOGRAPHIC HEAD		01
10	0531063829	SUPPORT WITH EAR PANTOGRAPHIC HEAD		01
11	0503010012	1" SPRING WASHER		08
12	0503012182	1" NUT		08
13	0531063828	HEAD HITCH		01
14	0501010171	BOLT 1 UNC X 3.1/2 C S G.5		08
15	0501219817	PROTECTION BODY PANTOGRAPHIC HEADER		01
16	0503010363	BOLT 5/16 UNC X 1 C S G.2 ZN		01
17	0503010179	LOCK WASHER 5/16 ZN 1K01528		01
18	0503010337	5/16" NUT		01
19	0531059875	CYLINDER HYDRAULIC	15	01

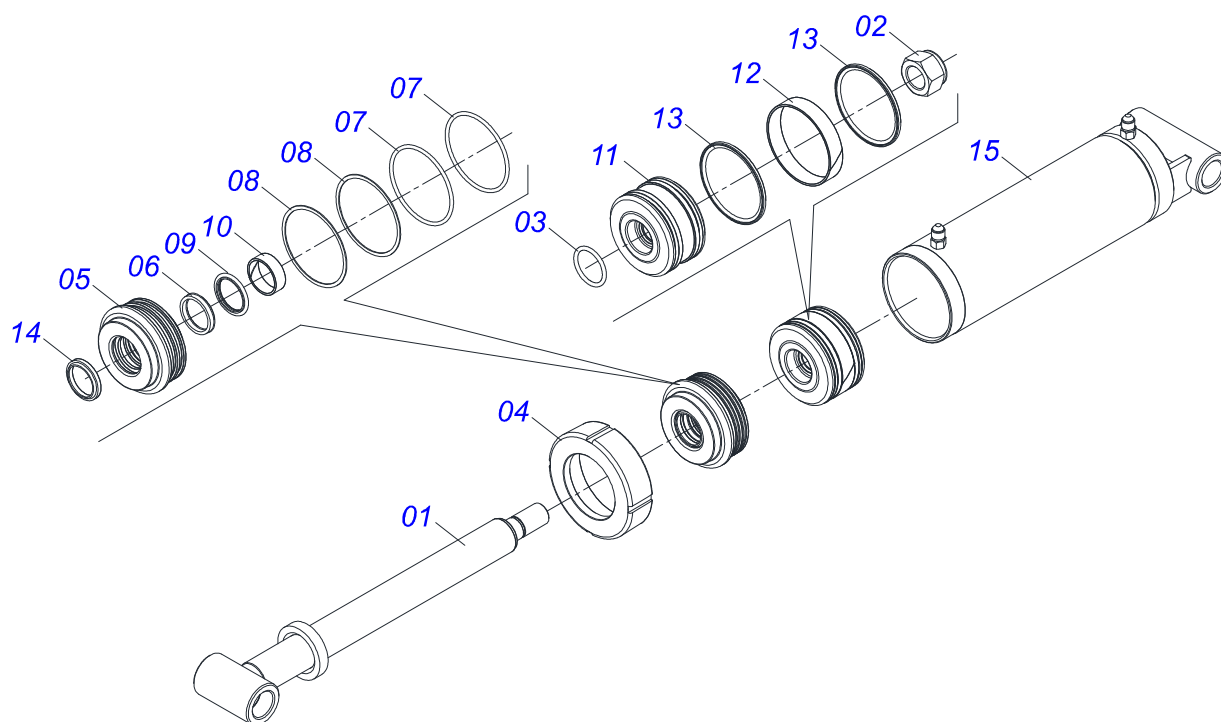

Item	Code	Description	See page	QT
01	0531061424	PANTOGRAPHIC HEAD CYLINDER ROD		01
02	0503010817	1.1/4" SELF LOCKING NUT		01
03	0503010345	2-218 N 3006-9B O'RING		01
04	0502010382	5" END CAP		01
05	0581010353	RING SUPPORT		01
06	0503018026	1870-2000-375 B GASKET		01
07	0503011453	O'RING		02
08	0503018152	O'RING		02
09	0503018024	RING BS		01
10	0503018025	RING GUIDE		01
11	0581010354	PISTON		01
12	0503018150	RING GUIDE		01
13	0503018151	RING BS		02
14	0503010039	D-2000 SCRAPER RING		01
15	0531066083	PANTOGRAPHIC HEADER CYLINDER CASE		01

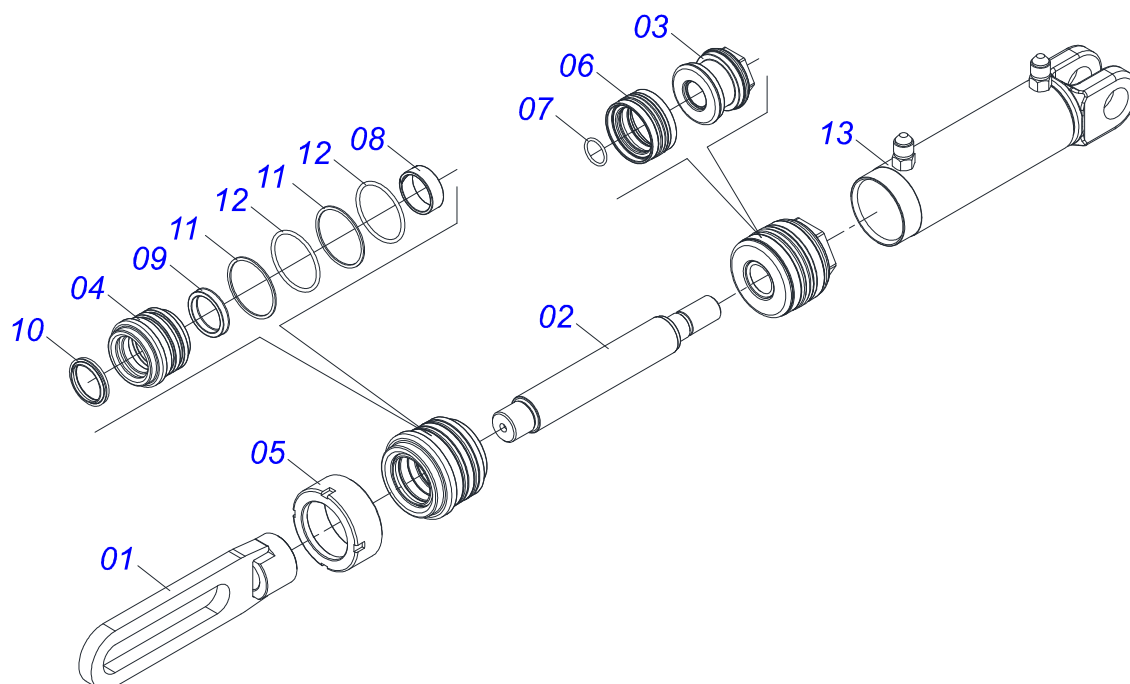

Item	Code	Description	See page	QT
01	0531065723	MINOR CYLINDER GUIDE		01
02	0591013120	BODY STEM 38.10 X 280		01
03	0502012837	PISTON		01
04	0581010668	RING SUPPORT		01
05	0502010471	63,50 MOBILE CAP		01
06	0503018005	RING		01
07	0503011109	2-119 N 3006-9B O'RING		01
08	0503018004	RING		01
09	0503018003	GASKET		01
10	0503010163	D-1500 SCRAPER RING		01
11	0503018163	BACK-UP RING		02
12	0503018162	O'RING		02
13	0531066084	CASE 63,50 X 285MM		01

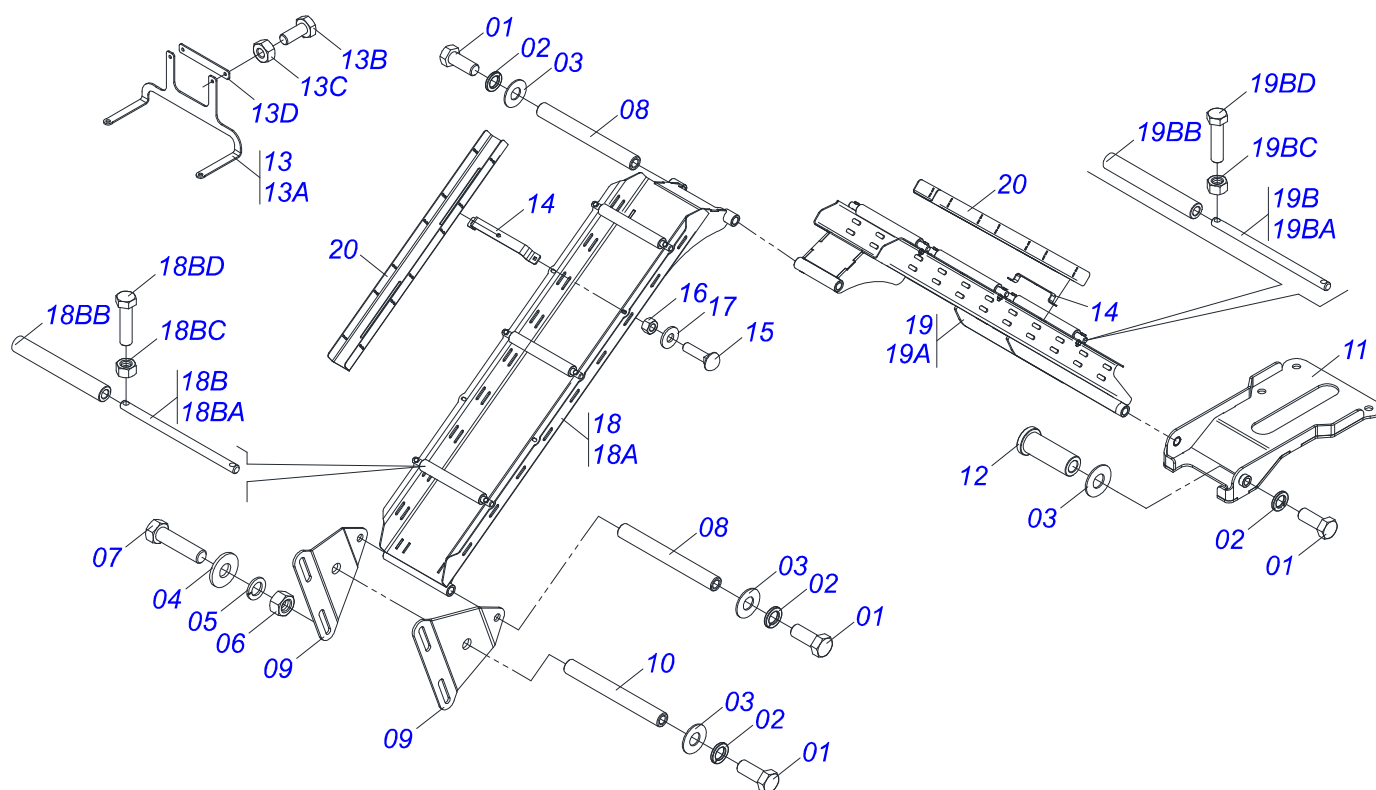


Item	Code	Description	See page	QT
01	0503014007	1/2" X 1-1/4" BOLT	08	
02	0503010019	1/2" SPRING WASHER	08	
03	0501013519	FLAT WASHER	08	
04	0501012140	FLAT WASHER	04	
05	0503010027	5/8 SPRING WASHER	04	
06	0503010013	5/8 NUT	04	
07	0501010100	SCREW 5/8 UNC X 2 CS G.5 ZN	04	
08	0501217333	ARTICULATOR AXLE 233	02	
09	0501312861	FRONT SUPPORT MAT	02	
10	0501312865	AXIS LOCK SUPPORT GUTTER	01	
11	0531066424	GUTTER SUPPORT BASE	01	
12	0501312866	ARTICULATOR AXLE 25.40 X 56.50	02	
13	0531059935	CABLE GUIDE HEADER	02	
13A	0501311320	CABLE GUIDE HEADER	01	
13B	0503010519	1/4" X 5/8" BOLT	02	
13C	0503010144	1/4" NUT	02	
13D	0501311321	LOCK GUIDE CABLES	01	
14	0501310233	GUTTER FIXING PLATE	04	
15	0503011952	5/16" X 3/4" BOLT	12	
16	0503013759	NUT	12	
17	0501010694	FLAT WASHER	12	
18	0541050758	FRONT GUTTER 1203	01	
18A	0531066478	FRONT GUTTER 1203	01	
18B	0531059091	MAT ROLLER 215MM	03	
18BA	0501310150	AXIS FIXING HOSE GLOVE 280MM	01	
18BB	0501310149	GLOVE 16,30 X 30 X 215MM	01	
18BC	0503016739	SELF LOCKING HEX NUT WITH NYLON	02	
18BD	0503010743	1/4" X 1-1/4" BOLT	02	
19	0541050759	REAR GUTTER 1308 WITH ROLLER	01	
19A	0531066479	REAR GUTTER 1308	01	
19B	0531059091	MAT ROLLER 215MM	03	


ARTICULATED MAT SET

0541050757


Item	Code	Description	See page	QT
19BA	0501310150	AXIS FIXING HOSE GLOVE 280MM		01
19BB	0501310149	GLOVE 16,30 X 30 X 215MM		01
19BC	0503016739	SELF LOCKING HEX NUT WITH NYLON		02
19BD	0503010743	1/4" X 1-1/4" BOLT		02
20	0501219996	GUTTER 70 X 40 X 800		02

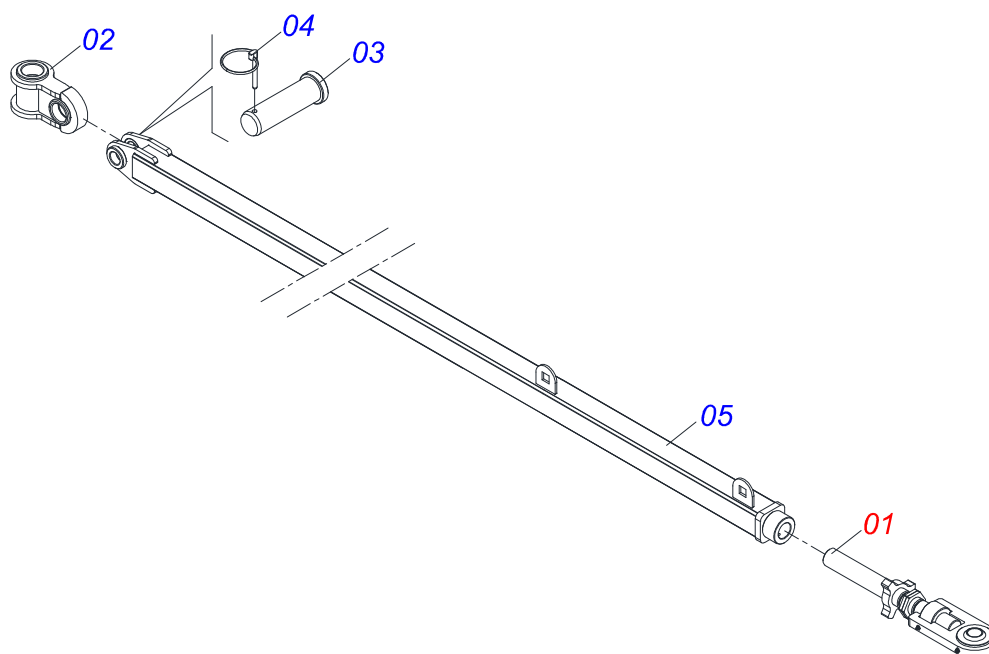


Item	Code	Description	See page	QT
01	0521057793	KNEECAP WITH RIGHT EXTENSION AXLE	19	01
02	0531061434	SIDE EXTENSOR EAR		01
03	0571019949	JUNCTION SHAFT		01
04	0503030119	LOCK PIN		01
05	0531065084	FRENCH HAND 18/19		01

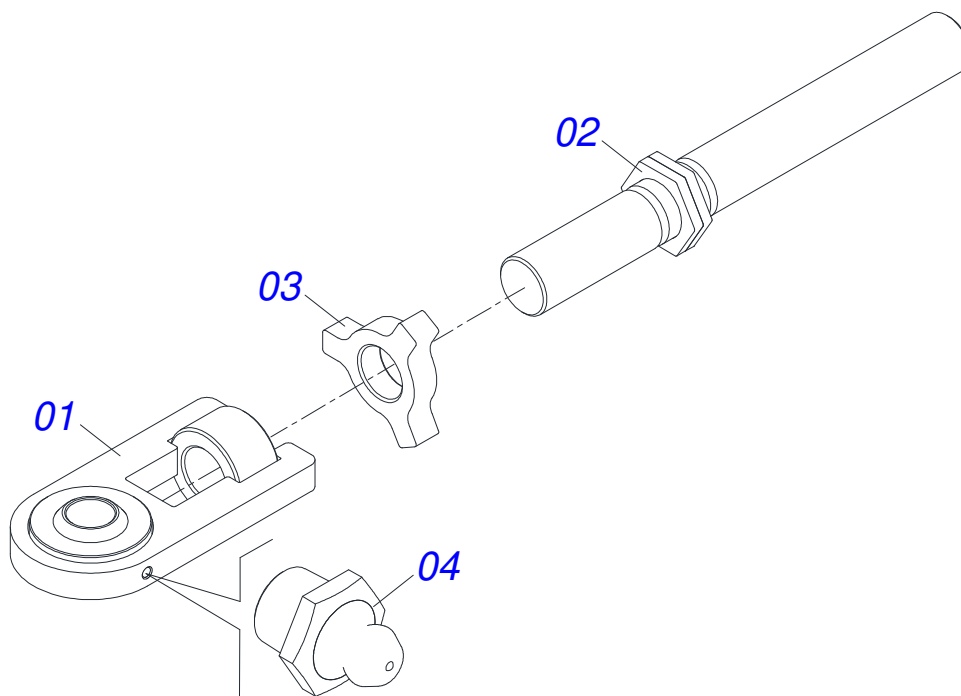


Item	Code	Description	See page	QT
01	0521062617	NUT FIXER		01
02	0531060778	EXTENSION AXLE 466 WITH DRAG		01
03	0561019879	LOCK ATTACHMENT BAR		01
04	0503010002	1800 GREASE FITTING		02

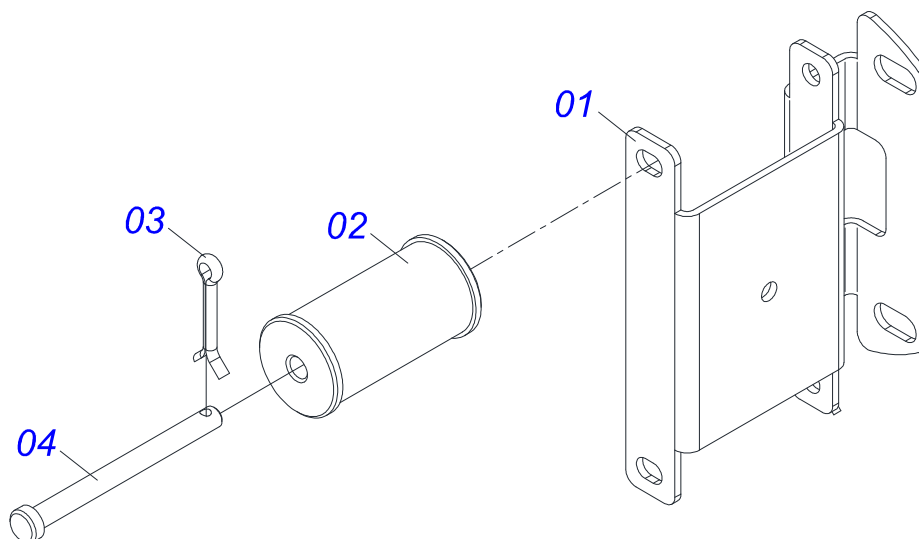


Item	Code	Description	See page	QT
01	0501311680	LEFT GUIDE TRIGGER		01
02	0501311682	NYLON GLOVE 70		02
03	0503010140	1/8" X 3/4" COTTERPIN		02
04	0501311681	FIXING PIN		02

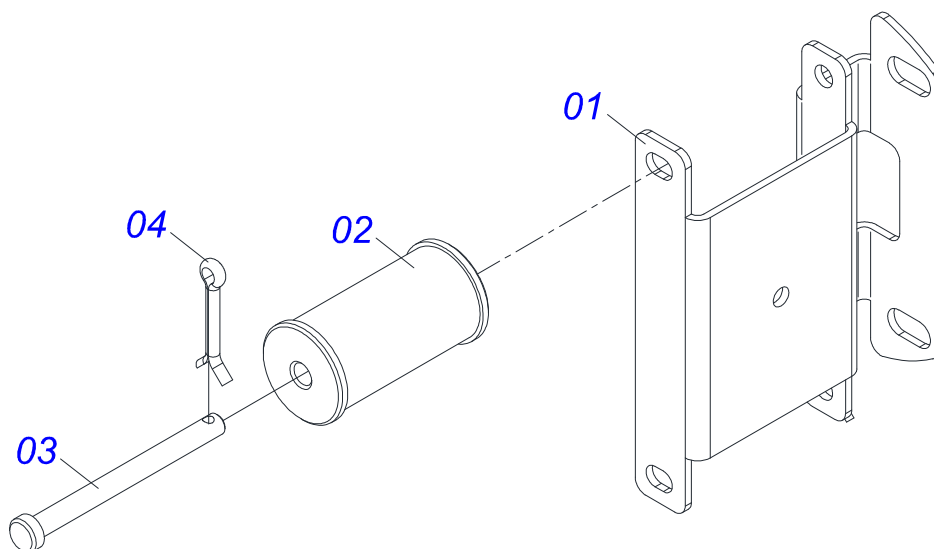

Item	Code	Description	See page	QT
01	0501311679	RIGHT TRIGGER GUIDE		01
02	0501311682	NYLON GLOVE 70		02
03	0501311681	FIXING PIN		02
04	0503010140	1/8" X 3/4" COTTERPIN		02

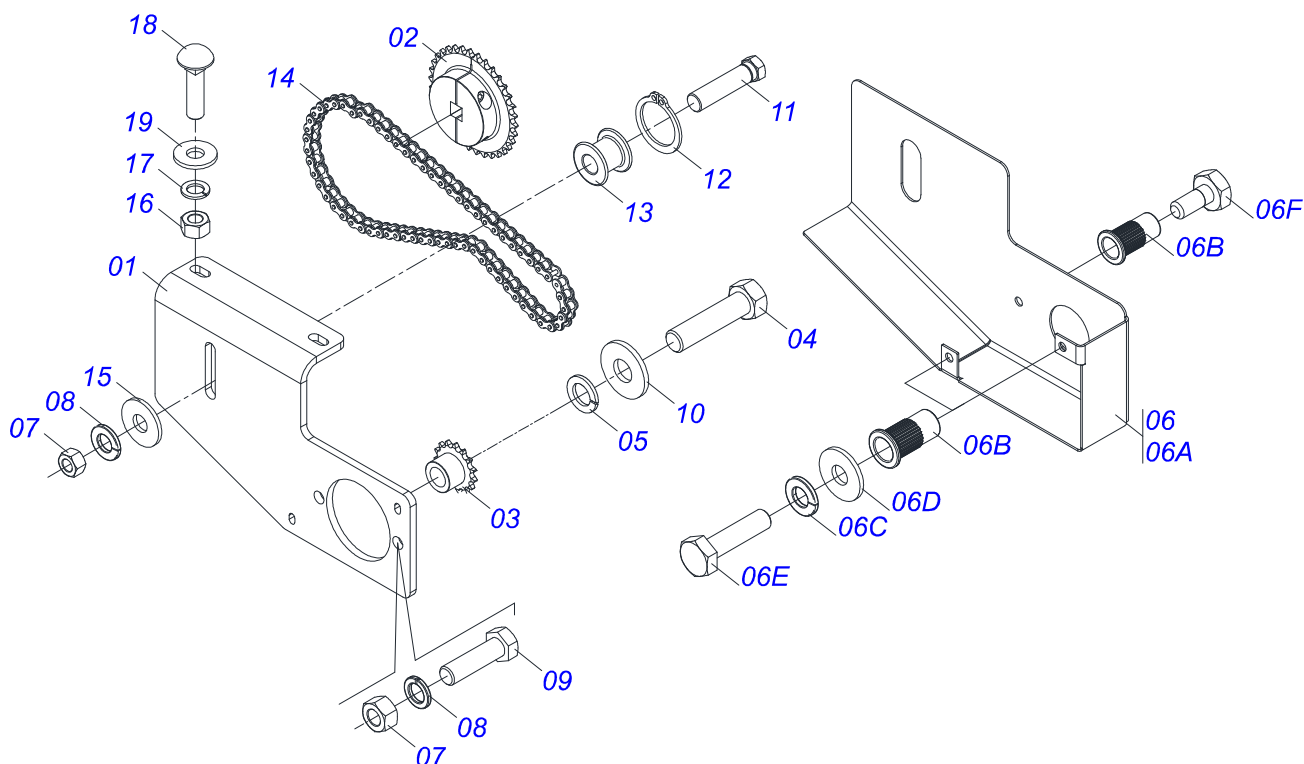


Item	Code	Description	See page	QT
01	0501310283	RIGHT FERTILIZER MOTOR SUPPORT	01	
02	0503062754	GEAR 34Z P.1/2 APT	01	
03	0521069832	15Z GEAR	01	
04	0503010282	1/4" X 3/4" BOLT	01	
05	0503010143	1/4" SPRING WASHER	01	
06	0531059149	FERTILIZER CURRENT PROTECTION RIGHT	01	
06A	0501310284	FERTILIZER CURRENT PROTECTION RIGHT	01	
06B	0503019412	RIVET SCREW INTERNAL	03	
06C	0503010143	1/4" SPRING WASHER	02	
06D	0503010305	FLAT WASHER	02	
06E	0503010461	1/4" X 1" BOLT	02	
06F	0501212320	ENCODER LOCK SCREW	01	
07	0503010060	1/2 UNC G.5 ZN HEX NUT	03	
08	0503010019	1/2" SPRING WASHER	03	
09	0503018701	SCREW 1/2 UNC X 1.3/4 CS G.5 ZN	02	
10	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN	01	
11	0561013049	CHAIN TIGHTENER AXLE	01	
12	0503010302	501019 SEAL RING	01	
13	0503030402	PULLEY	01	
14	0503015123	CHAIN 40-1 X 83	01	
15	0501013518	FLAT WASHER	02	
16	0503010026	3/8" NUT	02	
17	0503010025	3/8 SPRING WASHER	02	
18	0501011643	3/8 X 1"BOLT	02	
19	0561011665	FLAT WASHER	01	

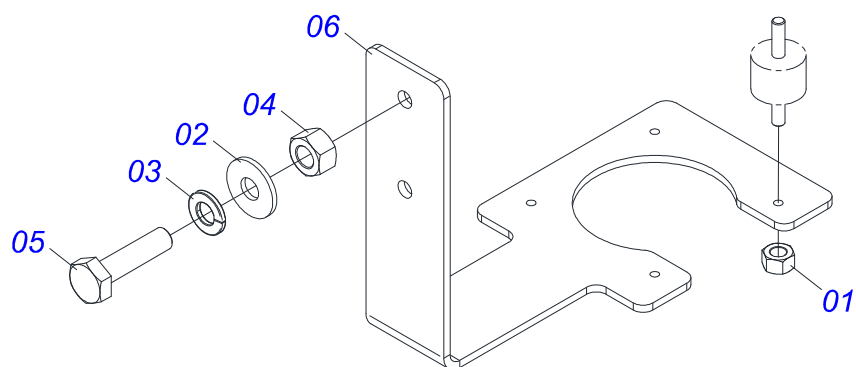


Item	Code	Description	See page	QT
01	0503011776	M6 SELF ADJUSTINGNUT		04
02	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
03	0503010019	1/2" SPRING WASHER		02
04	0503010060	1/2 UNC G.5 ZN HEX NUT		02
05	0503010547	1/2" X 4" BOLT		02
06	0501312934	SUPPORT		01

SENSOR LIFTING SUPPORT


0541050081

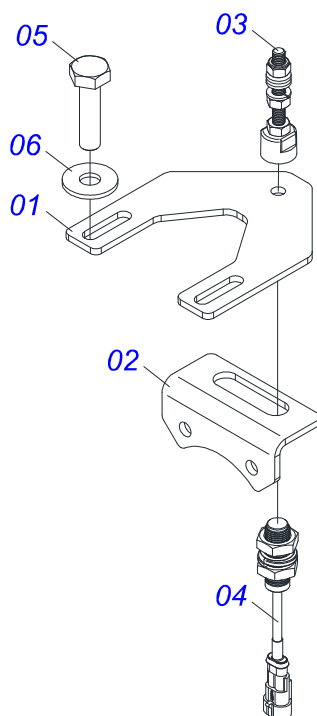


Item	Code	Description	See page	QT
01	0501311516	UPPER SHEET		01
02	0501311515	SENSOR LIFTING SUPPORT		01
03	0503018775	MAGNET ACTUATOR LH7.4.000091		01
04	0503018774	MAGNETIC SENSOR		01
05	0503015321	3/8 UNC X 5/8 C S G.2 ZN BOLT		02
06	0501013518	FLAT WASHER		02

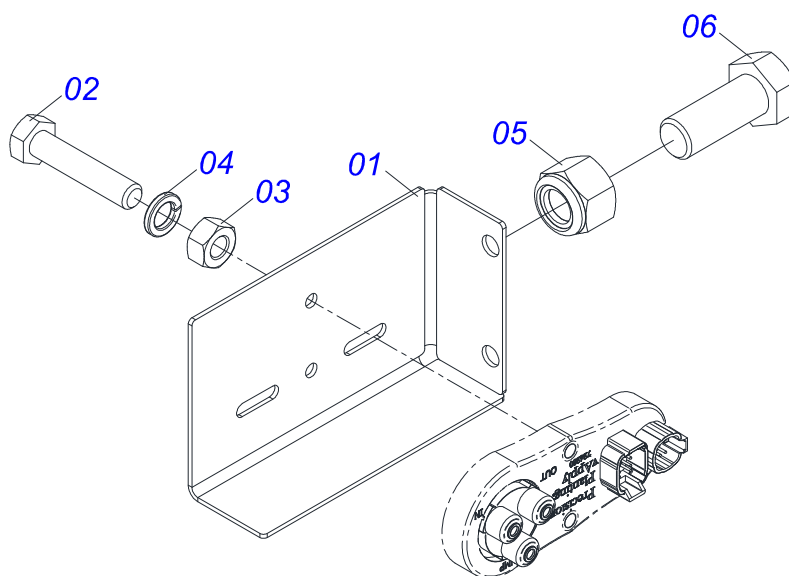


Item	Code	Description	See page	QT
01	0501311868	LEFT SIDE VAPPLY MODULE SUPPORT		01
02	0503010421	5/16" X 1-1/2" BOLT		02
03	0503010337	5/16" NUT		02
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
05	0503010589	1/2" UNC SELF ADJUSTING NUT		02
06	0503014007	1/2" X 1-1/4" BOLT		02

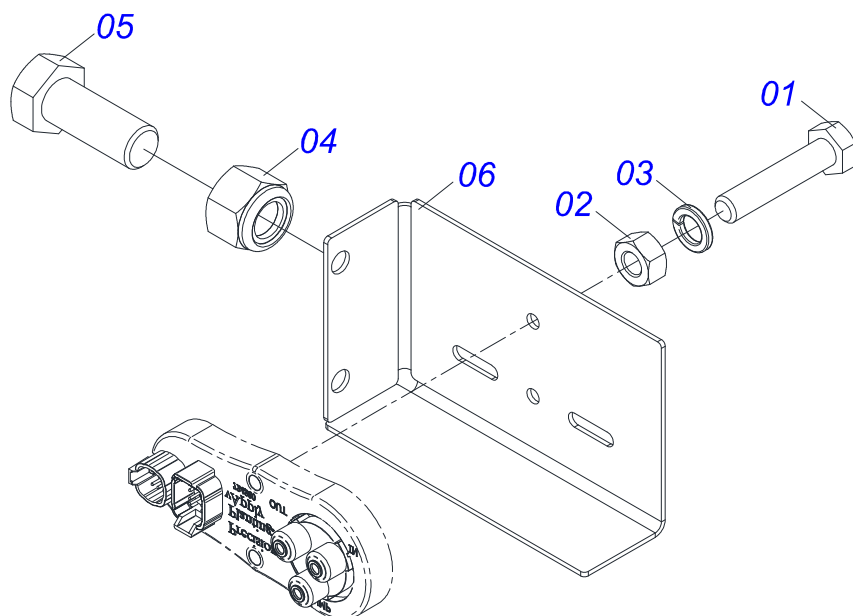


Item	Code	Description	See page	QT
01	0503010421	5/16" X 1-1/2" BOLT		02
02	0503010337	5/16" NUT		02
03	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
04	0503010589	1/2" UNC SELF ADJUSTING NUT		02
05	0503014007	1/2" X 1-1/4" BOLT		02
06	0501311866	RIGHT SIDE VAPPLY MODULE SUPPORT		01

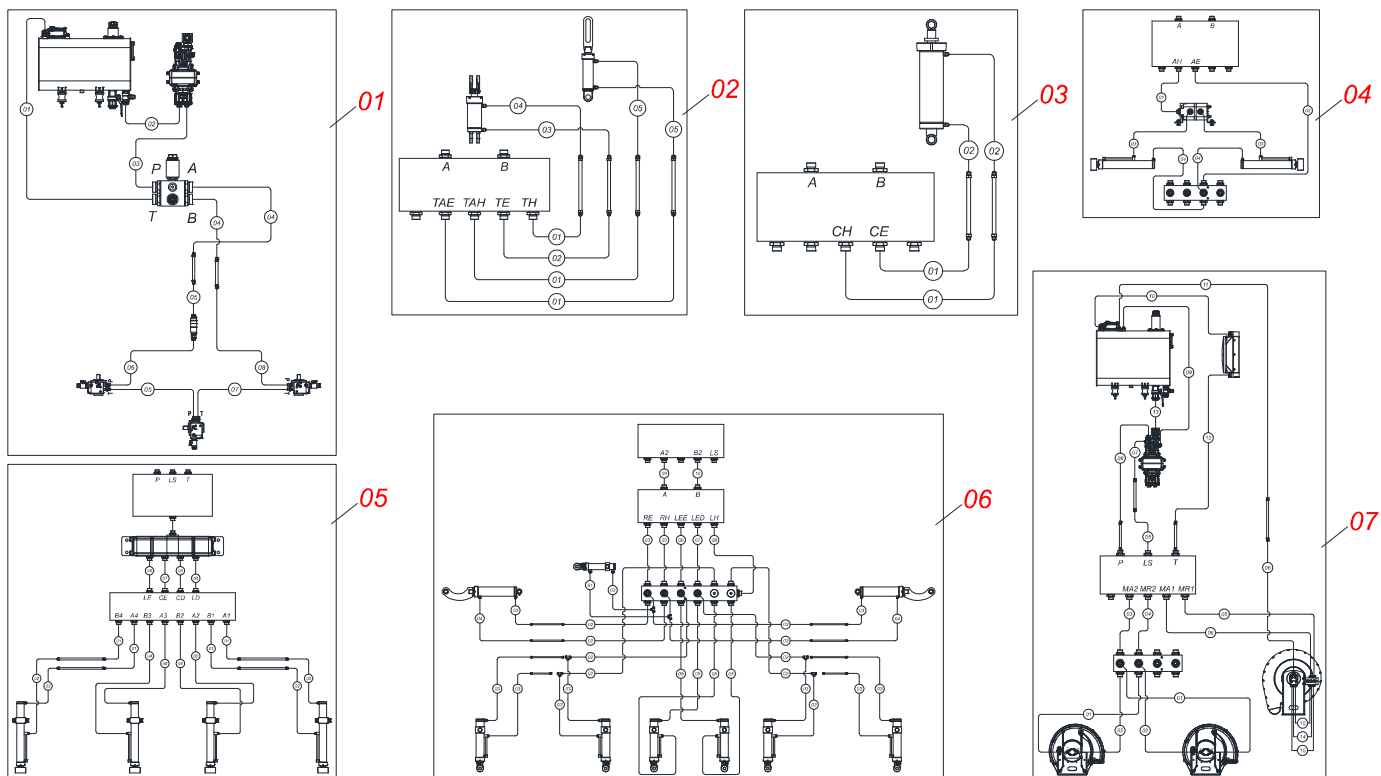


Item	Code	Description	See page	QT
01	0541051358	HOSE ASSY DKO APT/18E500/VDR	29	01
02	0541051266	LOCKING DKO HOSE SET 18E500	30	01
03	0541051267	PANTOGRAPHIC DKO HOSE SET 18E500	31	01
04	0541051268	DKO OPEN/CLOSE HOSE SET 18E500	32	01
05	0541051269	DKO LIFT HOSE SET 18E500	33	01
06	0541051270	HOSE ASSY DKO ARTICULATION/WHEELS 18E500	34	01
07	0541051271	HOSE ASSY DKO TURBINE 18E500	35	01

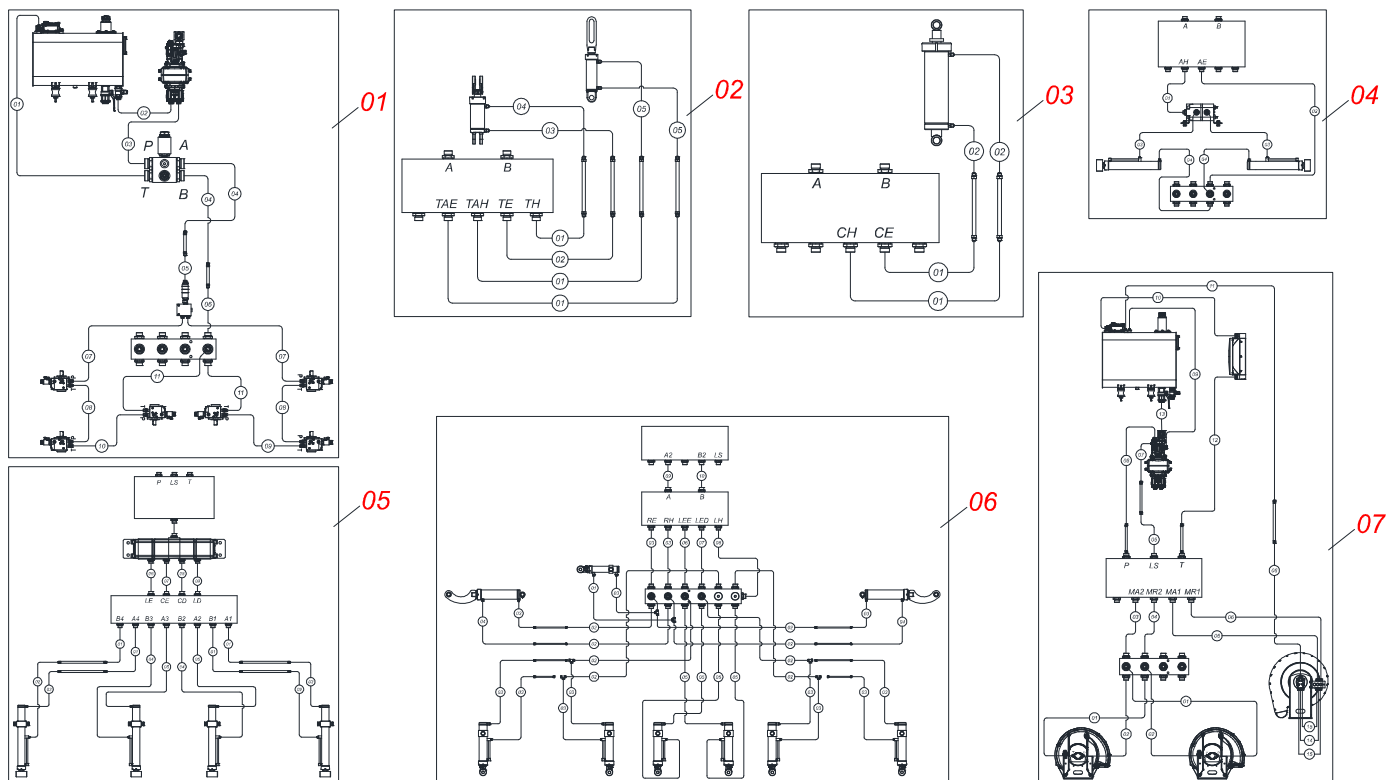


Item	Code	Description	See page	QT
01	0541051265	HOSE ASSY DKO APT/18E500	36	01
02	0541051266	LOCKING DKO HOSE SET 18E500	30	01
03	0541051267	PANTOGRAPHIC DKO HOSE SET 18E500	31	01
04	0541051268	DKO OPEN/CLOSE HOSE SET 18E500	32	01
05	0541051269	DKO LIFT HOSE SET 18E500	33	01
06	0541051270	HOSE ASSY DKO ARTICULATION/WHEELS 18E500	34	01
07	0541051271	HOSE ASSY DKO TURBINE 18E500	35	01

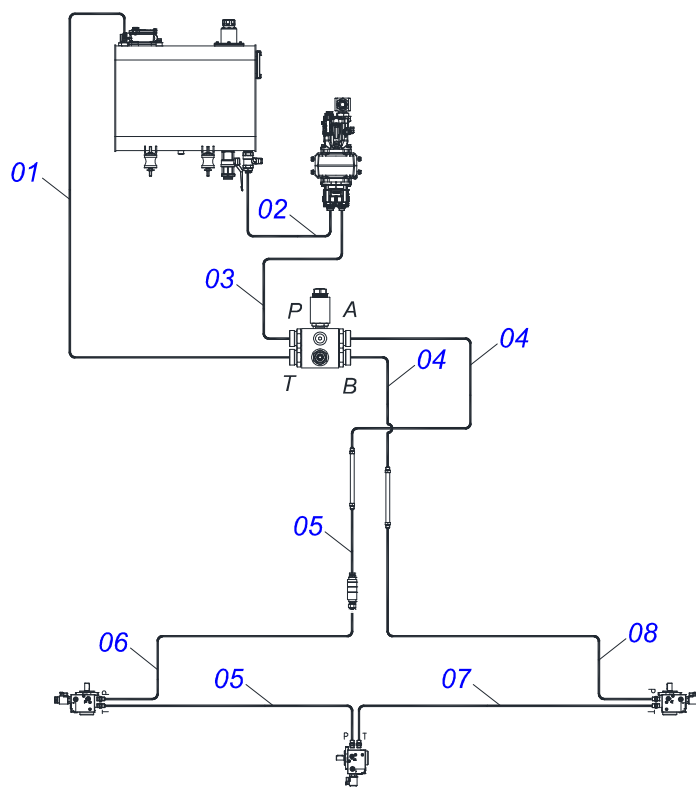


Item	Code	Description	See page	QT
01	0501082923	HOSE 1/2 X 1900 FG TB15 X FG C90 TB15		01
02	0501082872	HOSE 3/4 X 2800 FG TB22 X FG TB22 WITH SPRING		01
03	0501082925	HOSE 1/2 X 2800 FG TB15 X FG TB15 WITH SPRING		01
04	0501082926	HOSE 1/2 X 4500 FG TB15 X FG C90 TB15		02
05	0501082927	HOSE 1/2 X 4200 FG TB15 X FG TB15		02
06	0501082928	HOSE 1/2 X 1500 FG TB15 X FG C90 TB15		01
07	0501082929	HOSE 1/2 X 5000 FG TB15 X FG C90 TB15		01
08	0501082930	HOSE 1/2 X 4700 FG TB15 X FG C90 TB15		01

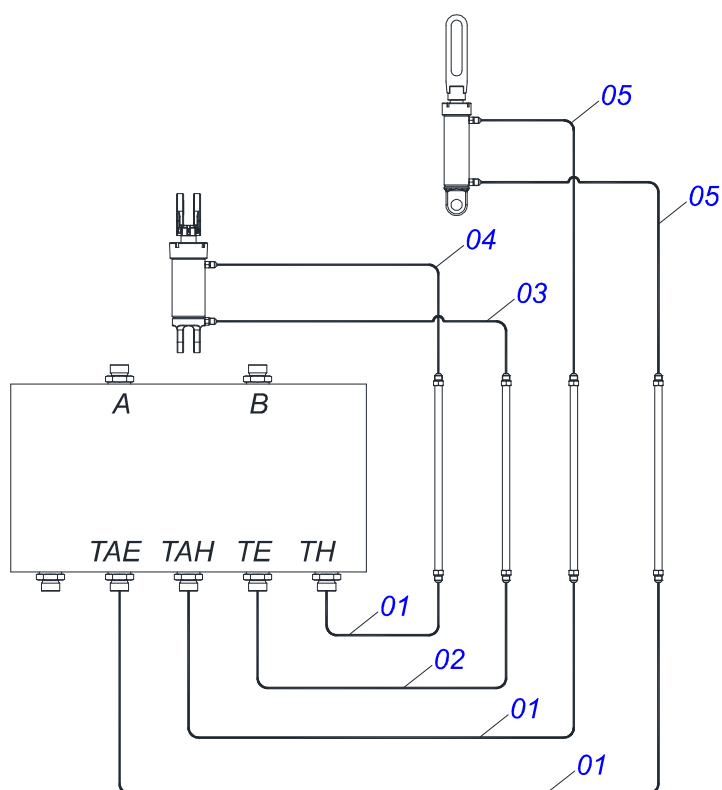


Item	Code	Description	See page	QT
01	0501082881	HOSE 3/8 X 1000 FG TB12L X FG C90 TB12L		03
02	0501082882	HOSE 3/8 X 900 FG TB12L X FG C90 TB12L		01
03	0501082883	HOSE 3/8 X 470 FG TB12L X FG C90 TB12L		01
04	0501082884	HOSE 3/8 X 430 FG TB12L X FG C90 TB12L		01
05	0501082885	HOSE 3/8 X 4850 FG TB12L X FG C90 TB12L		02

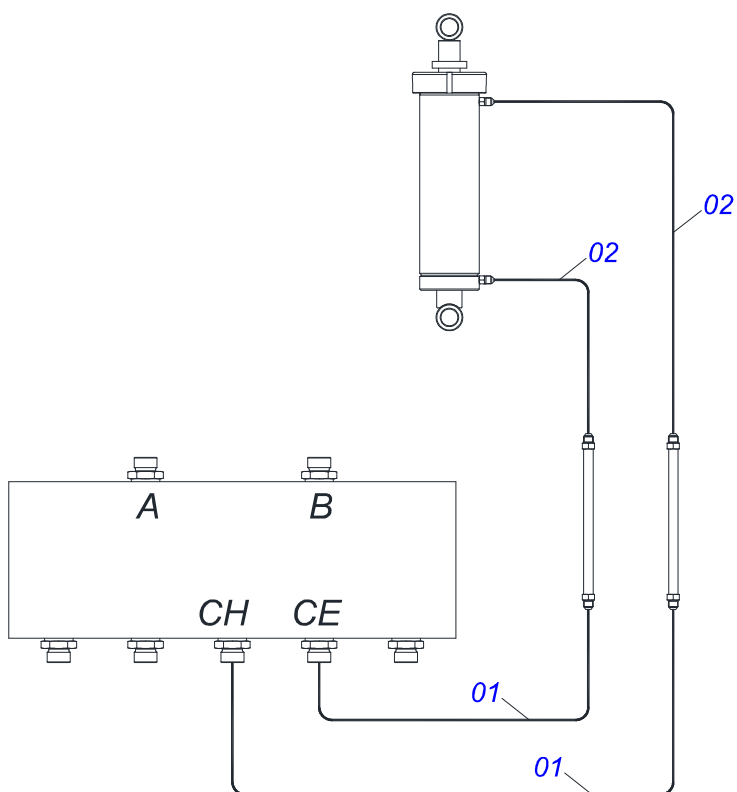


Item	Code	Description	See page	QT
01	0501082881	HOSE 3/8 X 1000 FG TB12L X FG C90 TB12L		02
02	0501082886	HOSE 3/8 X 4300 FG TB12L X FG C90		02

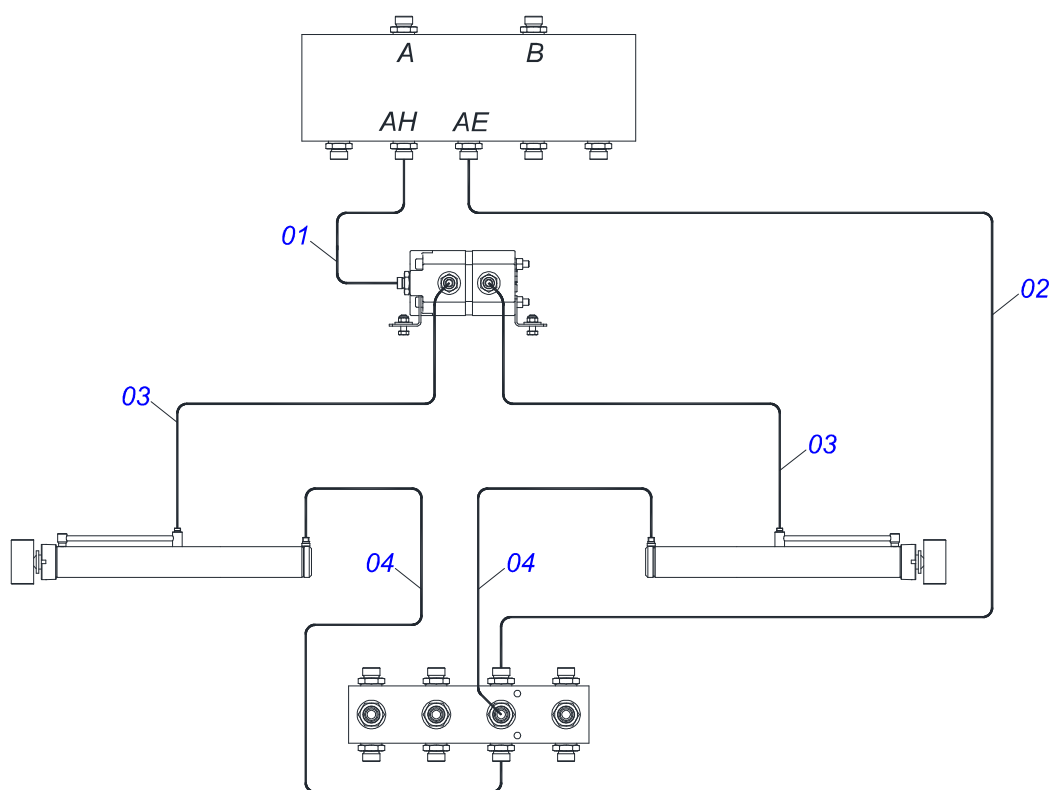


Item	Code	Description	See page	QT
01	0501082887	HOSE 3/8 X 1350 FG TB12L X FG C90 TB12L		01
02	0501082888	HOSE 3/8 X 1450 FG TB12L X FG C90 TB12L		01
03	0501082889	HOSE 3/8 X 1550 FG TB12L X FG C90 TB12L		02
04	0501082890	HOSE 3/8 X 1250 FG TB12L X FG C90 TB12L		02

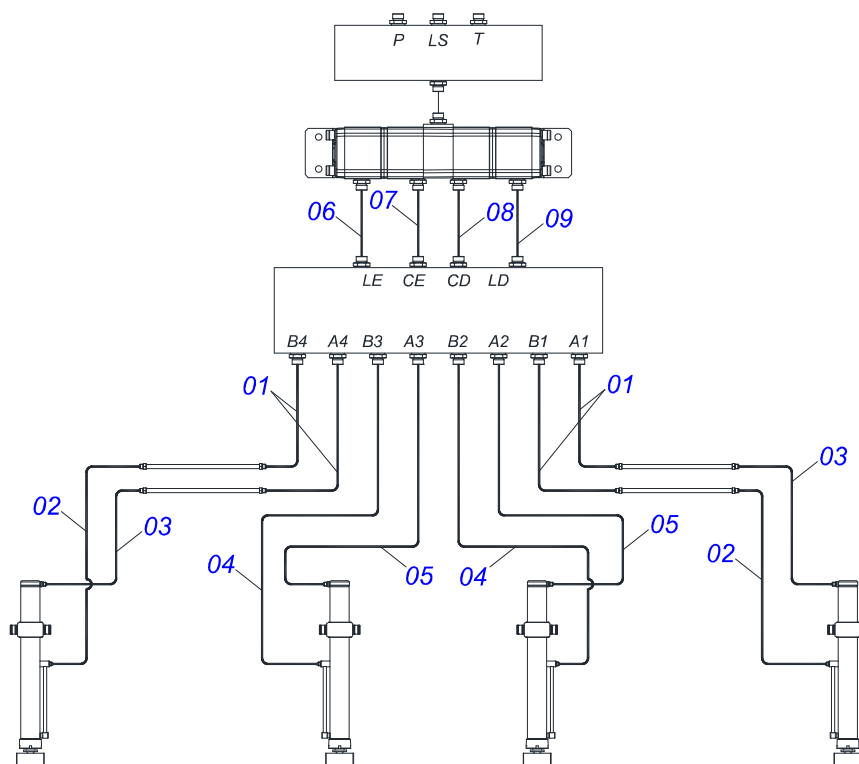


Item	Code	Description	See page	QT
01	0501082891	HOSE 3/8 X 3100 FG TB12L X FG TB		04
02	0501082892	HOSE 3/8 X 2700 FG TB12L X FG C90 TB12L		02
03	0501082893	HOSE 3/8 X 3000 FG TB12L X FG C90 TB12L		02
04	0501082887	HOSE 3/8 X 1350 FG TB12L X FG C90 TB12L		02
05	0501082894	HOSE 3/8 X 1050 FG TB12L X FG TB12L		02
06	0501082895	HOSE 3/8 X 510 FG TB12L X FG C90 TB12L		01
07	0501082883	HOSE 3/8 X 470 FG TB12L X FG C90 TB12L		01
08	0501082896	MANGUERA 3/8 X 410 FG TB12L X FG C90 TB12L		01
09	0501082897	HOSE 3/8 X 400 FG TB12L X FG C90 TB12L		01

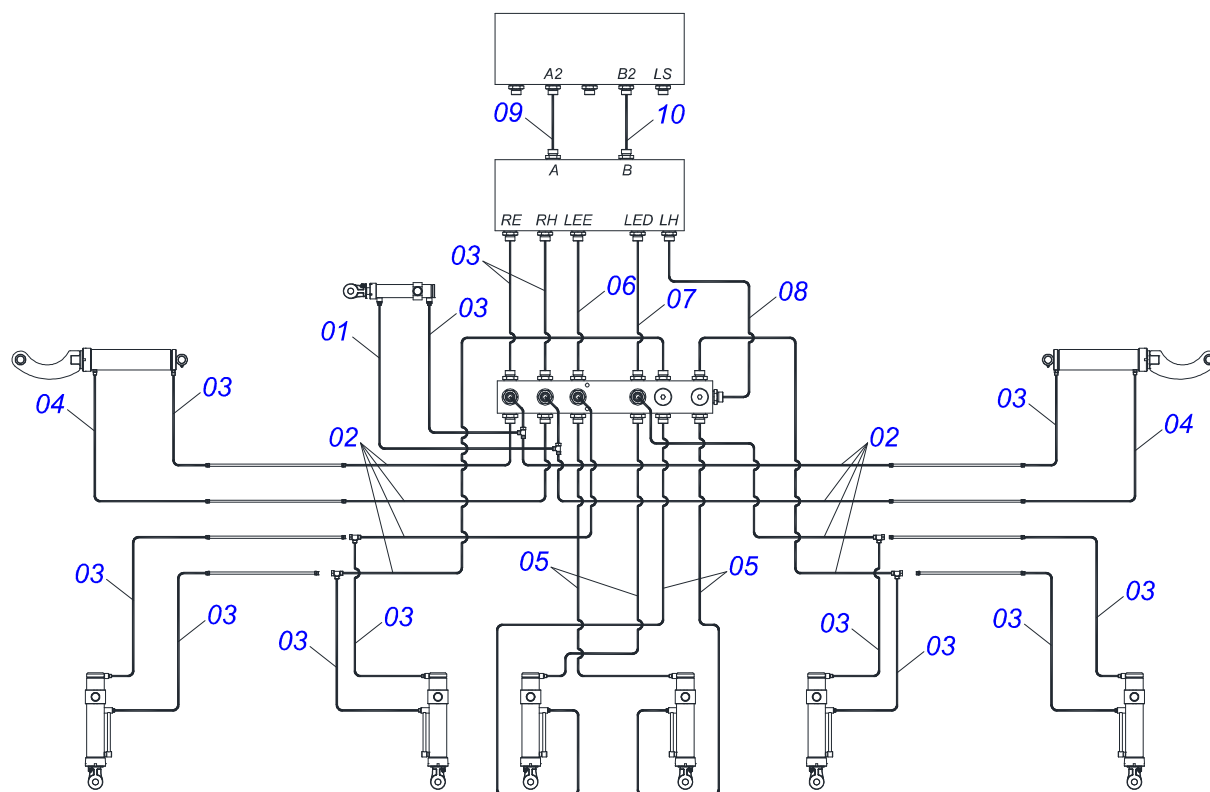


Item	Code	Description	See page	QT
01	0501082882	HOSE 3/8 X 900 FG TB12L X FG C90 TB12L		01
02	0501082898	HOSE 3/8 X 3300 FG TB12L X FG C90 TB12L		08
03	0501082899	HOSE 3/8 X 1100 FG TB12L X FG C90 TB12L		13
04	0501082900	HOSE 3/8 X 650 FG TB12L X FG C90 TB12L		02
05	0501082901	HOSE 3/8 X 1150 FG TB12L X FG C90 TB12L		04
06	0501082902	HOSE 3/8 X 1350 FG TB12L X FG C90 LG TB12L		01
07	0501082887	HOSE 3/8 X 1350 FG TB12L X FG C90 TB12L		01
08	0501082903	HOSE 3/8 X 1500 FG TB12L X FG C90 TB12L		01
09	0501082904	HOSE 1/2 X 900 FG TB15 X FG C90 TB15		01
10	0501082905	HOSE 1/2 X 650 FG TB15 X FG C90 TB15		01

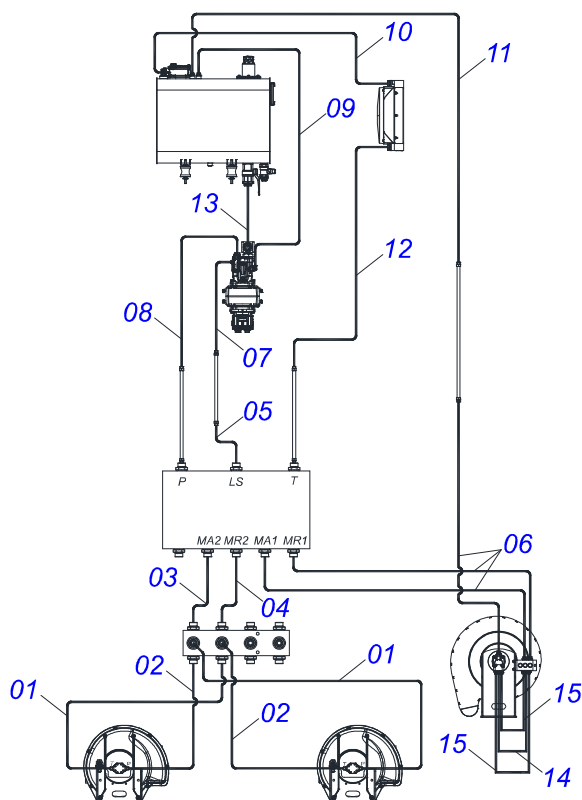


Item	Code	Description	See page	QT
01	0501082906	HOSE 3/8 X 4200 FG TB12L X FG C90 TB12L		02
02	0501082907	HOSE 3/8 X 3800 FG TB12L X FG C90 TB12L		02
03	0501082908	HOSE 3/8 X 2200 FG TB12L X FG C90 TB12L		01
04	0501082909	HOSE 3/8 X 2100 FG TB12L X FG C90 TB12L		01
05	0501082910	HOSE 1/4 X 500 FG TB10L X FG C90 TB10L		01
06	0501082893	HOSE 3/8 X 3000 FG TB12L X FG C90 TB12L		03
07	0501082911	HOSE 1/4 X 6000 FG TB10L X FG C90 TB10L		01
08	0501082912	HOSE 1 X 6000 FG TB28 X FG C90 TB28		01
09	0501082913	HOSE 1/2 X 3900 FG TB15 X FG C90 TB15		01
10	0501082914	HOSE 1.1/4 X 1800 FG TB35 X FG C90 TB35		01
11	0501082915	HOSE 3/8 X 4500 FG TB12L X FG C90 TB12L		01
12	0501082916	HOSE 1 X 5000 FG TB28 X FG TB28		01
13	0501082917	HOSE 2 X 1400		01
14	0501082918	HOSE 1/4 X 500 FG TB10L X FG TB10L		01
15	0501082919	HOSE 1/2 X 500 FG TB15 X FG TB15		02

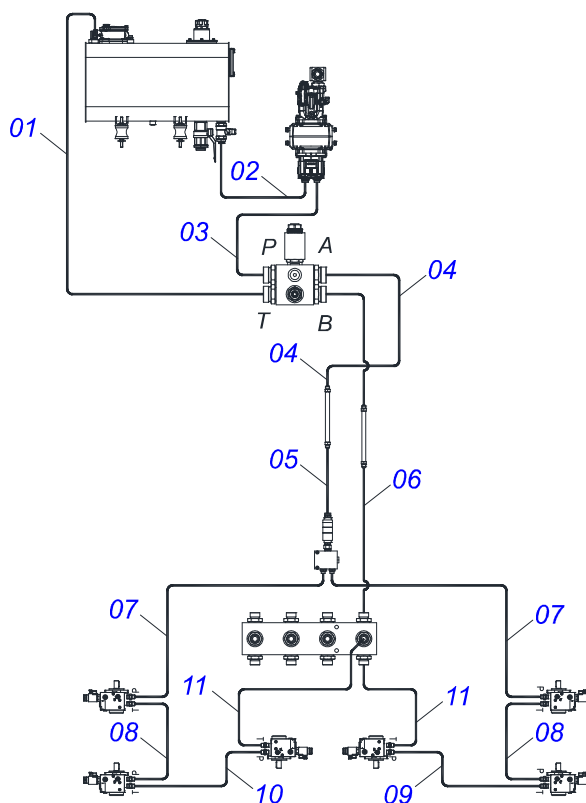


Item	Code	Description	See page	QT
01	0501082870	HOSE 3/4 X 1900 FG TB22 X FG C90 TB22		01
02	0501082871	HOSE 1 X 2800 FG TB28 X SPRING CLAMP		01
03	0501082872	HOSE 3/4 X 2800 FG TB22 X FG TB22 WITH SPRING		01
04	0501082873	HOSE 3/4 X 4500 FG TB22 X FG C90 TB22		02
05	0501082874	HOSE 3/4 X 1800 FG TB22 X FG TB22		01
06	0501082875	HOSE 3/4 X 2400 FG TB22 X FG C90 TB22		01
07	0501082876	HOSE 1/2 X 4100 FG TB15 X FG C90 TB15		02
08	0501082877	HOSE 1/2 X 1700 FG TB15 X FG C90 TB15		02
09	0501082878	HOSE 1/2 X 6700 FG TB15 X FG C90 TB15		01
10	0501082879	HOSE 1/2 X 6300 FG TB15 X FG C90 TB15		01
11	0501082880	HOSE 1/2 X 1800 FG TB15 X FG C90 TB15		02

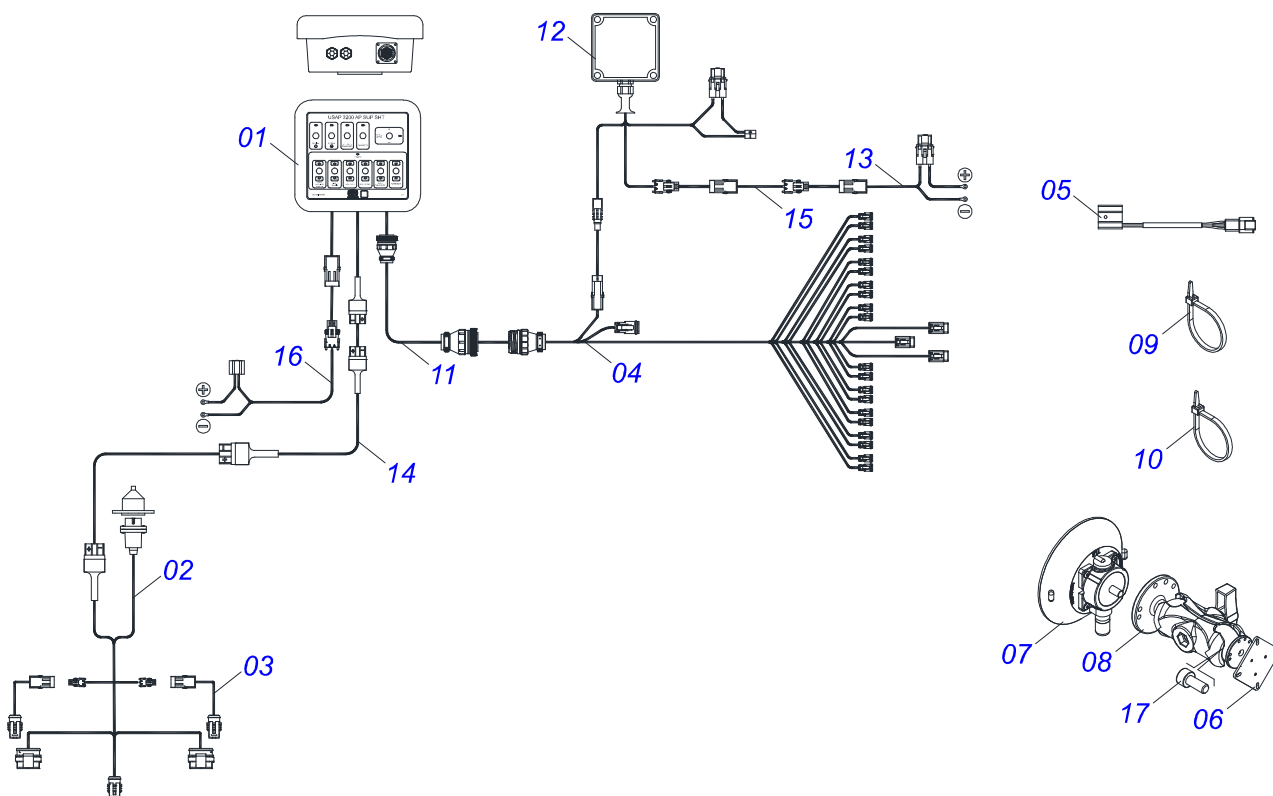


Item	Code	Description	See page	QT
01	0513010813	CONTROL PANEL BLOCK SHT BCE 5375.1		01
02	0513010994	LIGHTHOUSE HARNESS LED LANTERN 12 METERS BCE 5403.1		01
03	0513010975	LIGHTHOUSE EXTENSION 3 HOLES ECB 5381.9		02
04	0503019926	BLOCK WHIP WITH ECB 4555.9		01
05	0503019291	SUPPORT SENSOR		03
06	0501217647	SHT PANEL FIXING PLATE		01
07	0503016234	TRIMBLE FIXING WINDOW		01
08	0503016452	FIXING SUPPORT AG500 TRIMBLE		01
09	0503018829	NYLON CLAMP		20
10	0503019902	NYLON CLAMP 7,8X1,8X225 MM		80
11	0503019924	BLOCK WHIP WITH ECB TREAT 4554.2		01
12	0513011205	HEAT EXCHANGER SWITCH PANEL		01
13	0513011204	TRACTOR POWER SWITCH CABLE 5463.5		01
14	0503019307	CABLE TRACTOR HEADLIGHT		01
15	0503062594	IMPLEMENT SWITCH CABLE (EXTENSION)		01
16	0503019305	WHIP		01
17	0513010191	BOLT		03

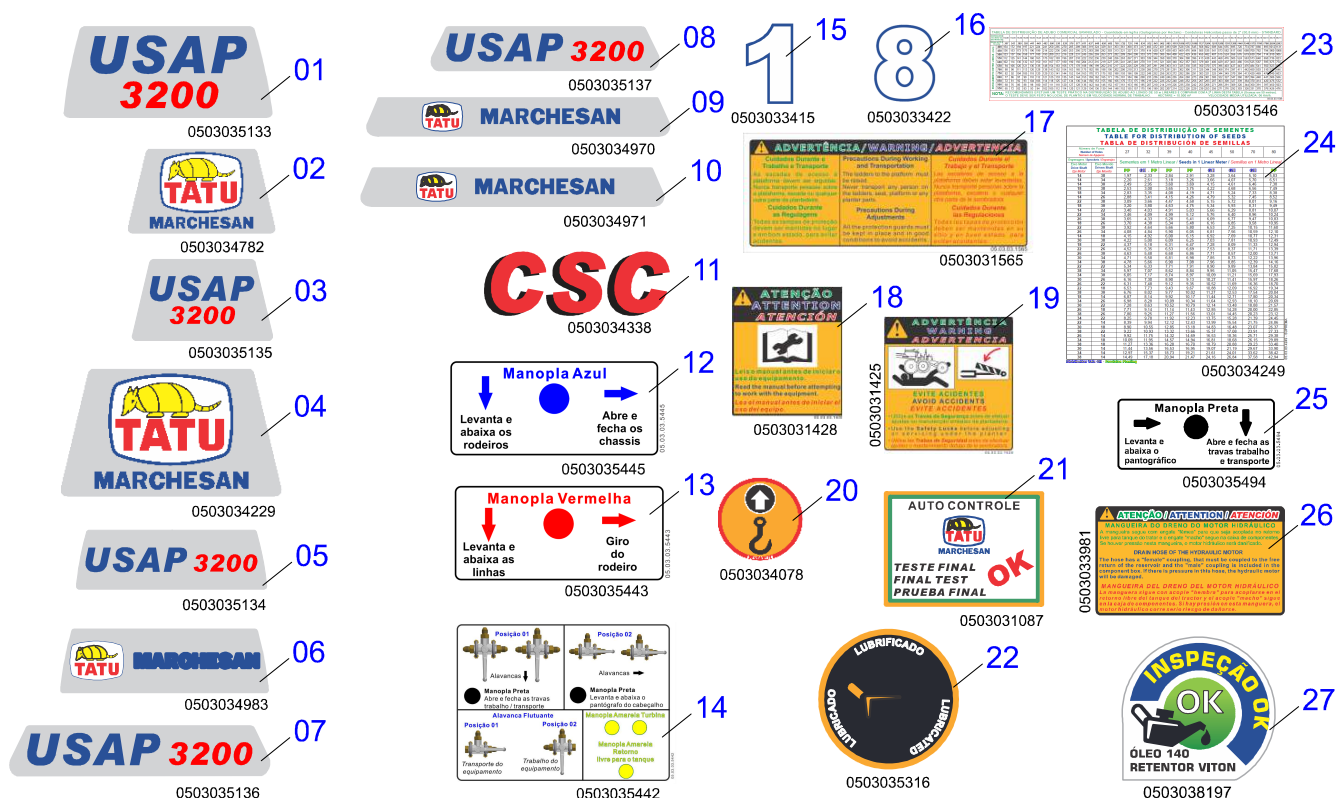


Item	Code	Description	See page	QT
01	0503035133	ADHESIVE LABEL USAP 3200 (192 X 437)		08
02	0503034782	LABEL ADHESIVE LOGO SMALLER TATU (03 MOUTHS)		08
03	0503035135	ADHESIVE LABEL USAP 3200 (185 X 320)		04
04	0503034229	ADHESIVE LABEL LOGO TATU LOWER (05 NOZZLES)		04
05	0503035134	ADHESIVE LABEL USAP 3200 (190 X 613)		02
06	0503034983	LOGO TATU MARCHESAN ADHESIVE LABEL 190 X 613		08
07	0503035136	ADHESIVE LABEL USAP 3200 (170 X 820)		03
08	0503035137	ADHESIVE LABEL USAP 3200 (165 X 850)		03
09	0503034970	LOGO TATU MARCHESAN (CSC) 155 X 1120		03
10	0503034971	ADHESIVE LABEL LOGO TATU MARCHESAN (CSC) 150 X 1130		03
11	0503034338	ADHESIVE LABEL		02
12	0503035445	ADHESIVE LABEL LEVER BLUE HANDLE		01
13	0503035443	ADHESIVE LABEL LEVER RED HANDLE		01
14	0503035442	ADHESIVE LABEL FLOATING LEVER		01
15	0503033415	ADHESIVE LABEL		02
16	0503033422	ADHESIVE LABEL		02
17	0503031565	ADHESIVE LABEL CARE		02
18	0503031428	READ MANUAL DECAL		01
19	0503031425	ADHESIVE LABEL ATTENTION		02
20	0503034078	LIFTING POINTS DECAL		02
21	0503031087	ADHESIVE LABEL		01
22	0503035316	LUBRICATED POINTS ADHESIVE LABEL		04
23	0503031546	ADHESIVE LABEL TABLE FERTILIZER P2		02
24	0503034249	ADHESIVE LABEL TABLE PLANTS		02
25	0503035494	ADHESIVE LABEL LEVER BLACK HANDLE		01
26	0503033981	ADHESIVE LABEL		02
27	0503038197	OIL 140 ADHESIVE LABEL		02

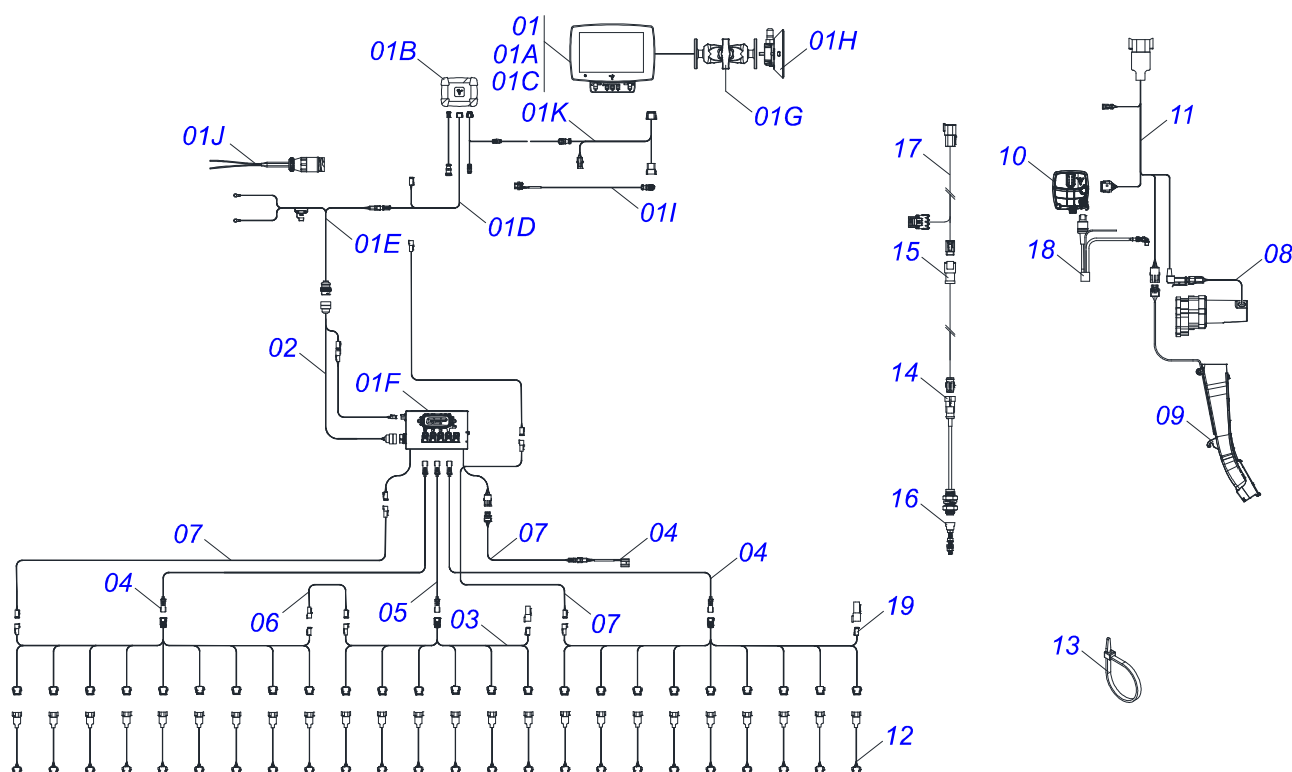


Item	Code	Description	See page	QT
01	0531057126	KIT CABIN SEEDSENSE GEN3		001
01A	0503063047	MONITOR KIT		002
01B	0503019536	MODULE		001
01C	0503063204	KIT BASE		001
01D	0503019759	WHIP		001
01E	0503017972	TRACTOR BATTERY WHIP		001
01F	0503017973	ENERGY DISTRIBUTOR MODULE		001
01G	0503016452	FIXING SUPPORT AG500 TRIMBLE		001
01H	0503016234	TRIMBLE FIXING WINDOW		001
01I	0503018653	ADAPTER WHIP		001
01J	0503018097	WHIP BATTERY		001
01K	0503019424	WHIP JD STARFIRE GPS		001
02	0503062457	TRACTOR CONNECTION ASSY		001
03	0503017991	MAIN HARNESS SRM - 6 LINES 45/55 729466		003
04	0503018085	APEX EXTENSION CABLE		002
05	0503017996	EXTENSION CABLE APEX 729151 - 4,50MTS		001
06	0503018080	EXTENSION CABLE		001
07	0503018081	CAN EXTENSION CABLE SRM		003
08	0503062431	ELECTRIC MOTOR		018
09	0503019776	SEED TUBE WITH WAVE VISION SENSOR		018
10	0503019755	UNIT MODULE		018
11	0503017975	WHIP		018
12	0503018076	EXTENSION CABLE SRM - 0.60MTS 729255		018
13	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		300
14	0513011769	EXTERNAL ADAPTER		001
15	0503018774	MAGNETIC SENSOR		001
16	0503018775	MAGNET ACTUATOR LH7.4.000091		001
17	0513010031	EXTERNAL LIFTING CABLE PSS-X1005B CAN-5M		001
18	0513010275	PP725905 VACUUM SENSOR		003
19	0503018055	WHIP ADAPTER		001

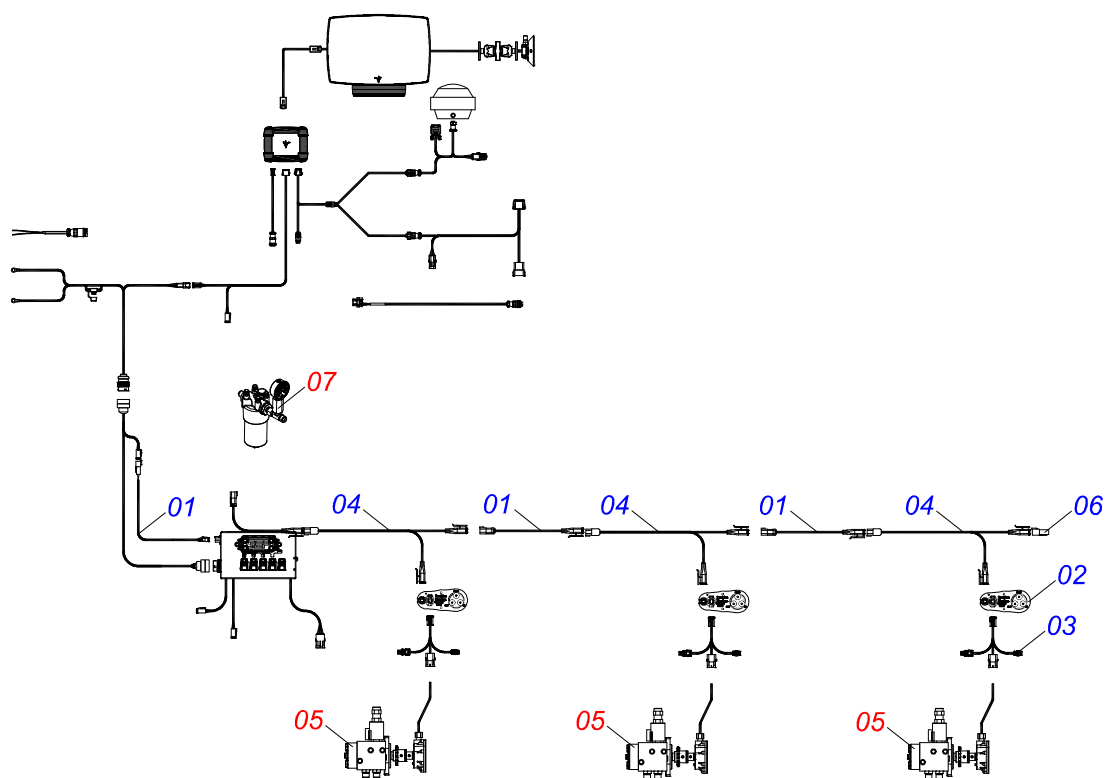


Item	Code	Description	See page	QT
01	0513010493	EXTENSION CAN 6 PINS 9M 729203		03
02	0513010458	VAPPLY MODULE 724280		03
03	0513010459	HYDRAULIC ENGINE WHIP 724287		03
04	0513010460	WHIP Y 06 PINS 729508		03
05	0521056496	MOTOR EMD 80 WITH BLOCK BLFP2618	41	03
06	0503019761	CAN TERMINATOR 4 PINS 729938		01
07	0511056972	FILTER HYDAC	42	01

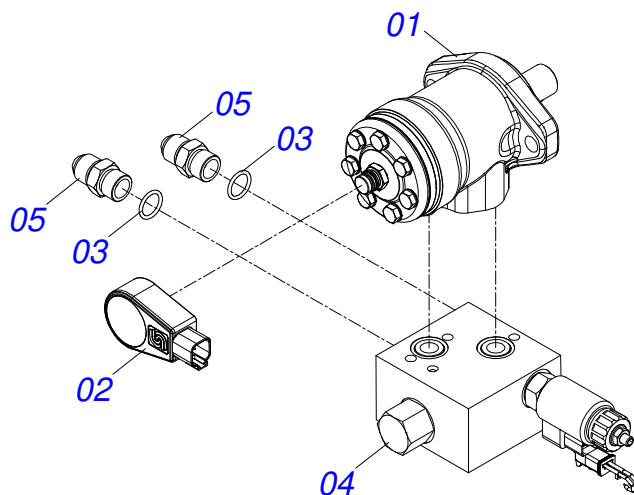


Item	Code	Description	See page	QT
01	0513010049	MOTOR OMP X 80 EMD - 11185907		01
02	0503018769	MOTOR SPEED SENSOR		01
03	0503010045	O'RING		02
04	0503019320	VALVE		01
05	0501010590	NIPPLE		02

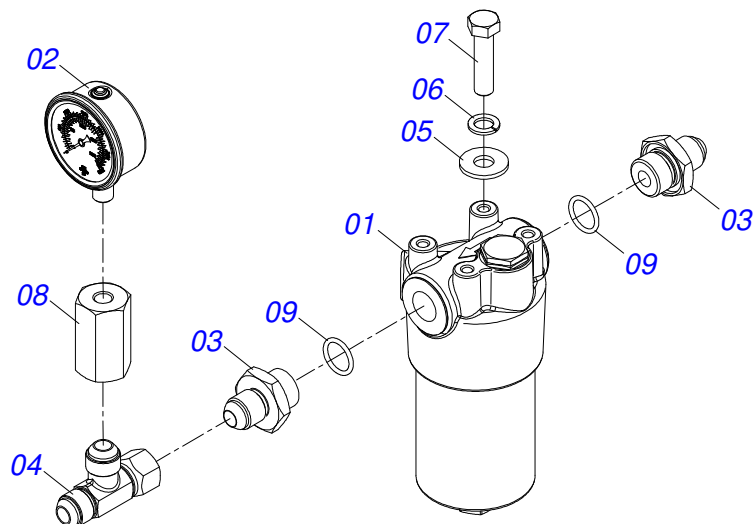


Item	Code	Description	See page	QT
01	0503063151	PRESSURE FILTER MFM HYDAC 1319024BR		01
02	0503016336	PRESSURE GAUGE		01
03	0581011416	7/8"NF UNF NIPPLE		02
04	0503012341	7/8" T ADAPTER		01
05	0501010694	FLAT WASHER		04
06	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
07	0503016506	5/16 UNC X 3/4 C S G.5 ZN BOLT		04
08	0571016236	HIDRAULIC ADAPTER		01
09	0503014724	2-215 N 3006-9B O'RING		02

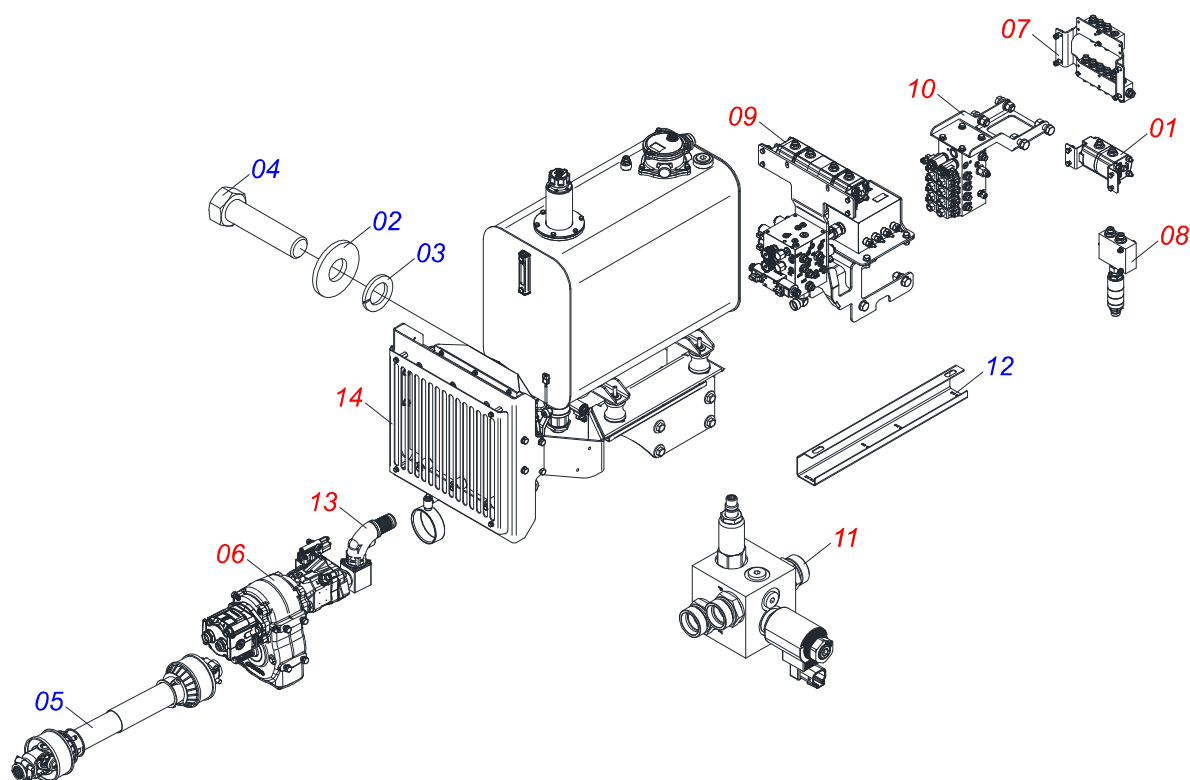


Item	Code	Description	See page	QT
01	0541050020	DOUBLE ROTATING DIVIDER	45	01
02	0501010694	FLAT WASHER		02
03	0503014371	M8 SPRING WASHER		02
04	0503011295	M 8 X 1,25 X 25 BOLT		02
05	0503063819	CARDAN 21Z 1.3/8 X 20Z 1.3/4		01
06	0541050680	DOUBLE PUMP MULTIPLIER	46	01
07	0541050677	PASSAGE BLOCK SET	49	01
08	0541050774	DIVIDER VALVE	52	01
09	0541050762	SET OF COMMAND BLOCKS	53	01
10	0541050775	CYLINDER COMMANDER BLOCK	57	01
11	0541050773	BLOCK COMMAND	59	01
12	0501310425	GUTTER 55 X 50 X 460		01
13	0513011920	TERMINAL KNEE 90G		01
14	0541050504	HEAT EXCHANGER	60	01

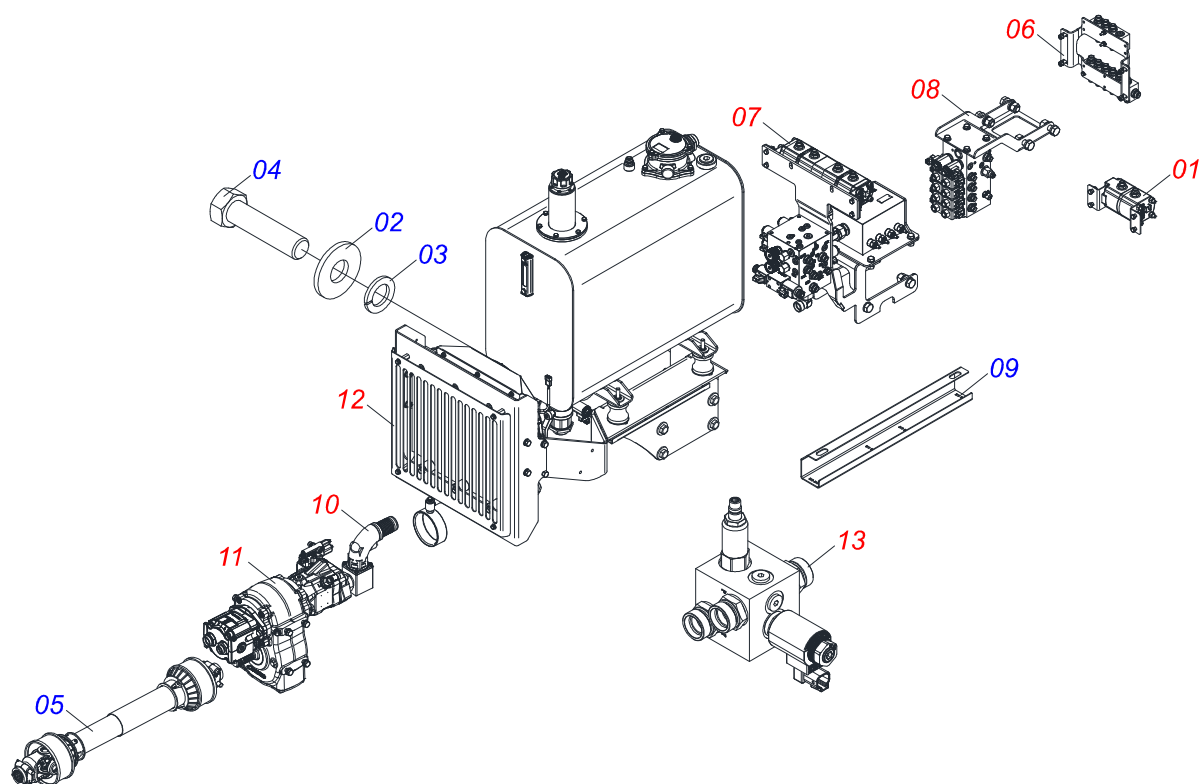

Item	Code	Description	See page	QT
01	0541050020	DOUBLE ROTATING DIVIDER	45	01
02	0501010694	FLAT WASHER		02
03	0503014371	M8 SPRING WASHER		02
04	0503011295	M 8 X 1,25 X 25 BOLT		02
05	0503063819	CARDAN 21Z 1.3/8 X 20Z 1.3/4		01
06	0541050677	PASSAGE BLOCK SET	49	01
07	0541050762	SET OF COMMAND BLOCKS	53	01
08	0541050775	CYLINDER COMMANDER BLOCK	57	01
09	0501310425	GUTTER 55 X 50 X 460		01
10	0513011920	TERMINAL KNEE 90G		01
11	0541050526	DOUBLE PUMP MULTIPLIER	64	01
12	0541050504	HEAT EXCHANGER	60	01
13	0541050505	BLOCK COMMAND	66	01

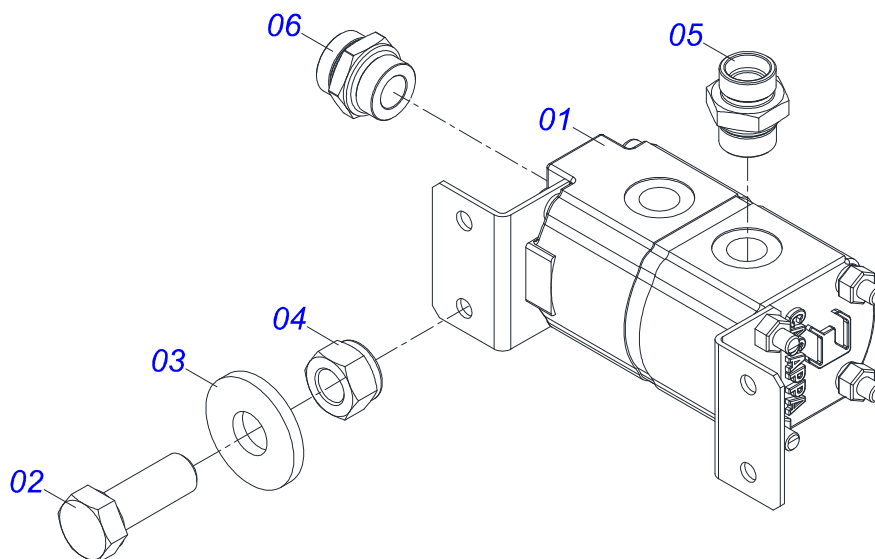


Item	Code	Description	See page	QT
01	0503019810	DOUBLE ROTATING DIVIDER		01
02	0503010237	3/8" X 1" BOLT		04
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
04	0503013357	3/8 SELF-ADJUSTING NUT		04
05	0513011034	ADAPTER TERMINAL MF R7/8 UNF ORING X MF TB12L		02
06	0513011687	ADAPTER TERMINAL MF R.1.1/16 UN ORING X MF TB12L		01

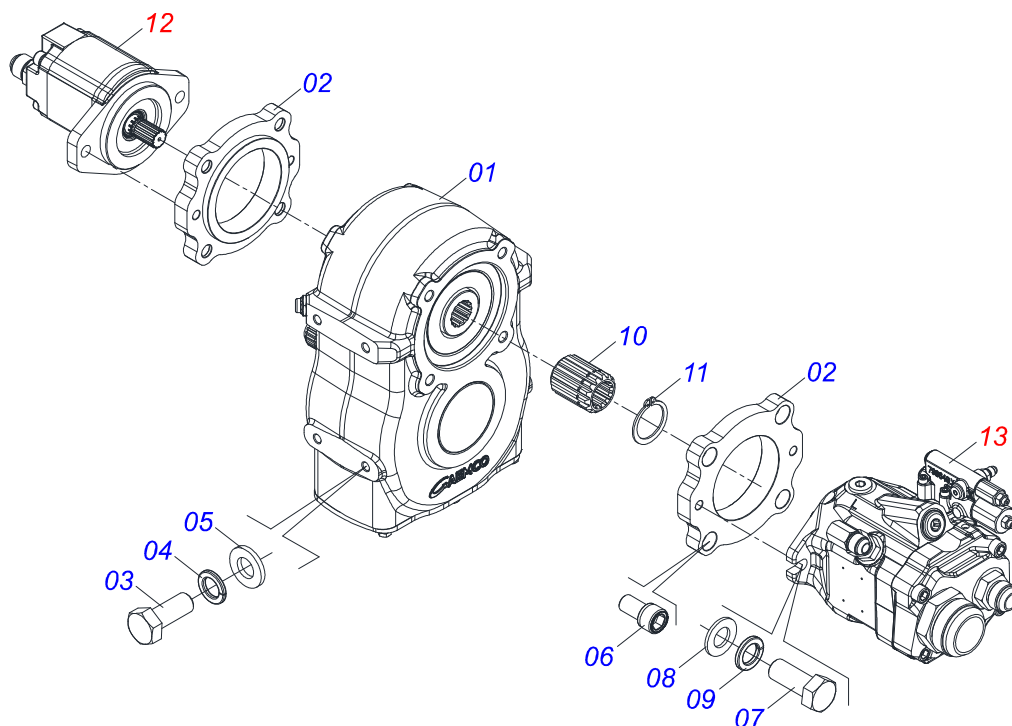


Item	Code	Description	See page	QT
01	0513010710	MULTIPLIER BOX		01
02	0501217531	REDUCTION BOX FLANGE		02
03	0503015140	M12 X 1,75 X 30 BOLT		08
04	0503015076	M12 SPRING WASHER		08
05	0521014188	FLAT WASHER		08
06	0513011013	BOLT ALLEN M14 X 2 X 25MM CCSI		08
07	0503014007	1/2" X 1-1/4" BOLT		04
08	0503011828	FLAT WASHER		04
09	0503010019	1/2" SPRING WASHER		04
10	0513010995	EXTERNAL GROOVED GLOVE 1.1/4 - Z14 X INTERNAL 7/8 Z13 X 42MM		01
11	0503010880	501032 CLAMPING RING (FOR AXLE)		01
12	0541050014	HYDRAULIC PUMP	47	01
13	0541050681	HYDRAULIC PUMP	48	01

HYDRAULIC PUMP

0541050014

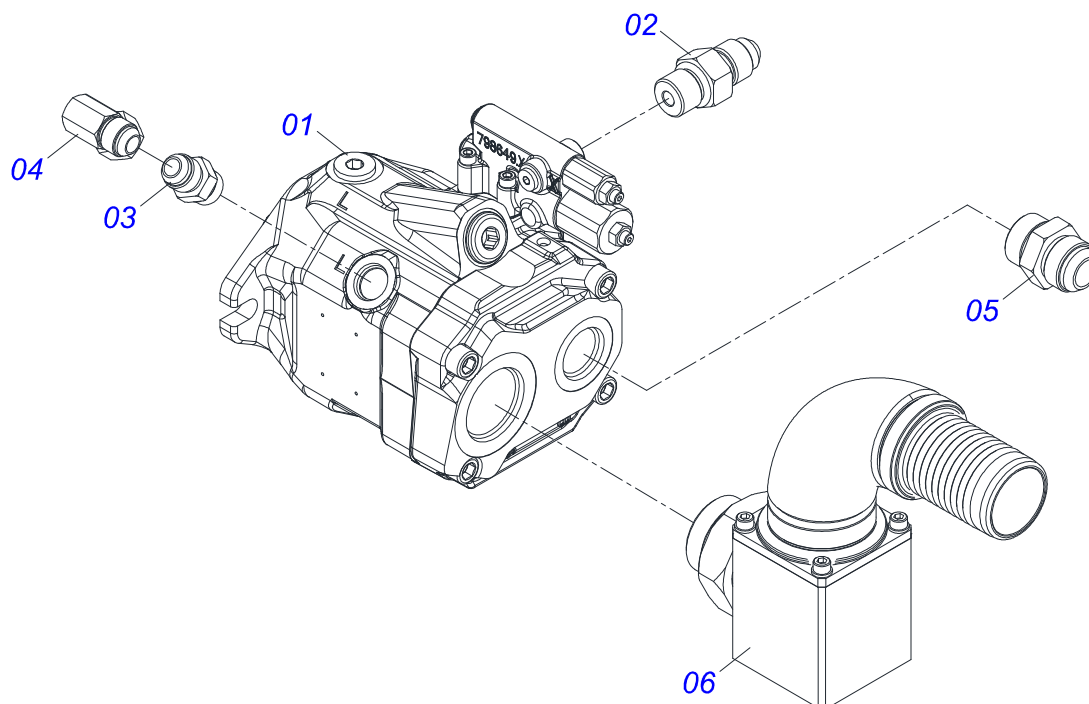


Item	Code	Description	See page	QT
01	0513010724	AXIAL PISTON HYDRAULIC PUMP 63CC - H		01
02	0513010832	ADAPTER TERMINAL MF R.1.5/16 UNF ORING X TB28		01
03	0513010818	ADAPTER TERMINAL MF R.7/8 UNF		01
04	0513010826	KNEE TERMINAL 90G MF TB15 X FG TB15		01
05	0513011689	ADAPTER TERMINAL R.7/16 ORING X TB10L		01
06	0541051231	NIPLE WITH ROTATING DUCT		01

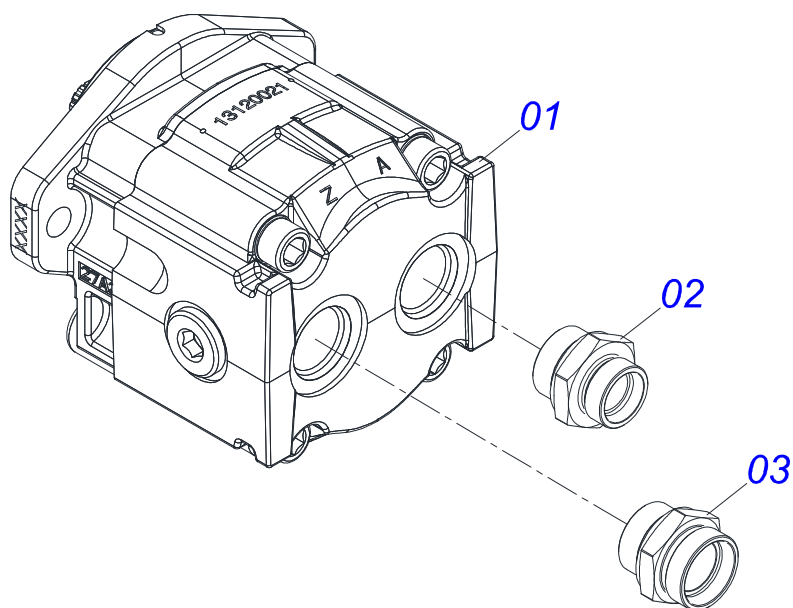

Item	Code	Description	See page	QT
01	0513010739	GEAR HYDRAULIC PUMP 34CC - BD		01
02	0513011178	ADAPTER TERMINAL MF R.1.5/16 UNF ORING X TB22		01
03	0513010832	ADAPTER TERMINAL MF R.1.5/16 UNF ORING X TB28		01

PASSAGE BLOCK SET


0541050677

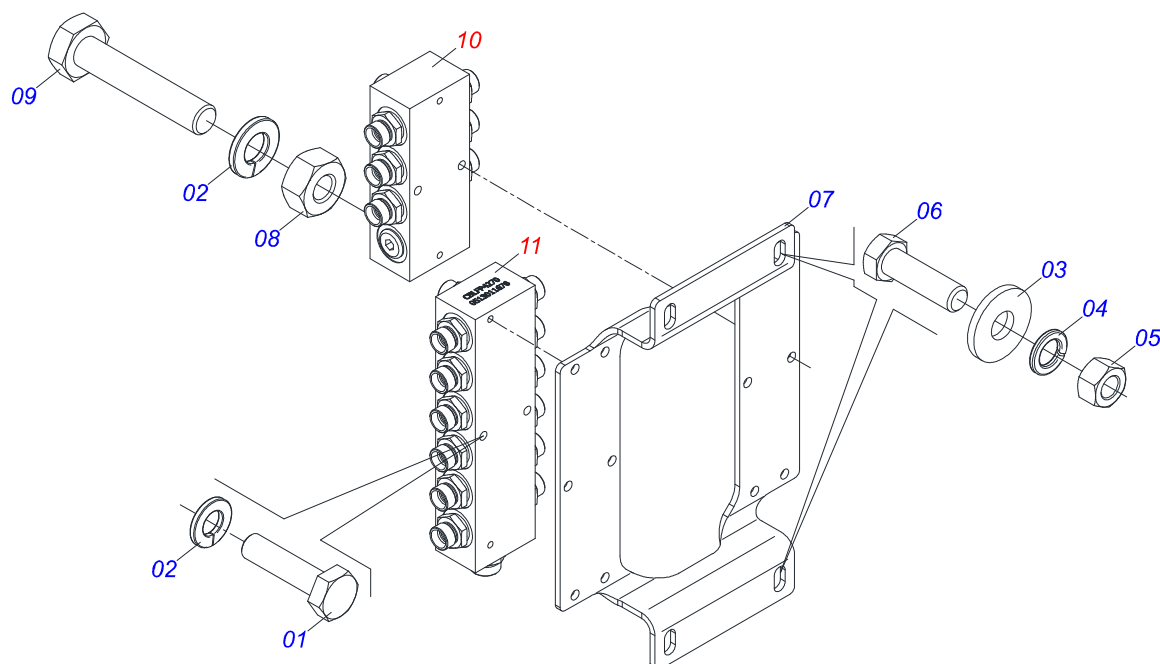


Item	Code	Description	See page	QT
01	0503010461	1/4" X 1" BOLT		02
02	0503010143	1/4" SPRING WASHER		04
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
04	0503010025	3/8 SPRING WASHER		04
05	0503010026	3/8" NUT		04
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
07	0501312370	BLOCK SUPPORT		01
08	0503010144	1/4" NUT		02
09	0503011194	BOLT 1/4 UNC X 2.1/2 CS G.2 ZN		02
10	0541050297	BLOCK PASSAGE	50	01
11	0531059989	PASSAGE BLOCK	51	01

BLOCK PASSAGE

0541050297

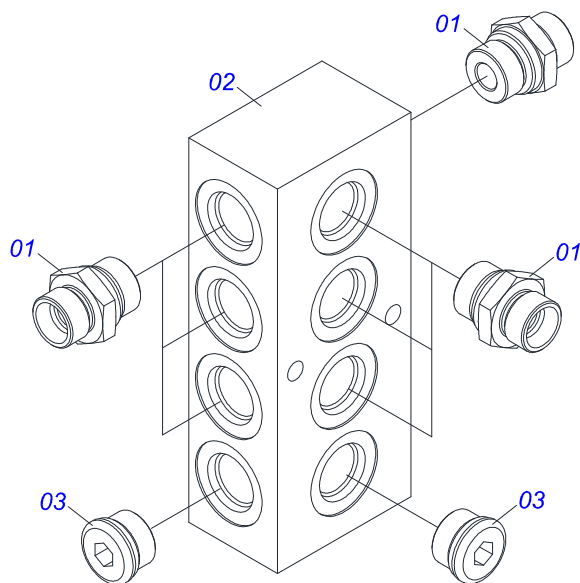


Item	Code	Description	See page	QT
01	0513011678	ADAPTER TERMINAL 3/4 UNF ORING X MF TB12L		09
02	0513010674	DISTRIBUTOR BLOCK 4 WAYS		01
03	0503063968	THREADED PLUG 3/4 UNF		03

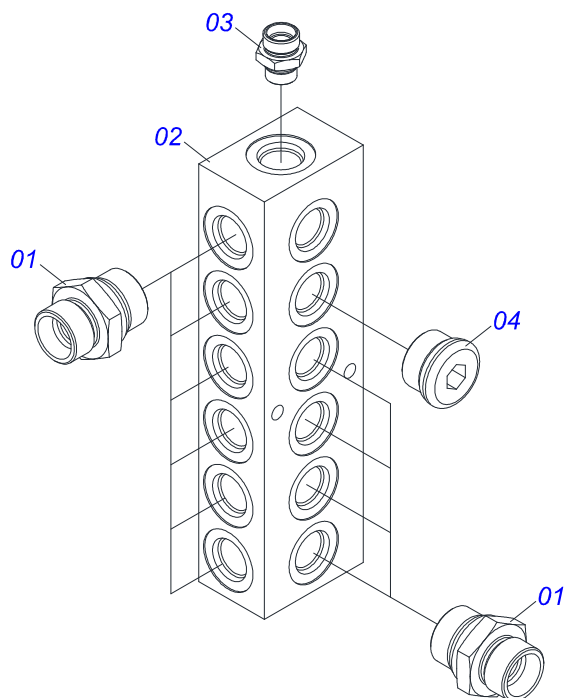


Item	Code	Description	See page	QT
01	0513011678	ADAPTER TERMINAL 3/4 UNF ORING X MF TB12L		16
02	0513011676	WALKWAY BLOCK 06 WAY		01
03	0513010819	ADAPTER TERMINAL MF R.3/4 UNF		01
04	0503063968	THREADED PLUG 3/4 UNF		02

DIVIDER VALVE


0541050774

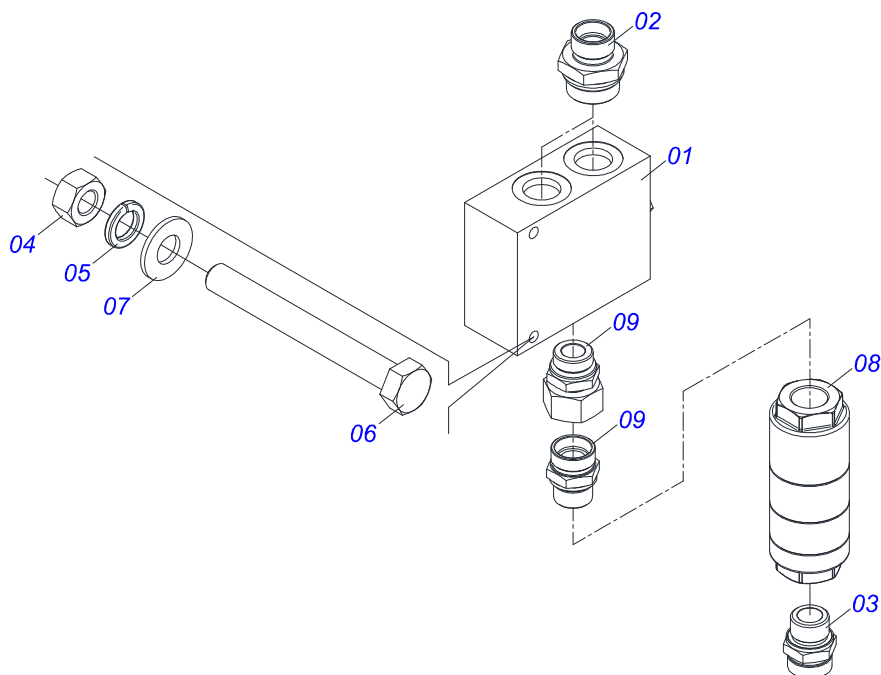


Item	Code	Description	See page	QT
01	0503016227	FLOW DIVIDING VALVE		01
02	0513011035	ADAPTER TERMINAL MF R1.1/16 UNF		02
03	0513011916	TERMINAL ADAPTER R.3/4 BSP X MF TB22		01
04	0503010337	5/16" NUT		02
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
06	0503011332	5/16" X 2-3/4" BOLT		02
07	0501010694	FLAT WASHER		02
08	0503019382	FILTER PDA 40 MICRA CASAPPA HHQ00530		01
09	0513011915	TERMINAL ADAPTER R. 1.1/16 ORING X FG TB22		02

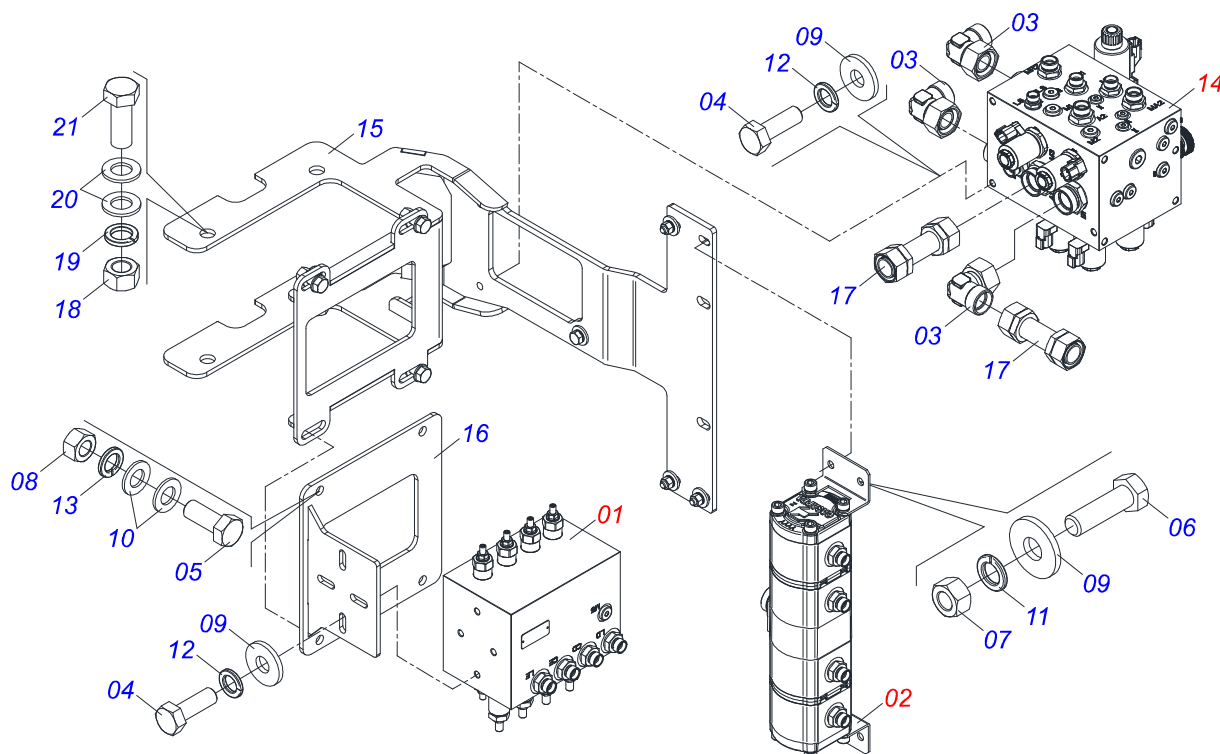


Item	Code	Description	See page	QT
01	0531059987	DRIVING BLOCK	54	01
02	0531059990	ROTATING DIVIDER	55	01
03	0513010828	TERMINAL KNEEL		03
04	0503015112	M10 X 1,5 X 30 BOLT		07
05	0503014007	1/2" X 1-1/4" BOLT		04
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
07	0503010026	3/8" NUT		04
08	0503010060	1/2 UNC G.5 ZN HEX NUT		04
09	0501010984	10,50 X 27 X 3,00 FLAT WASHER		11
10	0503011828	FLAT WASHER		08
11	0503010025	3/8 SPRING WASHER		04
12	0503015075	M10 SPRING WASHER		07
13	0503010019	1/2" SPRING WASHER		04
14	0531059985	BLOCK HYDRAULIC COMMAND	56	01
15	0531066484	SUPPORT BLOCKS		01
16	0531066491	LIFTING DRIVE BLOCK SUPPORT		01
17	0503036405	HYDRAULIC TUBE FG28 X FG28 X 116		02
18	0503012183	SNC 3/4" ZIN 1K03097 NUT		04
19	0503010023	3/4" SPRING WASHER		04
20	0511017305	FLAT WASHER		08
21	0501010098	3/4" UNC BOLT		04

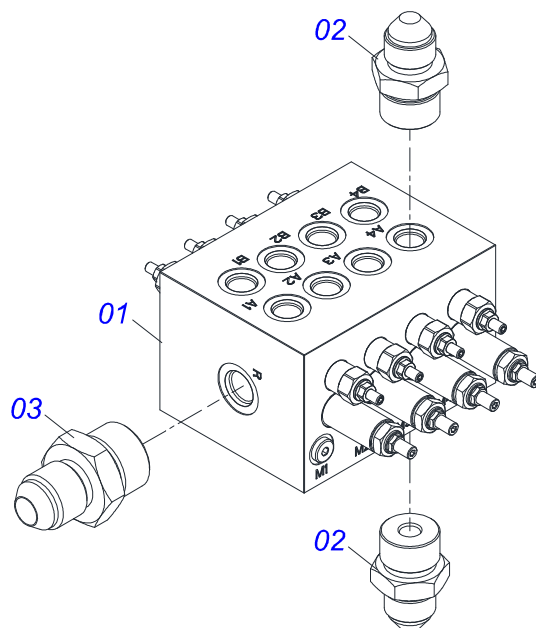


Item	Code	Description	See page	QT
01	0503063488	HYDRAULIC CONTROL BLOCK		01
02	0513011034	ADAPTER TERMINAL MF R7/8 UNF ORING X MF TB12L		12
03	0513010831	ADAPTER TERMINAL MF R.1.1/16		01

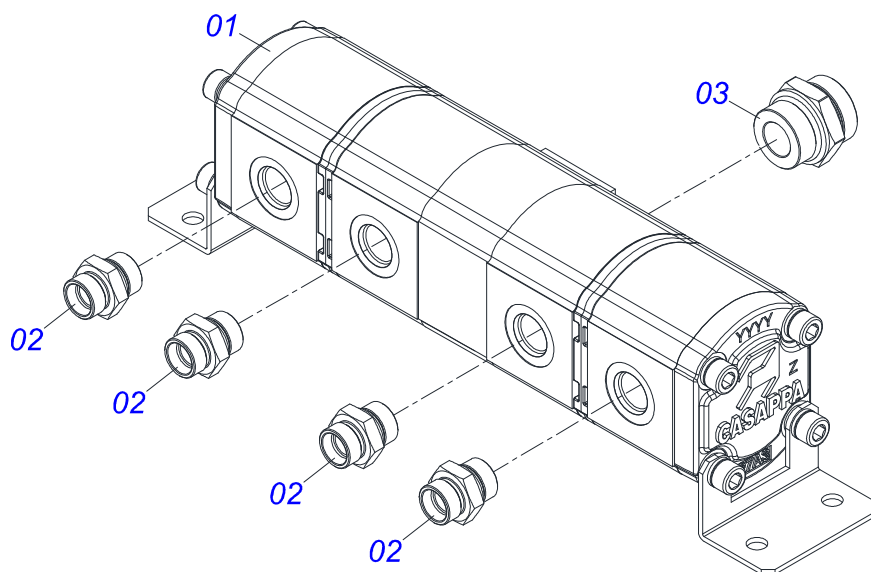


Item	Code	Description	See page	QT
01	0513010747	HYDRAULIC ROTATING DIVIDER		01
02	0513011034	ADAPTER TERMINAL MF R7/8 UNF ORING X MF TB12L		04
03	0513010832	ADAPTER TERMINAL MF R.1.5/16 UNF ORING X TB28		01

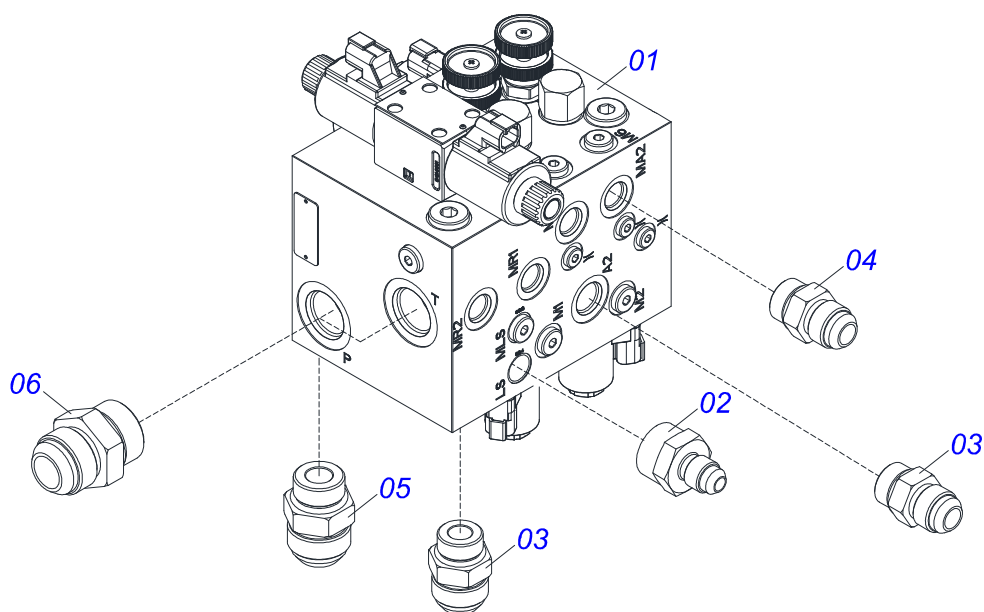


Item	Code	Description	See page	QT
01	0513010721	HYDRAULIC CONTROL BLOCK		01
02	0513010819	ADAPTER TERMINAL MF R.3/4 UNF		02
03	0513010832	ADAPTER TERMINAL MF R.1.5/16 UNF ORING X TB28		04
04	0513010839	ADAPTER TERMINAL MF R.1/4 BSP ORING X MF TB10L		01
05	0513011678	ADAPTER TERMINAL 3/4 UNF ORING X MF TB12L		02
06	0513010818	ADAPTER TERMINAL MF R.7/8 UNF		02

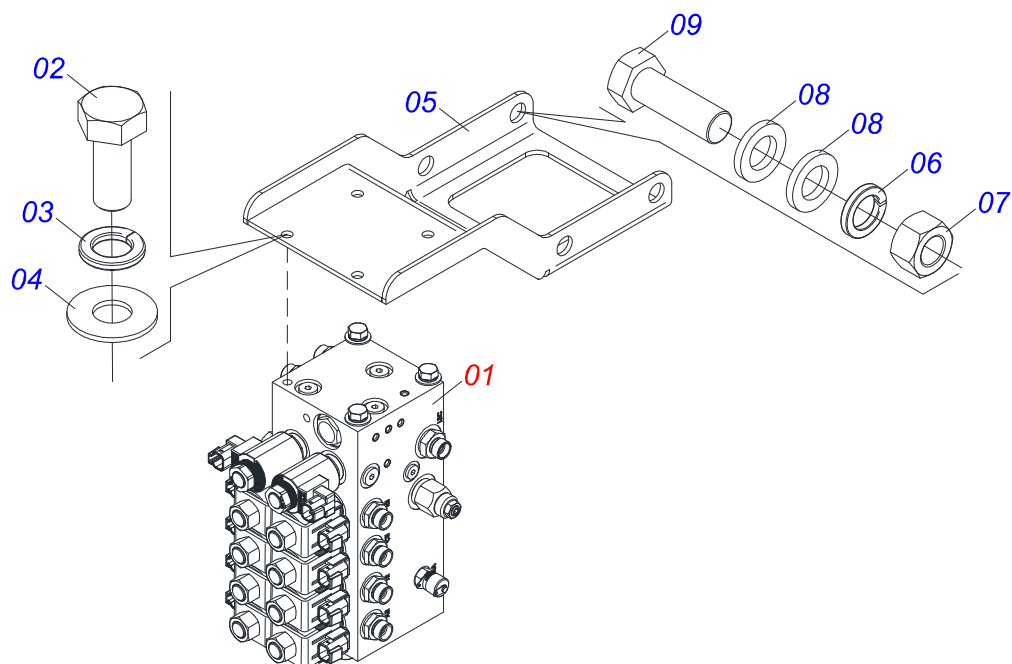

Item	Code	Description	See page	QT
01	0531059986	DRIVE COMMAND BLOCK	58	01
02	0503010172	M10 X 1,5 X 25 BOLT		04
03	0503015075	M10 SPRING WASHER		04
04	0501013518	FLAT WASHER		04
05	0501313063	COMMAND BLOCK SUPPORT		01
06	0503010023	3/4" SPRING WASHER		04
07	0503012183	SNC 3/4" ZIN 1K03097 NUT		04
08	0511015255	FLAT WASHER		08
09	0503011196	3/4" X 2-1/4" BOLT		04

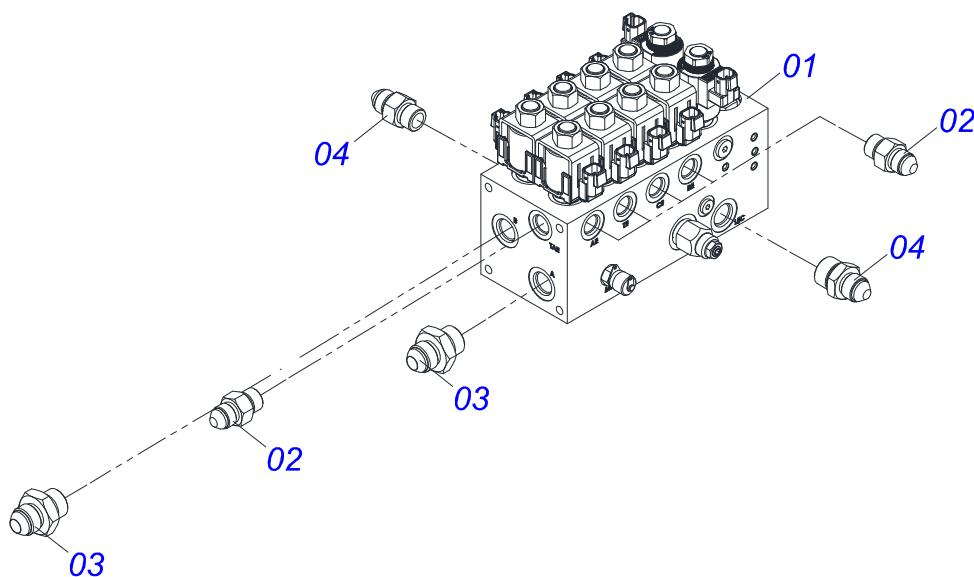


Item	Code	Description	See page	QT
01	0513010678	CYLINDER ACTIVATION CONTROL BLOCK		01
02	0513011678	ADAPTER TERMINAL 3/4 UNF ORING X MF TB12L		11
03	0513010818	ADAPTER TERMINAL MF R.7/8 UNF		03
04	0513011034	ADAPTER TERMINAL MF R7/8 UNF ORING X MF TB12L		02

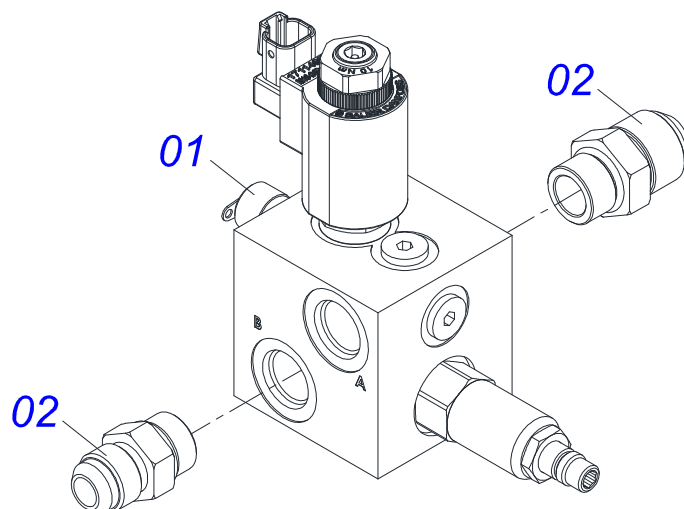


Item	Code	Description	See page	QT
01	0513010676	COMMAND BLOCK		01
02	0513011857	ADAPTER TERMINAL 7/8 UNF ORING X MF TB22		04

HEAT EXCHANGER


0541050504

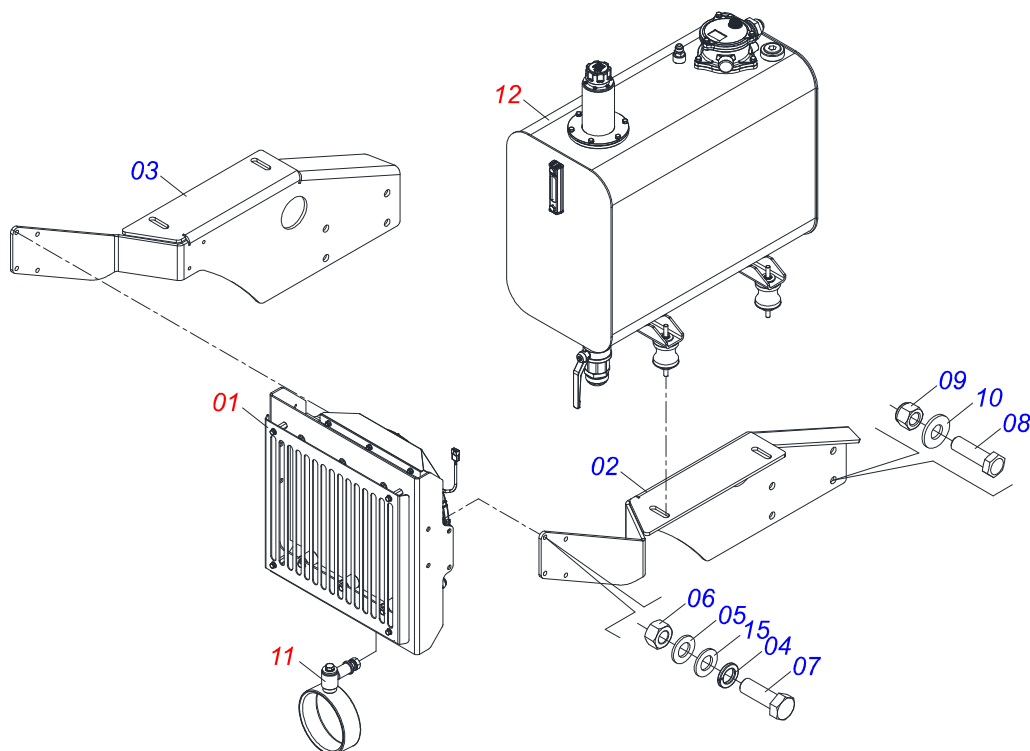


Item	Code	Description	See page	QT
01	0541050012	RADIATOR EQUIPMENT	61	01
02	0501214600	LEFT SUPPORT 180L OIL RESERVOIR		01
03	0501214601	RIGHT SUPPORT 180L OIL RESERVOIR		01
04	0503010019	1/2" SPRING WASHER		07
05	0503011828	FLAT WASHER		15
06	0503010060	1/2 UNC G.5 ZN HEX NUT		08
07	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		08
08	0501010125	3/4" X 2-1/2" BOLT		08
09	0503011075	3/4" UNC NUT		08
10	0501010322	FLAT WASHER		08
11	0531059117	FULL HEAD HOSE STABILIZER	62	01
12	0541050498	TANK 180 LITER	63	01

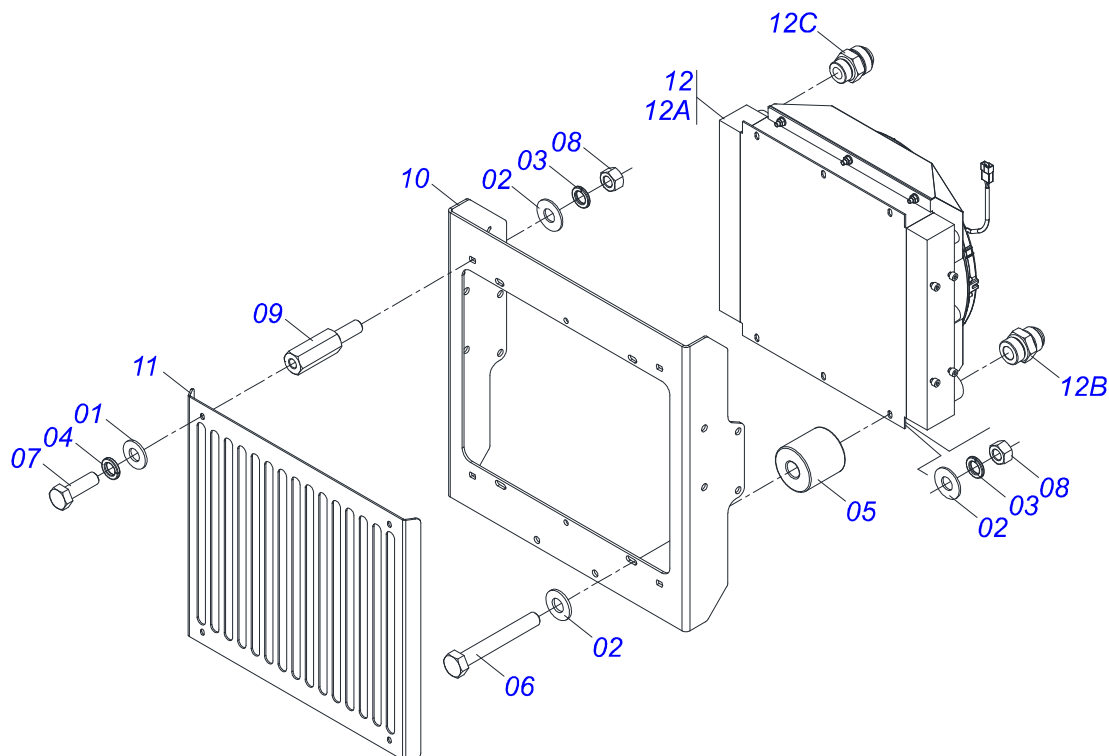


Item	Code	Description	See page	QT
01	0501010694	FLAT WASHER		04
02	0501013518	FLAT WASHER		16
03	0503010025	3/8 SPRING WASHER		10
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
05	0503019952	RUBBER BUSHING 14 X 40 X 40		06
06	0503011268	3/8" X 2-1/2" BOLT		06
07	0503010363	BOLT 5/16 UNC X 1 C S G.2 ZN		04
08	0503010026	3/8" NUT		10
09	0571016789	PRISONER 3/8 UNC X 5/16 UNC X 65		04
10	0501218150	HEAT EXCHANGER SUPPORT		01
11	0591012708	CANVAS RADIATOR PROTECTION		01
12	0541050011	HEAT EXCHANGER		01
12A	0503063086	HEAT EXCHANGER		01
12B	0513010820	ADAPTER TERMINAL MF 1 BSP X TB35		01
12C	0513011688	ADAPTER TERMINAL MF 1 BSP X TB28		01

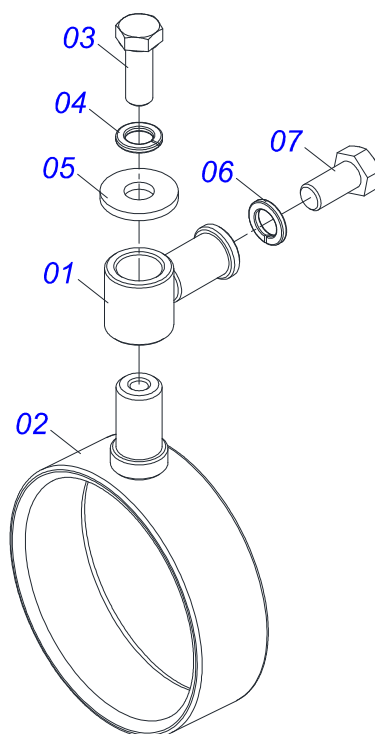


Item	Code	Description	See page	QT
01	0531061934	CONDUCTOR ARTICULATOR GUIDE		01
02	0531061935	CONDUCTOR ARTICULATOR		01
03	0503010237	3/8" X 1" BOLT		01
04	0503010025	3/8 SPRING WASHER		01
05	0501010984	10,50 X 27 X 3,00 FLAT WASHER		01
06	0503010019	1/2" SPRING WASHER		01
07	0503012556	1/2" X 1" BOLT		01

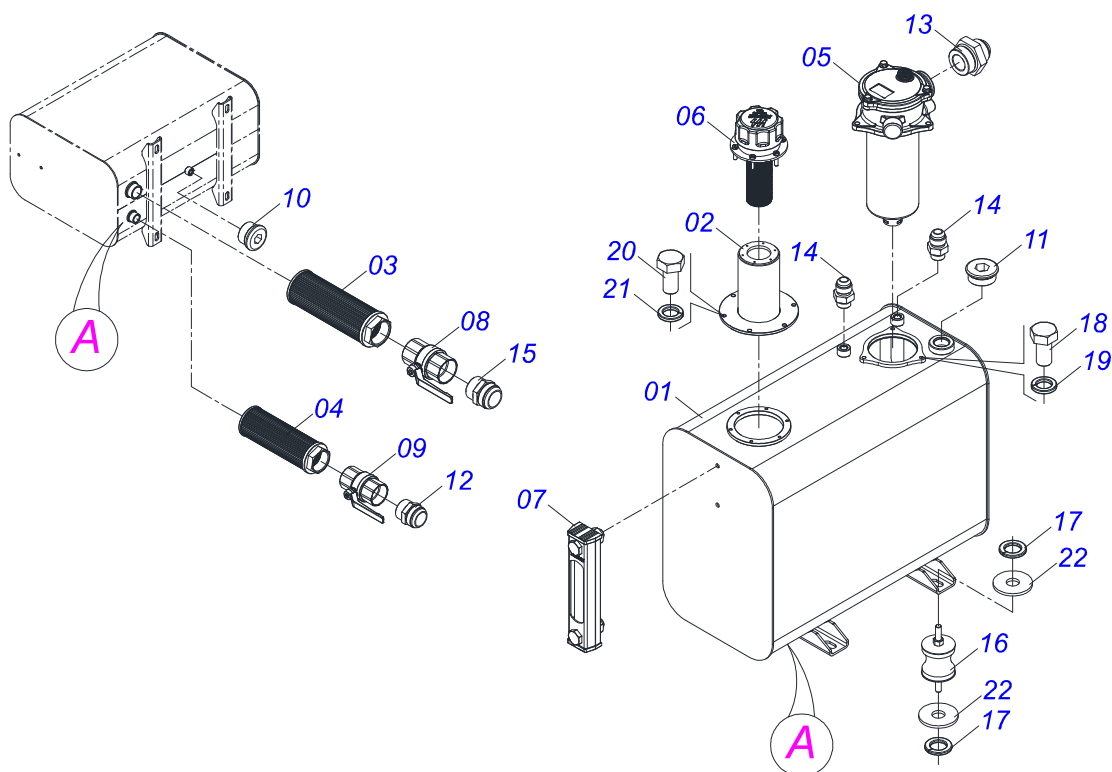


Item	Code	Description	See page	QT
01	0503063771	180 LITER TANK	01	01
02	0503063773	SUPPLY NOZZLE	01	01
03	0503015406	SUCTION FILTER	01	01
04	0513010741	SUCTION FILTER 90 LITERS	01	01
05	0513010698	RETURN FILTER IN TANK 310 LITERS	01	01
06	0513011030	FILLING NOZZLE WITH AIR FILTER AND PRESSURIZATION	01	01
07	0503063547	VISOR LEVEL	01	01
08	0513010029	BALL VALVE 2 NPT 11.5 FPP	01	01
09	0503014250	BALL REGISTRATION 1. 1/4	01	01
10	0503063968	THREADED PLUG 3/4 UNF	01	01
11	0503063970	THREADED PLUG 1.5/16 UNF	01	01
12	0513011852	TERMINAL ADAPTER 1.1/4 BSP X TB22	01	01
13	0513011209	ORIGINAL ER.1.1/2 BSP ADAPTER TERMINAL	01	01
14	0513010819	ADAPTER TERMINAL MF R.3/4 UNF	02	02
15	0513011717	ADAPTER TERMINAL MF 2 BSP X TB42	01	01
16	0513010344	SHOCK ABSORBER/VIBRATION CUSHION	04	04
17	0503015076	M12 SPRING WASHER	08	08
18	0503011334	BOLT 3/8 UNC X 3/4 CS G.5 ZN	03	03
19	0503010025	3/8 SPRING WASHER	03	03
20	0503010295	SCREW 5/16 UNC X 5/8 CS G.2 ZN	06	06
21	0503010179	LOCK WASHER 5/16 ZN 1K01528	06	06
22	0571011721	FLAT WASHER 40 X 13.50 X 3.00	08	08

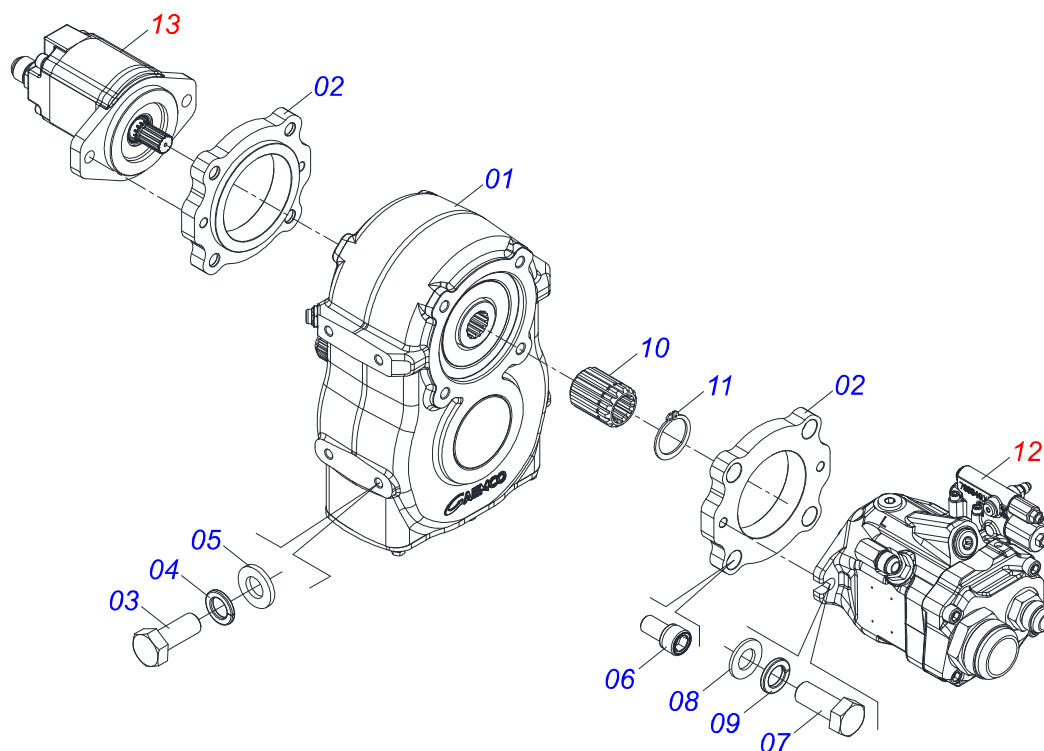


Item	Code	Description	See page	QT
01	0513010710	MULTIPLIER BOX		01
02	0501217531	REDUCTION BOX FLANGE		02
03	0503015140	M12 X 1,75 X 30 BOLT		08
04	0503015076	M12 SPRING WASHER		08
05	0521014188	FLAT WASHER		08
06	0513011013	BOLT ALLEN M14 X 2 X 25MM CCSI		08
07	0503014007	1/2" X 1-1/4" BOLT		04
08	0503011828	FLAT WASHER		04
09	0503010019	1/2" SPRING WASHER		04
10	0513010995	EXTERNAL GROOVED GLOVE 1.1/4 - Z14 X INTERNAL 7/8 Z13 X 42MM		01
11	0503010880	501032 CLAMPING RING (FOR AXLE)		01
12	0541050014	HYDRAULIC PUMP	47	01
13	0541050530	HYDRAULIC PUMP	65	01

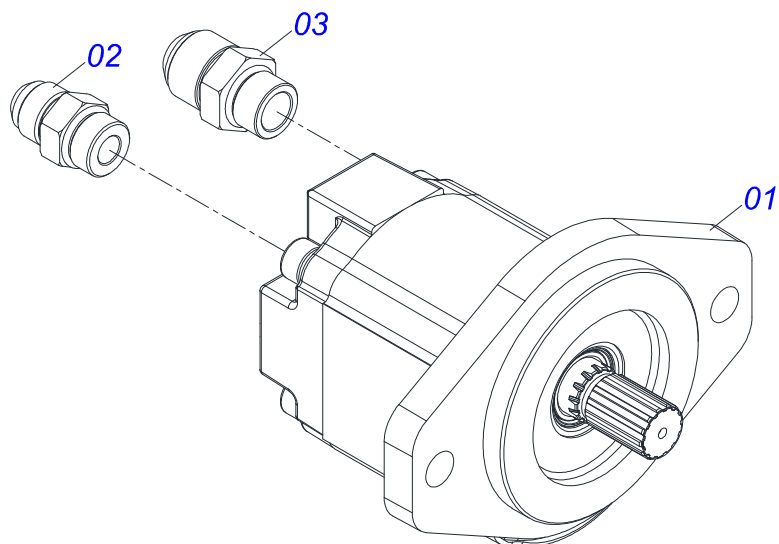

Item	Code	Description	See page	QT
01	0513011033	HYDRAULIC PUMP ENGRE 11CC - BD		01
02	0513011857	ADAPTER TERMINAL 7/8 UNF ORING X MF TB22		01
03	0513010818	ADAPTER TERMINAL MF R.7/8 UNF		01

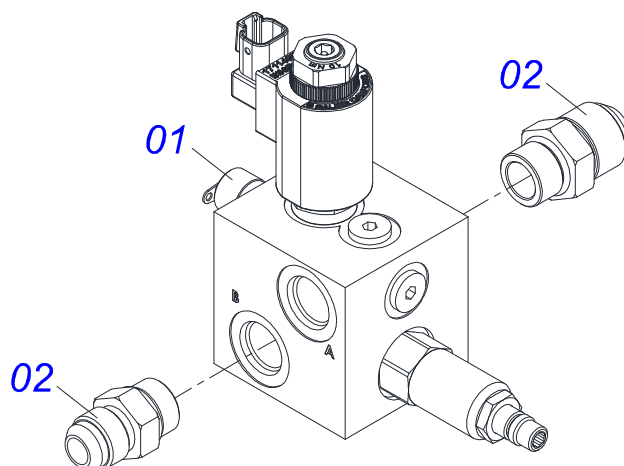


Item	Code	Description	See page	QT
01	0513010676	COMMAND BLOCK		01
02	0513010818	ADAPTER TERMINAL MF R.7/8 UNF		04

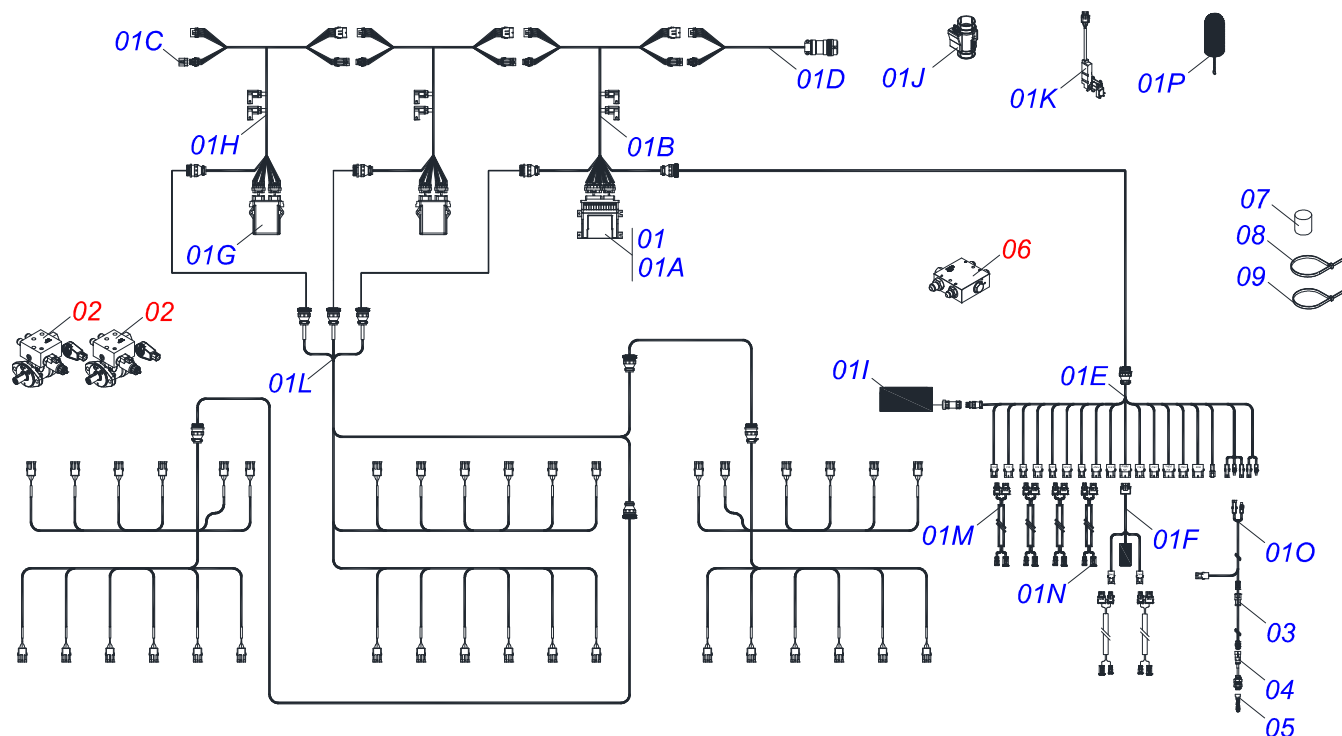


Item	Code	Description	See page	QT
01	0503064166	KIT ISO 6 6 CHANNELS 18 LINES		01
01A	0503019526	CONTROL MODULE ISO6 6CH ADV		01
01B	0503019384	CABLE CTRL MASTER MODULE		01
01C	0503015071	CONNECTOR		01
01D	0503016322	SIMPLE MONITOR CABLE		01
01E	0503019386	MODULES "C"		01
01F	0503019385	WHIP ELETTRIC		01
01G	0503019298	MODULATE BODY		02
01H	0503015210	CABLE MODULO WSMB ISOBUS 467981200		02
01I	0503017443	ANTENNA GPS PM 400		01
01J	0503018932	FLOW FERTILIZER SENSOR		18
01K	0503015218	SENSOR FOTOELE PM 400		18
01L	0503064167	MONITORING CABLE 18 LINES		01
01M	0513010366	EXTENSION CABLE EMD		04
01N	0513010421	EXTENSION CABLE EMD		02
01O	0513010023	EXTERNAL LIFTING CABLE		01
01P	0503017031	CLEANING BRUSH		01
02	0521056496	MOTOR EMD 80 WITH BLOCK BLFP2618	41	06
03	0513011769	EXTERNAL ADAPTER		01
04	0503018775	MAGNET ACTUATOR LH7.4.000091		01
05	0503018774	MAGNETIC SENSOR		01
06	0521054490	FLOW DIVIDING VALVE ASSY	68	01
07	0581014681	SLEEVE		18
08	0503013100	NYLON CLAMP		96
09	0503016033	4.8 X 1.3 X 300 MM NYLON CLAMP		89

FLOW DIVIDING VALVE ASSY


0521054490

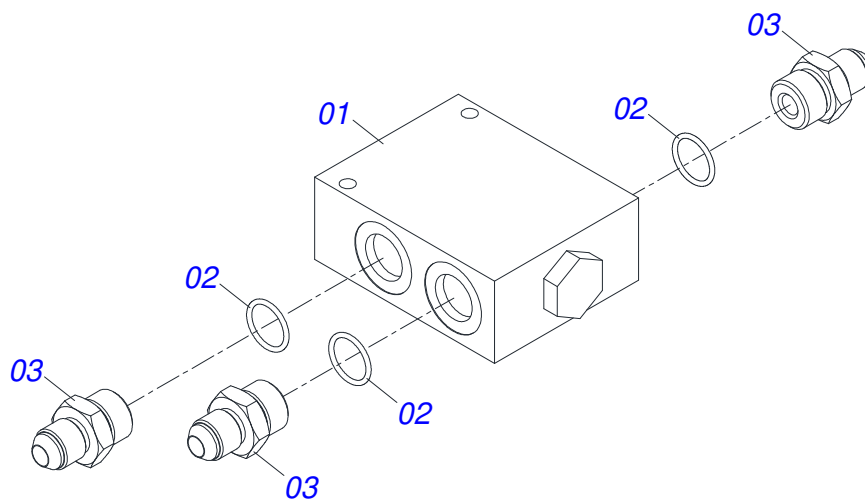


Item	Code	Description	See page	QT
01	0503016227	FLOW DIVIDING VALVE		01
02	0503013917	O'RING 2-224		03
03	0571013917	7/8"NF X 1.1/16 UNF NIPPLE		03

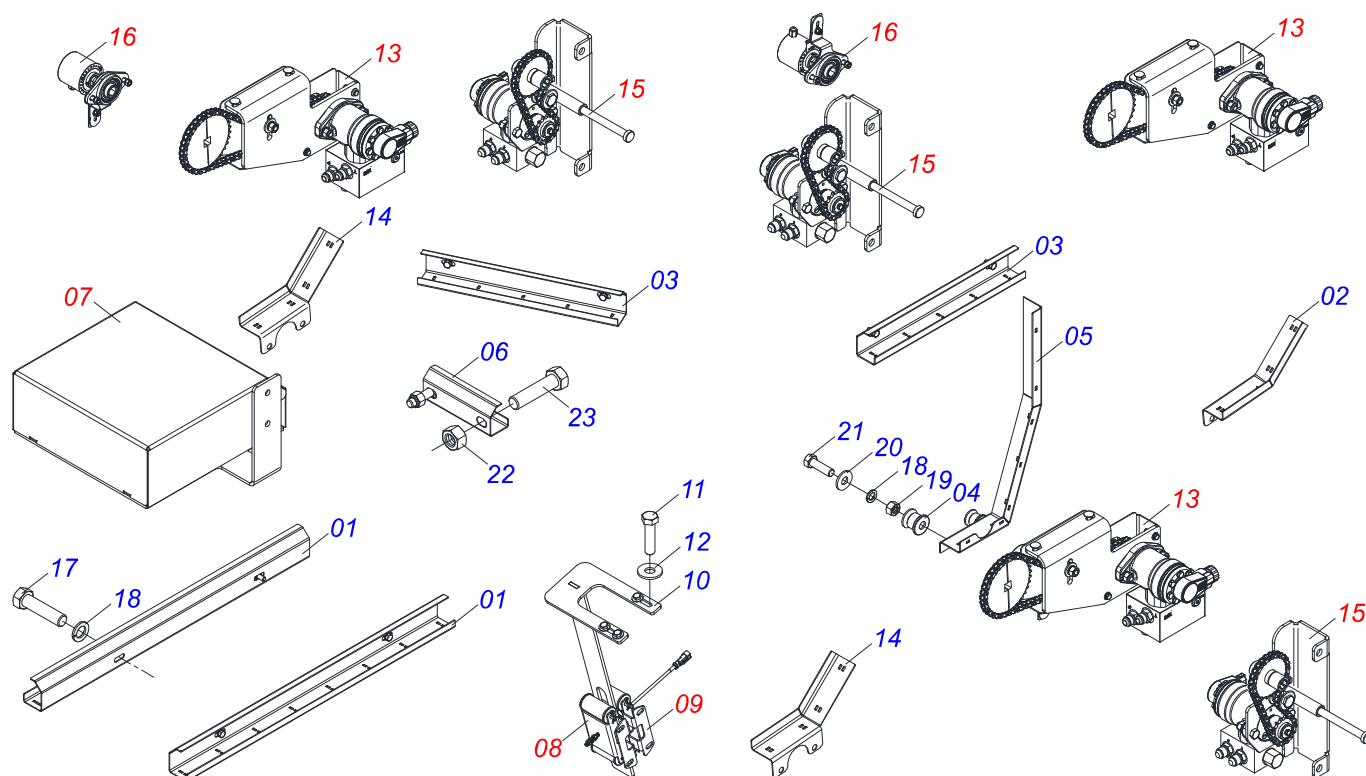


Item	Code	Description	See page	QT
01	0501312548	GUTTER 55 X 50 X 800		02
02	0501313013	LEFT ROW ARTICULATION GUIDE GUTTER		01
03	0501312917	GUTTER 55 X 50 X 450		02
04	0501312922	GLOVE 10.50 X 29 X 24		02
05	0501312920	LEFT SIDE TROUGH		01
06	0501312919	GUTTER 55 X 50 X 200		01
07	0541050552	BOX MODULES	70	01
08	0541050145	GUIDE SET	20	01
09	0541050144	GUÍA SENSOIRES	21	01
10	0531066193	RULER		01
11	0503015321	3/8 UNC X 5/8 C S G.2 ZN BOLT		04
12	0501013518	FLAT WASHER		04
13	0531059147	FERTILIZER ENGINE SUPPORT	22	03
14	0501312918	GUIDE GUTTER ARTICULATION RIGHT ROW		02
15	0531056908	SUPPORT SEED ENGINE	71	03
16	0531056094	ASSY BEARING	72	03
17	0503011334	BOLT 3/8 UNC X 3/4 CS G.5 ZN		08
18	0503010025	3/8 SPRING WASHER		10
19	0503010026	3/8" NUT		02
20	0501016103	FLAT WASHER		02
21	0503011236	3/8" X 2" BOLT		02
22	0503011075	3/4" UNC NUT		02
23	0501010125	3/4" X 2-1/2" BOLT		02

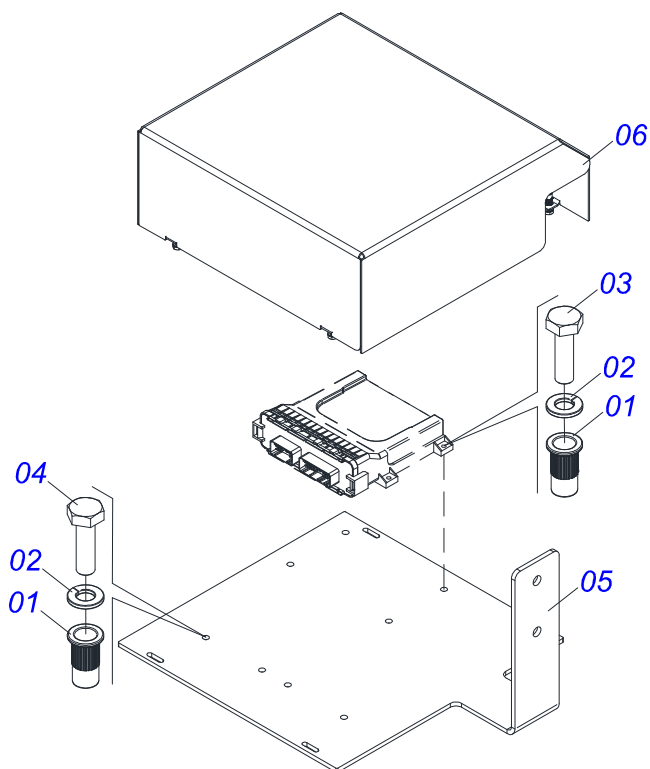


Item	Code	Description	See page	QT
01	0503019412	RIVET SCREW INTERNAL		08
02	0503010143	1/4" SPRING WASHER		08
03	0503013813	1/4" UNC X 7/8" BOLT		04
04	0503010743	1/4" X 1-1/4" BOLT		04
05	0501312916	MODULE BOX BASE		01
06	0541050593	MODULE BOX COVER WITH BOLT		01

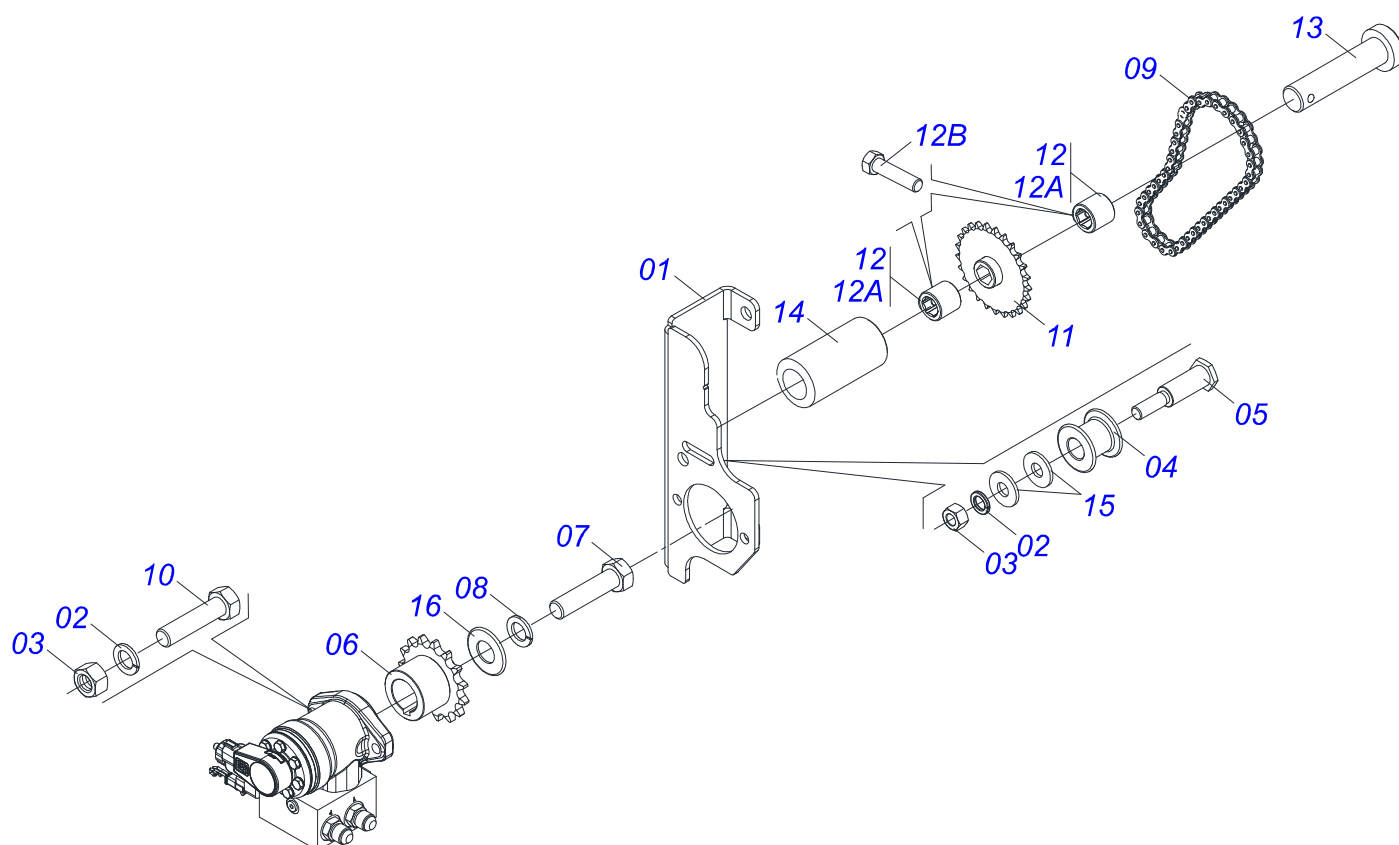


Item	Code	Description	See page	QT
01	0501216999	FIXING PLATE SEED ENGINE	01	
02	0503010019	1/2" SPRING WASHER	03	
03	0503010060	1/2 UNC G.5 ZN HEX NUT	03	
04	0503030402	PULLEY	01	
05	0531019479	AXLE CHAIN GEAR	01	
06	0531064938	GEAR 15Z P12.70 ENGINE	01	
07	0503010282	1/4" X 3/4" BOLT	01	
08	0503010143	1/4" SPRING WASHER	01	
09	0503012706	40-1 CHAIN X 47 LINK + MENDING	01	
10	0503018701	SCREW 1/2 UNC X 1.3/4 CS G.5 ZN	02	
11	0531064937	GEAR 25Z HEX 20	01	
12	0511054314	TRANSMISSION AXLE LOCK SLEEVE	02	
12A	0502012699	TRANSMISSION HUB LOCK SLEEVE	02	
12B	0503010256	3/8" X 3/4" BOLT	02	
13	0501214506	LINE ARTICULATION LOCK PIN	01	
14	0501214505	GLOVE	01	
15	0501217026	FLAT WASHER 13,50 X 32,50 X 3,00 ZN	02	
16	0501217025	FLAT WASHER 8,70 X 28,50 X 2,00 ZN RCEM	01	

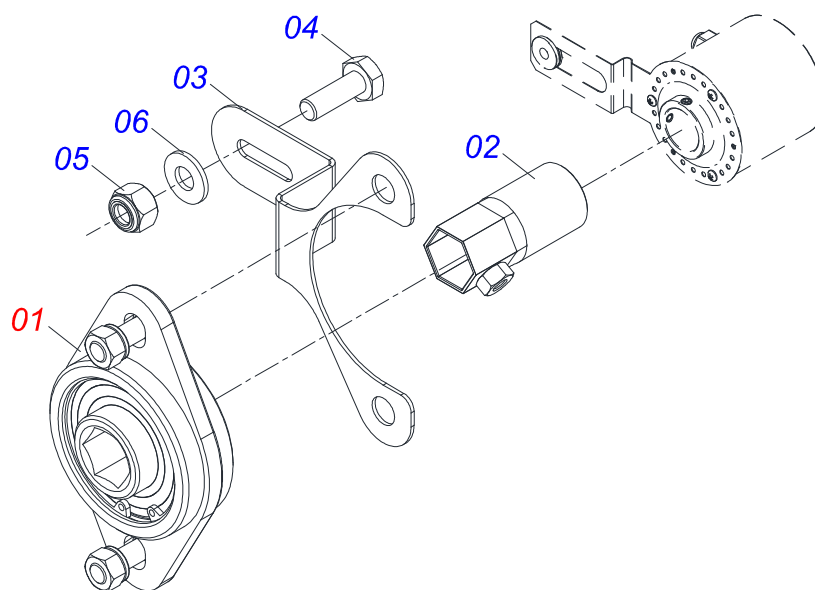

Item	Code	Description	See page	QT
01	0521055372	ROW SEED BEARING	73	01
02	0531063569	ENCODER DRAG GLOVE		01
03	0501215449	ENCODER LOCK		01
04	0503010282	1/4" X 3/4" BOLT		01
05	0503014876	NUT PARLOCK 1/4"		01
06	0511017303	FLAT WASHER		01

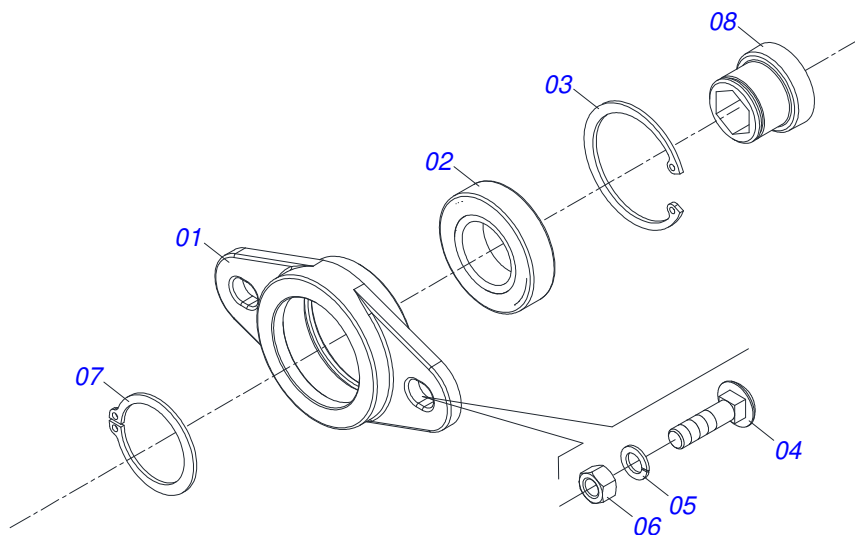


Item	Code	Description	See page	QT
01	0581017857	HOUSING BEARING		01
02	0503019361	BEARING 6006 RS1		01
03	0503012858	502075 CLAMPING RING (FOR HOLE)		01
04	0503011953	5/16" X 1" BOLT		02
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
06	0503010337	5/16" NUT		02
07	0503010707	501030 CLAMPING RING (FOR AXLE)		01
08	0581019823	BEARING AXLE BODY WITHOUT LUBRICATION		01

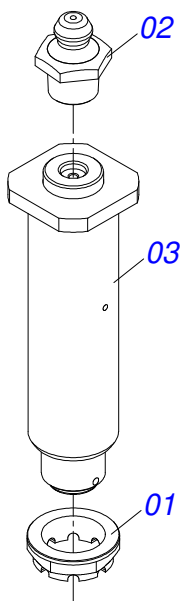

Item	Code	Description	See page	QT
01	0502040080	FLANGE NUT R.2.1/2 UN		01
02	0503010002	1800 GREASE FITTING		01
03	0531061664	LOCK AXIS		01

ASSY REAR HEADLIGHT


0521059839

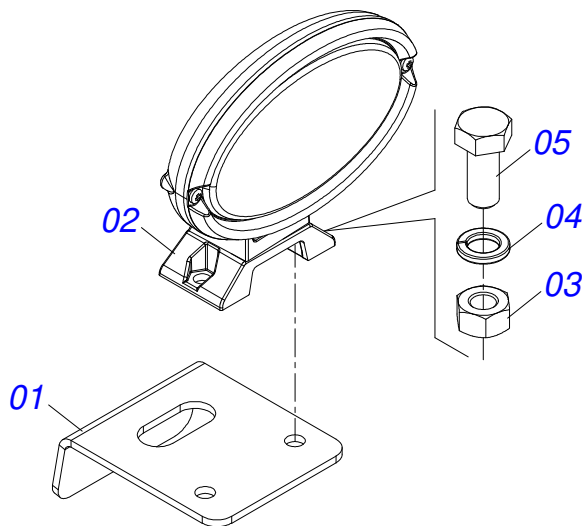


Item	Code	Description	See page	QT
01	0591016055	REAR HEADLIGHT SUPPORT		01
02	0503018738	HEADLIGHT		01
03	0503010337	5/16" NUT		02
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
05	0503016506	5/16 UNC X 3/4 C S G.5 ZN BOLT		02

RIGHT LADDER SET


0531052853

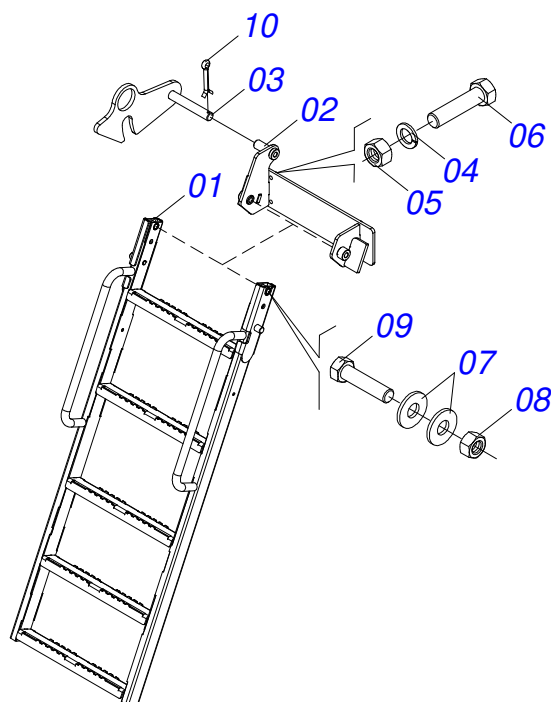


Item	Code	Description	See page	QT
01	0531061615	MOBILE LADDER		01
02	0531062924	RIGHT STAIR SUPPORT		01
03	0531062925	RIGHT LOCK LADDER		01
04	0503010025	3/8 SPRING WASHER		04
05	0503010026	3/8" NUT		04
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
07	0501010937	13,50 X 28 X 3,00 FLAT WASHER		04
08	0503010589	1/2" UNC SELF ADJUSTING NUT		02
09	0503010752	1/2" X 3.1/2" BOLT		02
10	0503010140	1/8" X 3/4" COTTERPIN		01

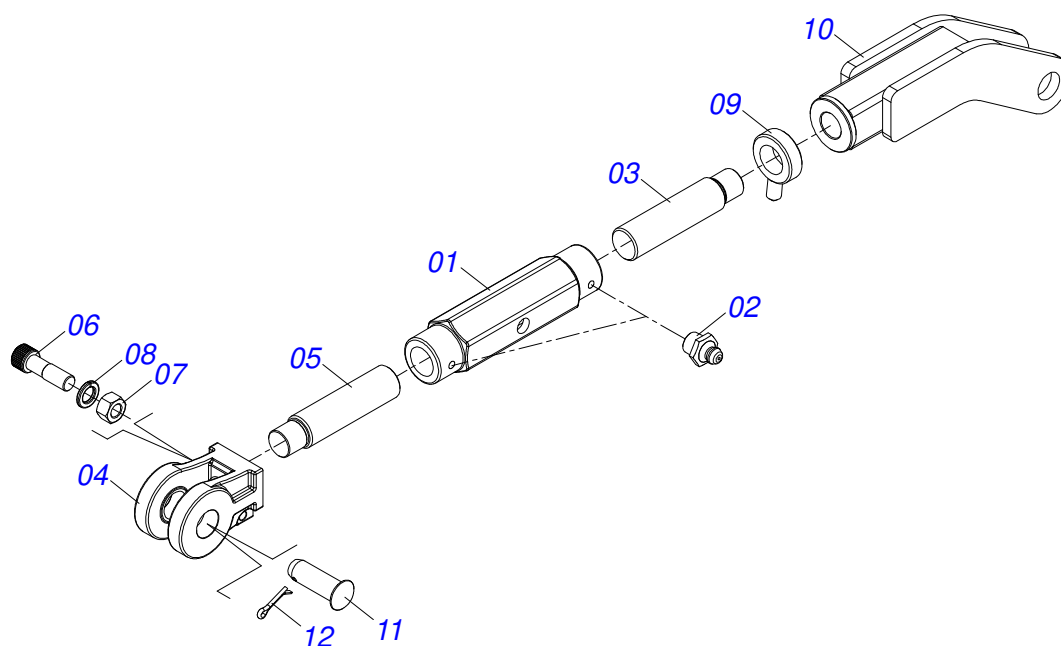


Item	Code	Description	See page	QT
01	0502011195	ADJUSTMENT NUT BODY		01
02	0503010002	1800 GREASE FITTING		02
03	0551013654	SPINDLE R.1.1 / 4 X R.1.1 / 2 RIGHT X 165		01
04	0502040747	32.54 CLEVIS CLAMP		01
05	0551013653	SPINDLE R.1.1 / 4 X LEFT X.1.1 / 2 X 165		01
06	0503011094	3/8" X 2" BOLT		01
07	0503010026	3/8" NUT		01
08	0503011443	3/8" SPRING WASHER		01
09	0501061056	RH LOCKNUT WITH HANDLER		01
10	0531062137	SIDE FERTILIZER BOX EXTENSOR		01
11	0521010779	31.75 X 95 COUPLING SHAFT		01
12	0503010571	1/4" X 1.1/2 COTTERPIN		01

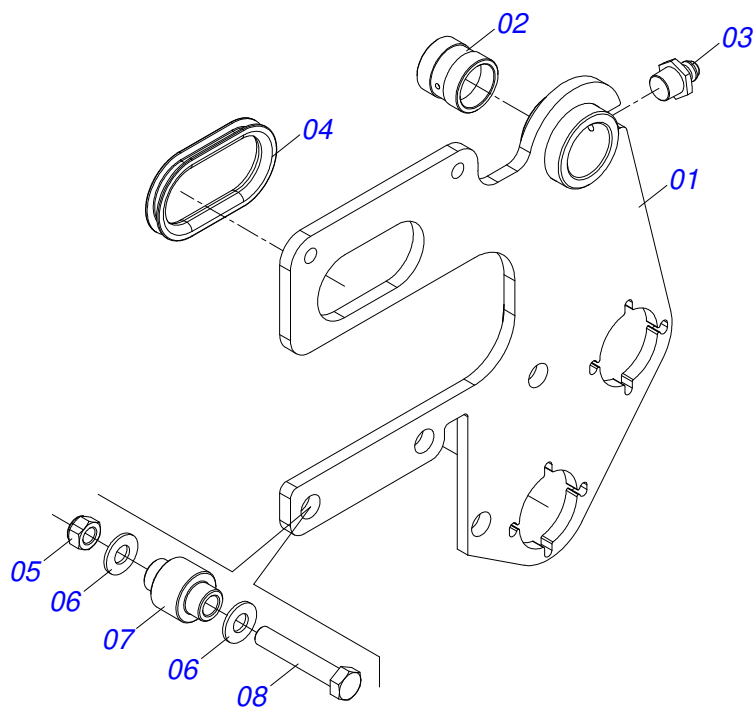


Item	Code	Description	See page	QT
01	0531062471	TRANSMISSION SUPPORT		01
02	0591018936	GLOVE		01
03	0503010002	1800 GREASE FITTING		01
04	0503035468	HOSE PROTECTION		01
05	0503013389	5/8" SELF LOCKING NUT		04
06	0591011409	FLAT WASHER 16,5 X 35 X 3,00		08
07	0501210580	LARGER FIXER GLOVE		04
08	0501013867	BOLT 5/8 UNC X 6 CS G.5 ZN		04

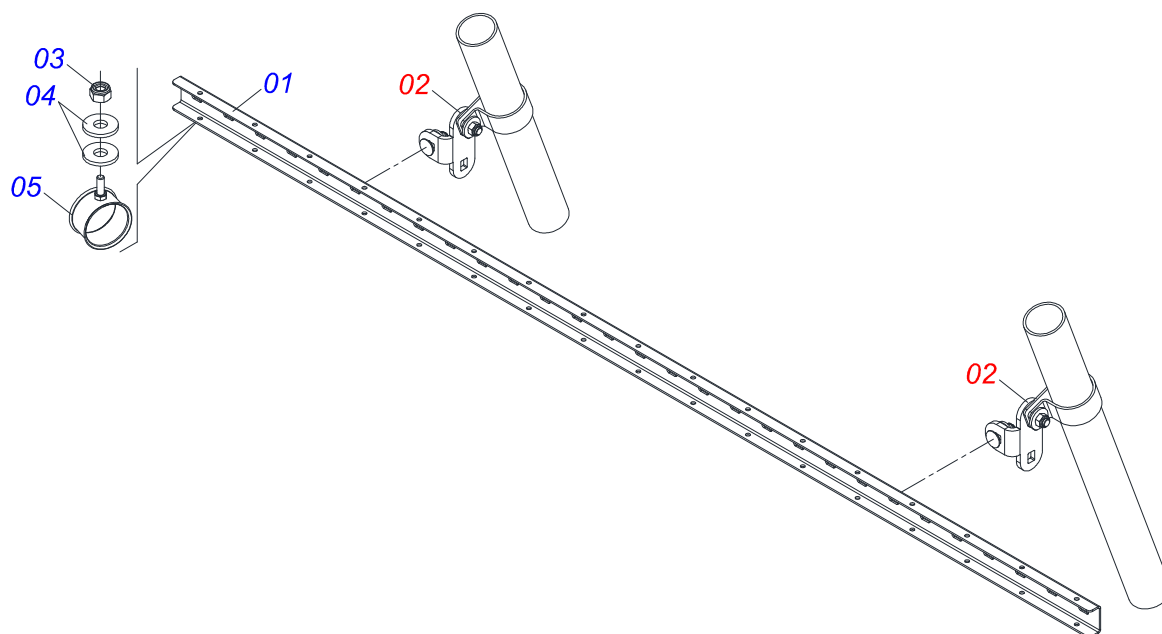


Item	Code	Description	See page	QT
01	0501210044	FERTILIZER GUTTER		01
02	0531055920	MINOR DUCT COMPLETE FERTILIZER	80	06
03	0503013357	3/8 SELF-ADJUSTING NUT		06
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		12
05	0531062574	GUIDE		06

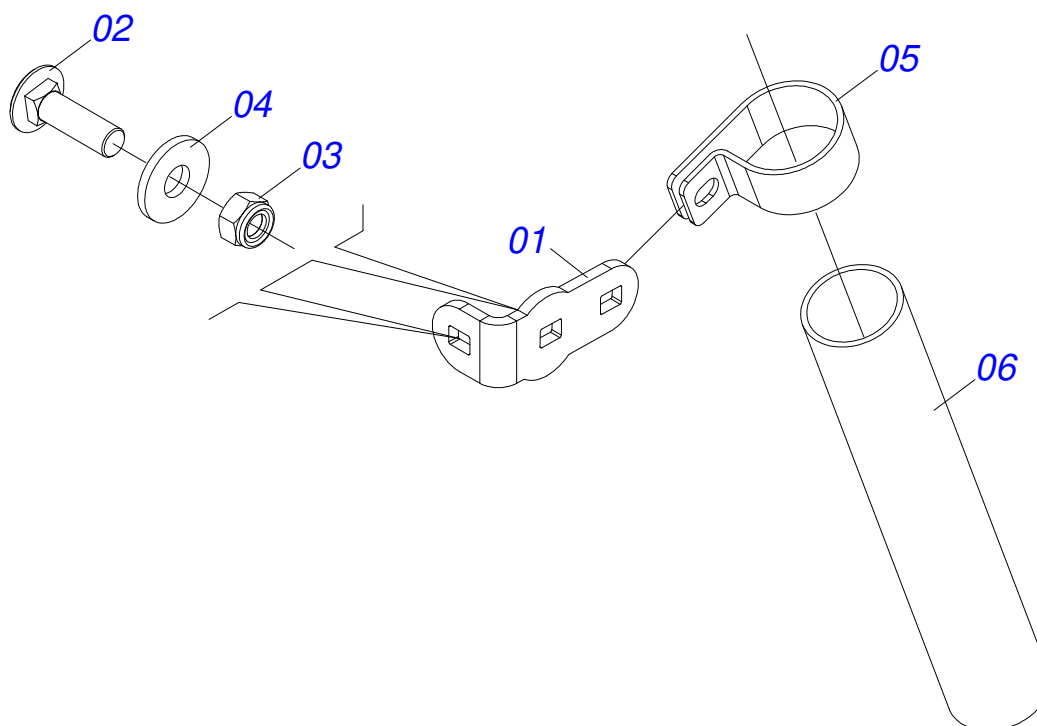


Item	Code	Description	See page	QT
01	0501215024	TUBE FIXER BODY		01
02	0501010942	3/8" X 1-1/4" BOLT		02
03	0503013357	3/8 SELF-ADJUSTING NUT		02
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
05	0591015578	CLAMP		01
06	0591018876	SHORT FERTILIZER DISTRIBUTOR TUBE		01

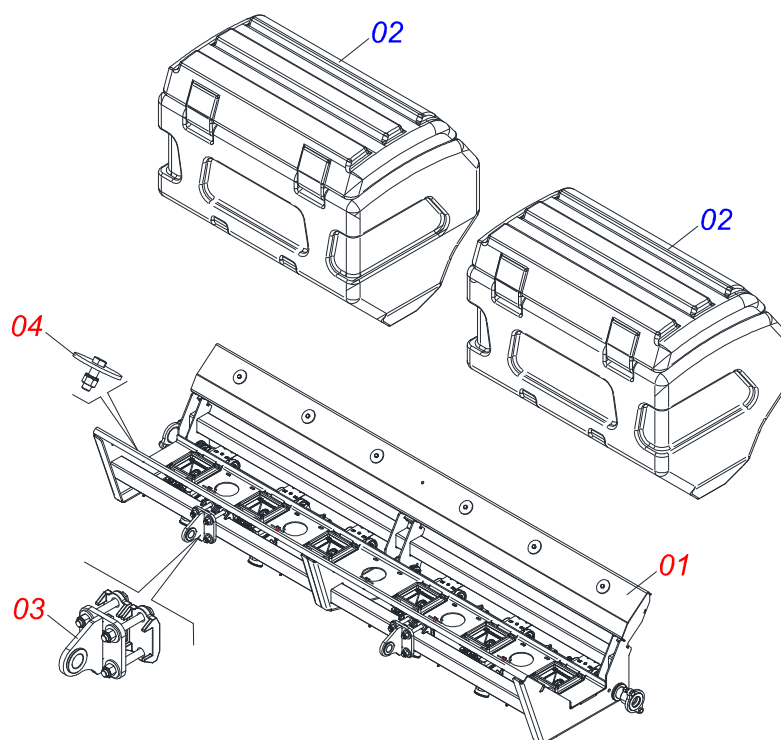

Item	Code	Description	See page	QT
01	0531057185	RIGHT SIDE SILO 06 MOUTH	82	01
02	0503063507	COMPLETE SILO 03 MOUTHS 540L		02
03	0531050918	TOP SUPPORT MOUNTED LIFT EXTENSOR	91	02
04	0521051407	FERTILIZER HOPPER FIXER	92	12

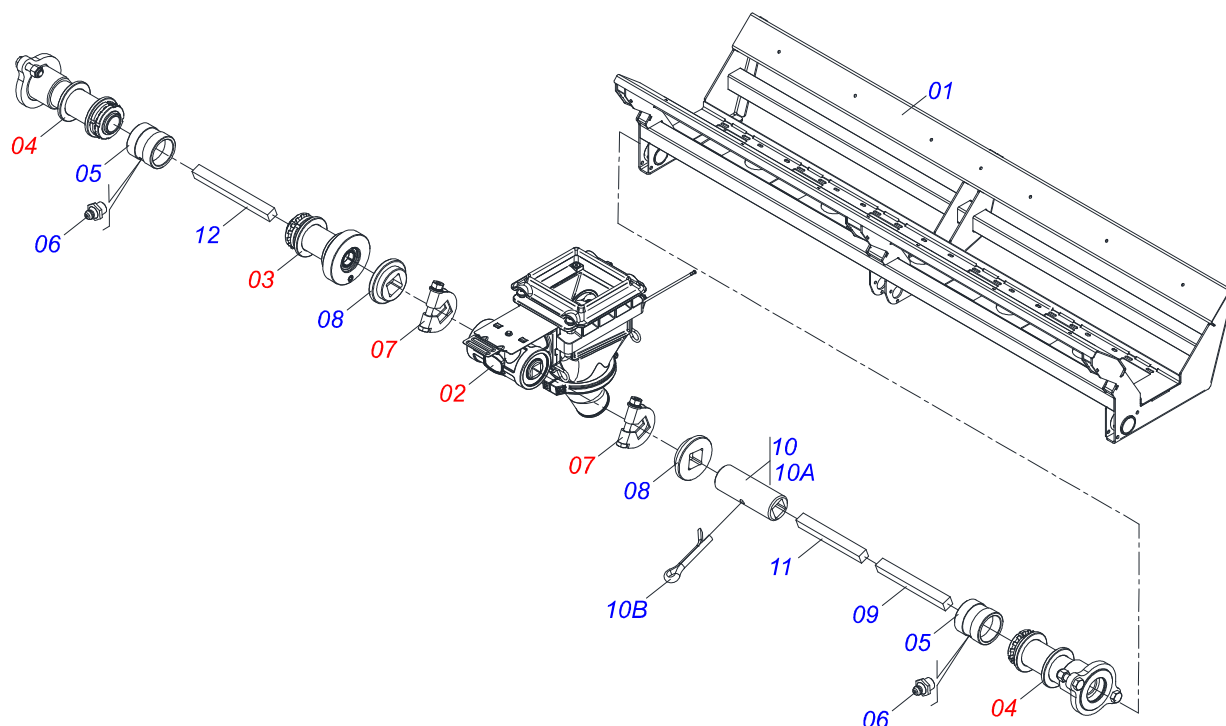


Item	Code	Description	See page	QT
01	0531065080	SUPPORT SILO 09 BOUTES		01
02	0531059144	FERTILIZER DOSER ALPHA II	83	06
03	0531051685	CENTRAL BEARING SHAFT	88	01
04	0531051684	SIDE AXLE	89	02
05	0591018936	GLOVE		02
06	0503010002	1800 GREASE FITTING		02
07	0501053788	3/4" SQUARE AXLE FASTENER	90	04
08	0503031527	AGRICULTURAL BEARING		04
09	0501218575	SQUARE AXIS 3/4 X 730MM WITH RELIEVE		01
10	0531057908	SLEEVE 1/4 X 2		03
10A	0502013069	SLEEVE 21 X 38 X 50		01
10B	0503010010	1/4" X 2.1/2" COTTERPIN		01
11	0501218576	AXIS SQUARE 3/4 X 910MM		01
12	0501218487	3/4 X 390 AXLE		02

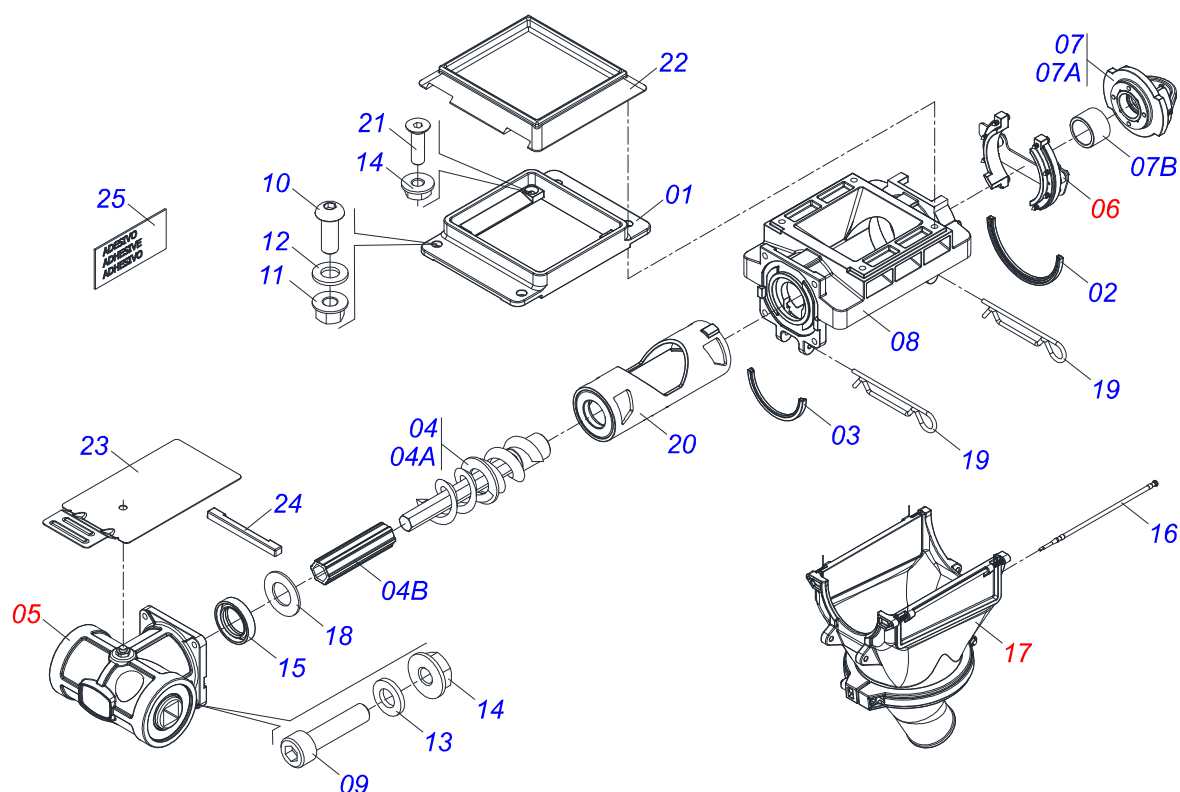


Item	Code	Description	See page	QT
01	0503035913	METERING BODY FIXING ADAPTER		01
02	0503035911	REAR COLLECTOR SEAL		01
03	0503035912	FRONT COLLECTOR SEAL		01
04	0531055518	WORM THREAD ASSEMBLED		01
04A	0531064265	WORM THREAD		01
04B	0503035859	SUPPORT SLEEVE		01
05	0531055863	ASSY TRANSMISSION HUB	84	01
06	0531055875	ALPHA II FERTILIZER FIXING GUIDE SET	85	01
07	0501111134	LID WITH ALPHA FERTILIZER METERING GUIDE SLEEVE		01
07A	0503063799	LID WITH FERTILIZER METERING WASHER ALPHA		01
07B	0503035822	GUIDE SLEEVE SPRING CONDUCTOR		01
08	0501214337	FERTILIZER METERING BOX		01
09	0513011169	ALLEN SCREW 1/4 UNC X 1 CCSI STAINLESS STEEL		04
10	0513011172	ALLEN SCREW 3/8 UNC X 1 CASI STAINLESS STEEL		04
11	0513011173	NUT 3/8 UNC X 1		04
12	0513011174	FLAT WASHER 10.50 X 20 X 2.00 STAINLESS STEEL		05
13	0513011167	FLAT WASHER 6.4 X 12 X 1.60 STAINLESS STEEL		04
14	0513011171	1/4 NC HEX NUT		08
15	0503036181	30 X 47 X 6.50 SEAL SUPPLEMENT		01
16	0503036177	LID CORD		01
17	0531059138	COMPLETE COLLECTOR	86	01
18	0501310274	FLAT WASHER 46.10 X 32 X 0.80		01
19	0503035797	FRONT COLLECTOR FIXER		02
20	0501111195	GRANULATED FERTILIZER COATING		01
21	0513010692	ALLEN SCREW 1/4 UNC X 7/8 C FLAT SI INOX		04
22	0503036306	FERTILIZER DOSER SEAL		01
23	0501312601	FRONT COVER		01
24	0501312603	FRAME SEALING TAPE		01




Item	Code	Description	See page	QT
25	0503036206			01

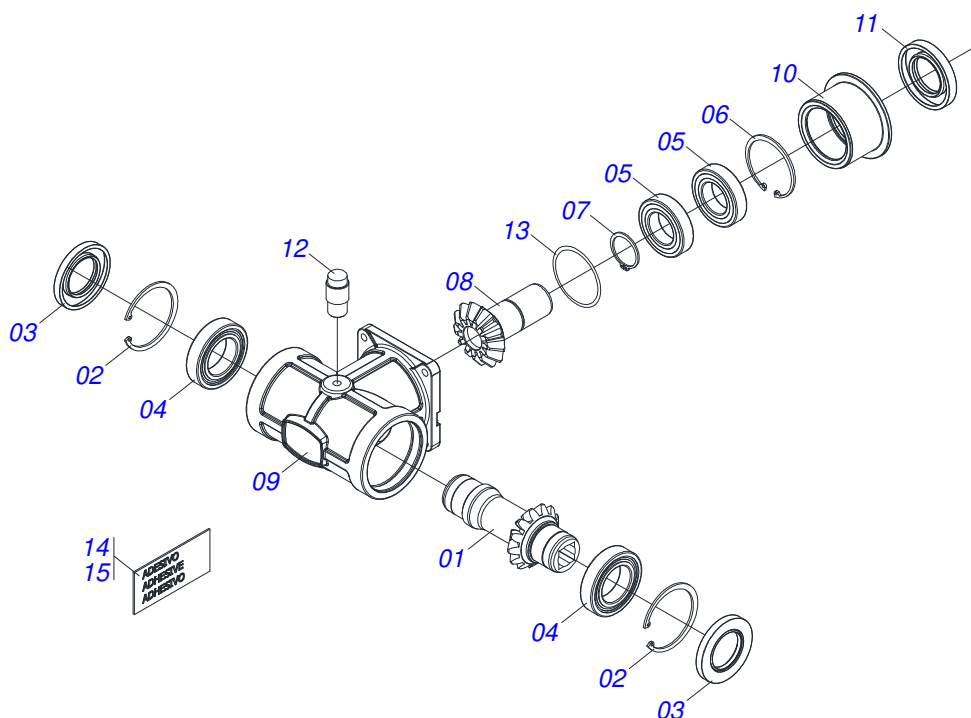


Item	Code	Description	See page	QT
01	0502013056	CONICAL PINION MOTOR 13Z ALPHA FERTILIZER METERING		01
02	0503011800	SEAL RING		02
03	0513010740	RETAINER 62 X 35 X 7 BRG 7159		02
04	0503016065	ROLLER BEARING		02
05	0503019373	6006 2RS1 NATIONAL BEARING		02
06	0503012858	502075 CLAMPING RING (FOR HOLE)		01
07	0503010707	501030 CLAMPING RING (FOR AXLE)		01
08	0501111141	GEAR WITH ALPHA FERTILIZER METERING CAP		01
09	0501215105	METERING TRANSMISSION HUB		01
10	0501215104	TRANSMISSION HUB SLEEVE		01
11	0513011272	SEAL 7435-BRG 30 X 55 X 8.00MM		01
12	0501219613	FIXER BREATHER COVER		01
13	0513011248	RING RING 62.00 X 1.50		01
14	0503036071	TATU LOGO ADHESIVE LABEL 41.5 X 29		01
15	0503035316	LUBRICATED POINTS ADHESIVE LABEL		01

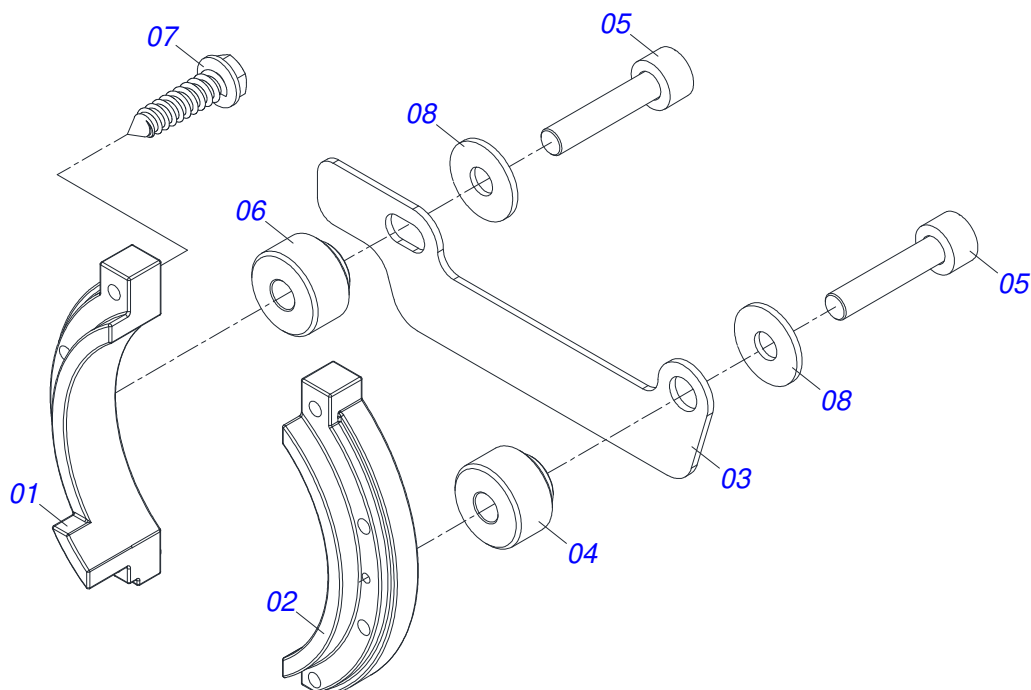


Item	Code	Description	See page	QT
01	0503035915	RIGHT GUIDE DOSING COVER		01
02	0503035916	LEFT GUIDE DISPENSER COVER		01
03	0501310245	ALPHA FERTILIZER DISPENSER COVER LATCH		01
04	0501310247	LEFT SAFETY LOCK SLEEVE		01
05	0513011249	ALLEN SCREW M4 X 20 CCSI STAINLESS STEEL		02
06	0501310246	RIGHT SAFETY LOCK SLEEVE		01
07	0513011507	FLANGED HEX SCREW AT 3.5 X 19 STAINLESS STEEL		08
08	0513011518	FLAT WASHER M4 STAINLESS STEEL AISI 304 4.3 X 12 X 1 MM		01

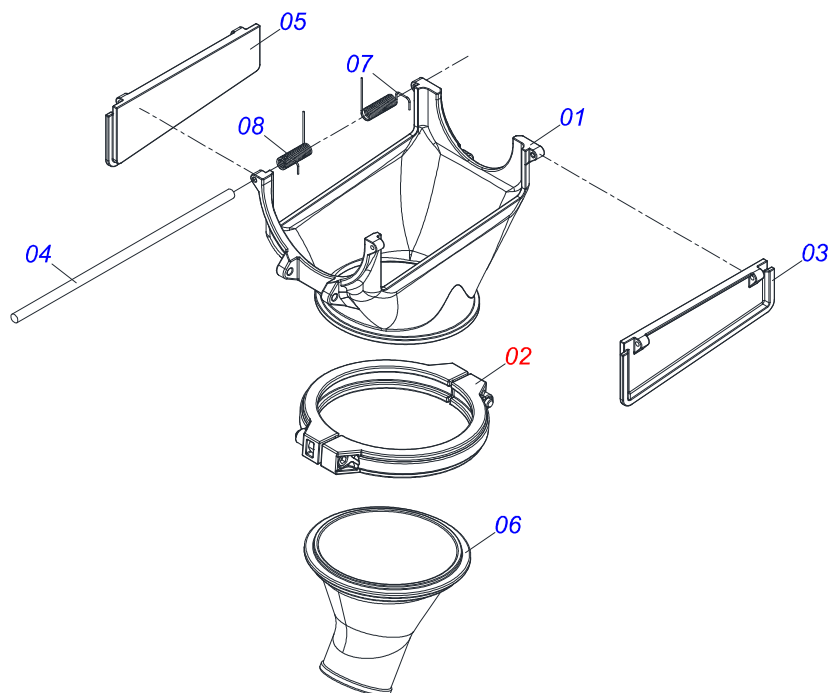


Item	Code	Description	See page	QT
01	0503036178	DISPENSER SIDE COVER COLLECTOR		01
02	0531055273	ALPHA FERTILIZER METERING CLAMP	87	01
03	0503036166	DISPENSER RIGHT SIDE COVER		01
04	0501219838	COLLECTOR SIDE LID AXLE		02
05	0503036167	DISPENSER LEFT SIDE COVER		01
06	0503036179	FERTILIZER DOSING NOZZLE		01
07	0503036202	LEFT TORSION SPRING SIDE COVER		02
08	0503036203	RIGHT TORSION SPRING DISPENSER SIDE COVER		02

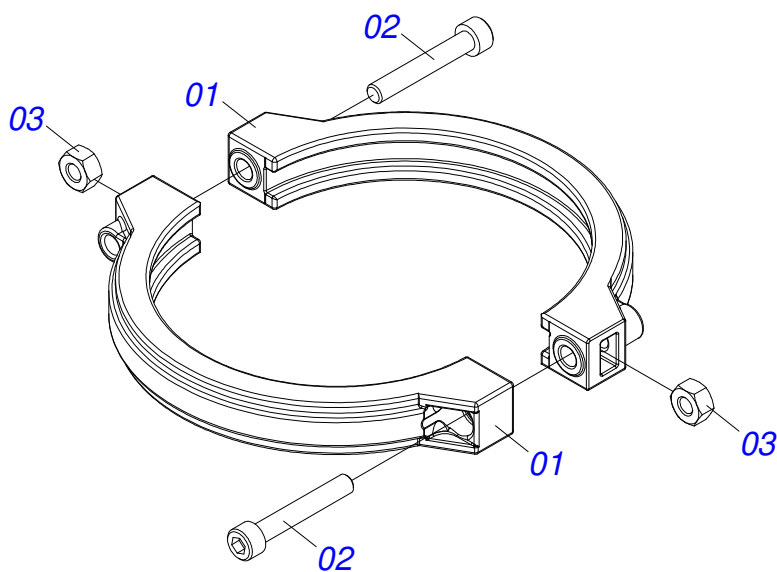

Item	Code	Description	See page	QT
01	0503035812	BODY CLAMP COLLECTOR FERTILIZER METERING ALPHA		02
02	0513010691	ALLEN SCREW 1/4 UNC X 1.1/2 CCSI INOX		02
03	0503012118	1/4" INOX NUT		02

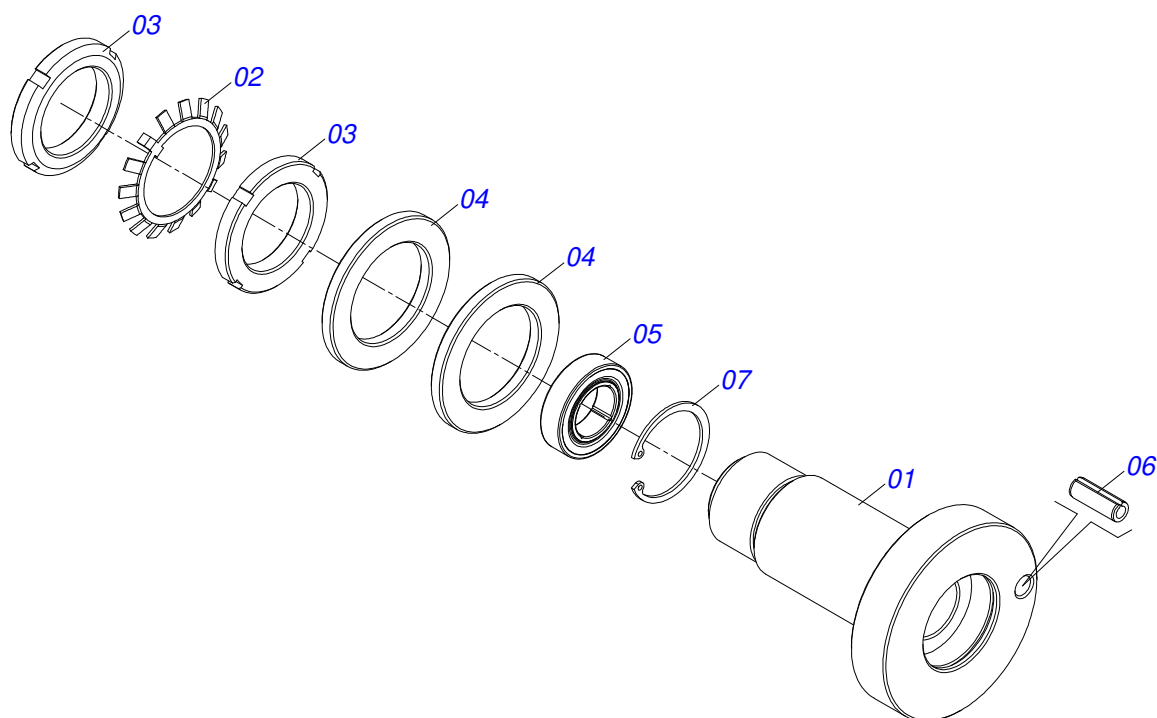


Item	Code	Description	See page	QT
01	0591018964	MINOR ARTICULATED AXLE		01
02	0503010329	LOCK WASHER		01
03	0503010330	KM 9 LOCKNUT		02
04	0591015365	RING		02
05	0503013462	BEARING WITH BALL BEARING		01
06	0503011373	0.4" X 1.1" SPRING PIN		01
07	0503011105	SEAL RING		01

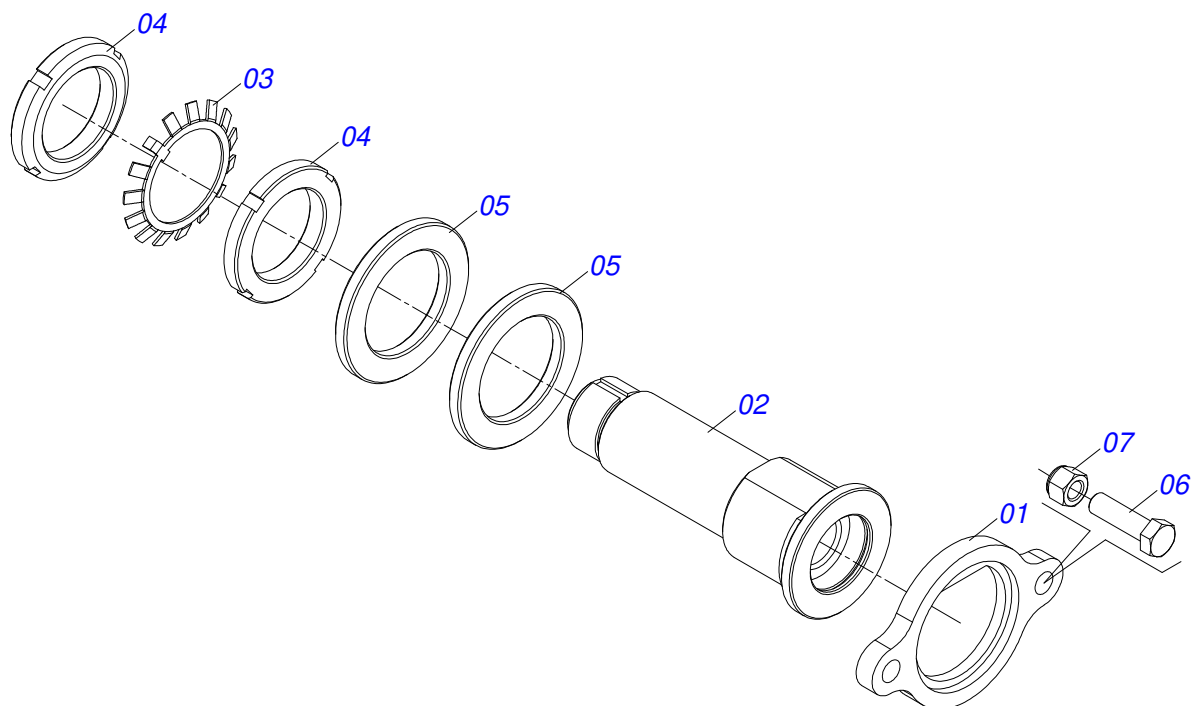


Item	Code	Description	See page	QT
01	0591018938	LOCK		01
02	0591018963	BIGGER ARTICULATED AXLE		01
03	0503010329	LOCK WASHER		01
04	0503010330	KM 9 LOCKNUT		02
05	0591015365	RING		02
06	0503018701	SCREW 1/2 UNC X 1.3/4 CS G.5 ZN		02
07	0503010589	1/2" UNC SELF ADJUSTING NUT		02

3/4" SQUARE AXLE FASTENER


0501053788

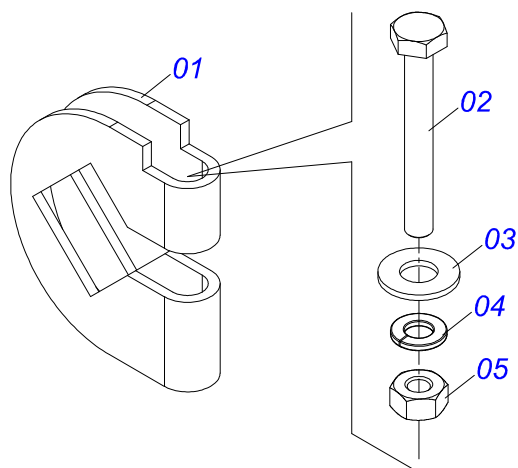


Item	Code	Description	See page	QT
01	0521010691	AXLE FASTENER		01
02	0503010373	SCREW 1/4 UNC X 2 CS G.2 ZN		01
03	0511017303	FLAT WASHER		01
04	0503010143	1/4" SPRING WASHER		01
05	0503010144	1/4" NUT		01

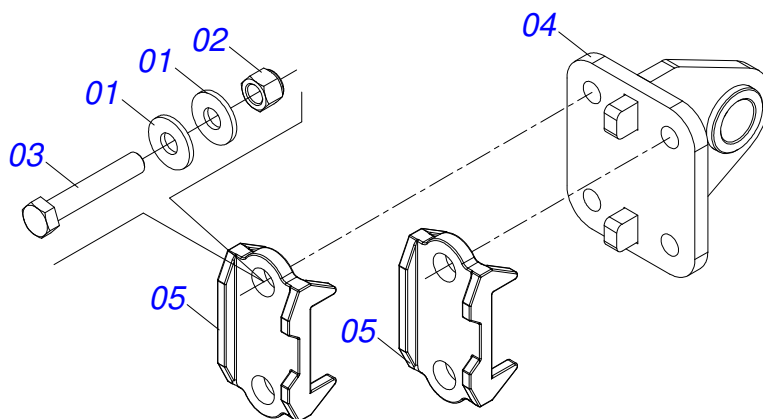


Item	Code	Description	See page	QT
01	0501012140	FLAT WASHER		08
02	0503010811	5/8" UNF SELF ADJUSTING NUT		04
03	0503018814	SCREW 5/8 UNF X 5" G.5 CS ZN		04
04	0531062173	LIFT EXTENSOR TOP SUPPORT		01
05	1902011170	FIXER		02

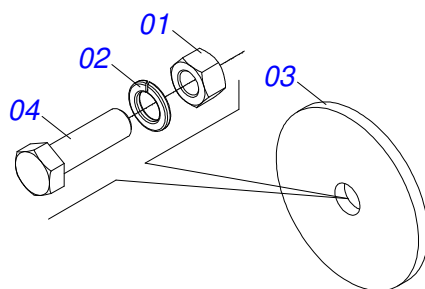


Item	Code	Description	See page	QT
01	0503012531	3/8" INOX NUT		01
02	0503012535	3/8" SPRING WASHER		01
03	0571019051	FIXER HOPPER WASHER		01
04	0503013751	3/8 UNC X 1.1/4 BOLT		01

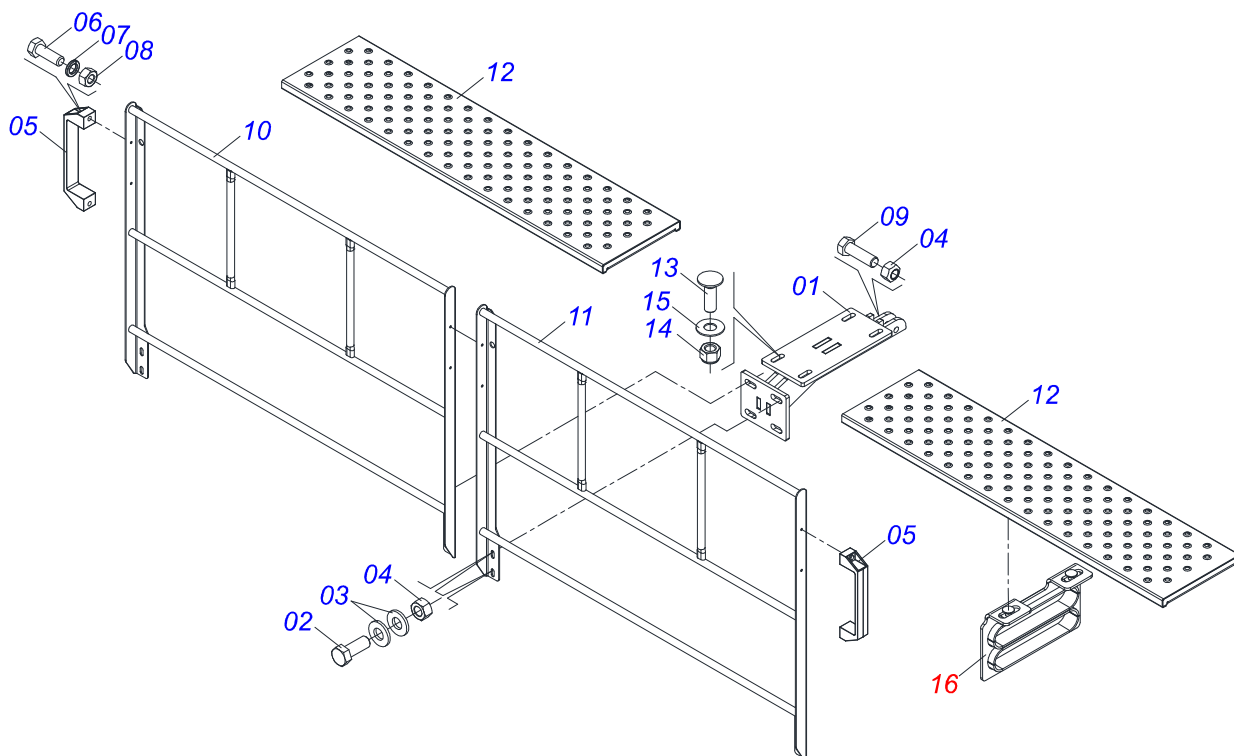

Item	Code	Description	See page	QT
01	0531062487	PLATFORM/HANDRAIL SUPPORT		01
02	0503014007	1/2" X 1-1/4" BOLT		08
03	0501010937	13,50 X 28 X 3,00 FLAT WASHER		16
04	0503011336	1/2" HEX SELF ADJUSTING NUT		10
05	0503011957	NYLON HANDLE		02
06	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		04
07	0503010179	LOCK WASHER 5/16 ZN 1K01528		04
08	0503010337	5/16" NUT		04
09	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
10	0531065082	LEFT SIDE HANDRAIL		01
11	0531065081	RIGHT SIDE HANDRAIL		01
12	0531065083	SIDE HANDRAIL		02
13	0503019529	SCREW 3/8 UNC X 1.1/2 CAPQ RI G.5 ZN		08
14	0503013357	3/8 SELF-ADJUSTING NUT		08
15	0501010984	10,50 X 27 X 3,00 FLAT WASHER		08
16	0531059883	ASSY HOSE SUPPORT	94	02

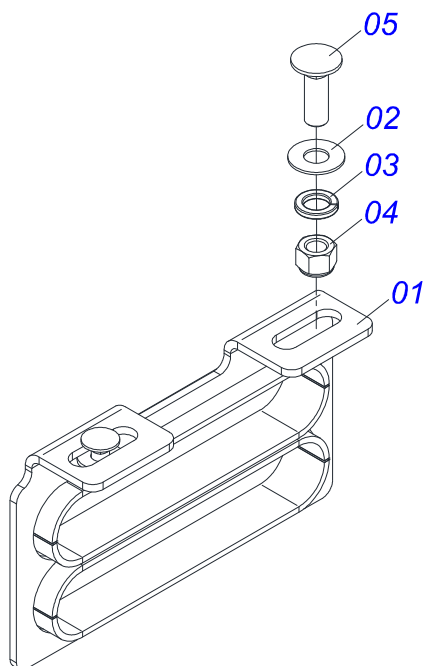


Item	Code	Description	See page	QT
01	0531066096	SUPPORT HOSE		01
02	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
03	0503010019	1/2" SPRING WASHER		02
04	0503010060	1/2 UNC G.5 ZN HEX NUT		02
05	0503014734	BOLT		02

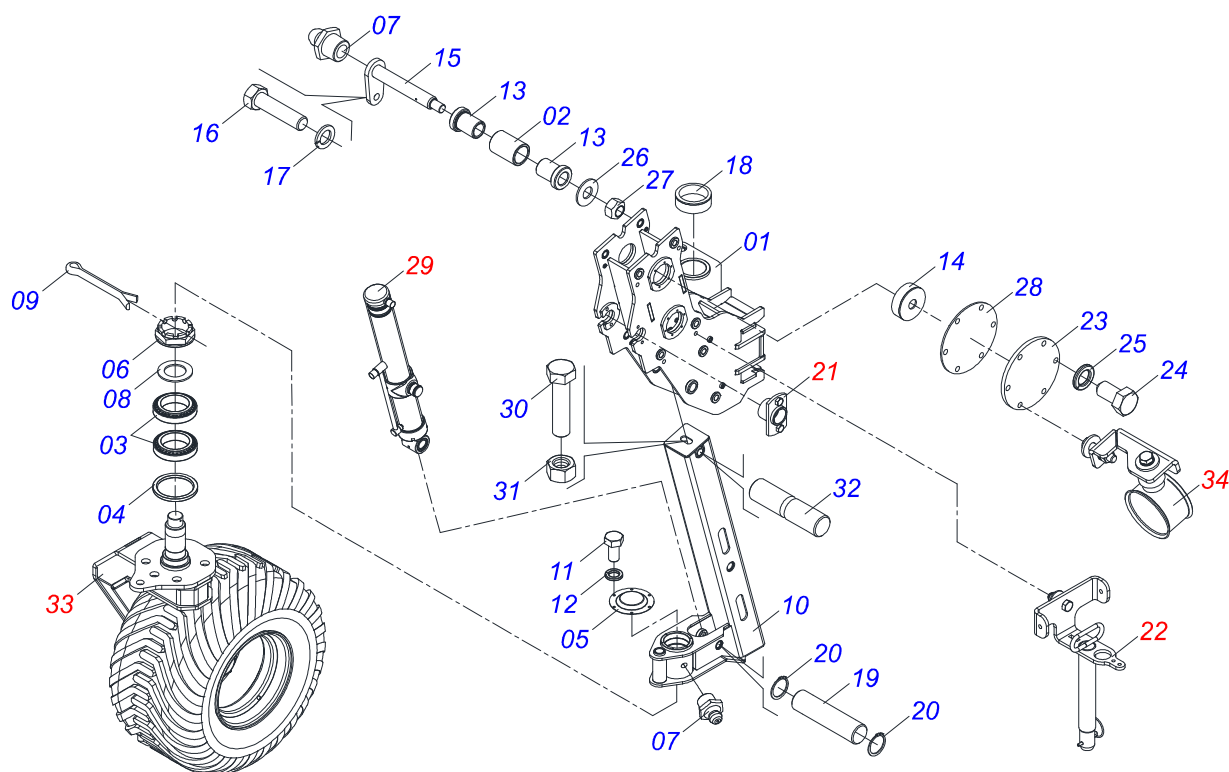

Item	Code	Description	See page	QT
01	0531064119	RIGHT SIDE WHEEL CHASSIS		01
02	0501214463	SIDE WHEEL PULLEY		06
03	0503014559	ROLLER BEARING		02
04	0503010095	SEAL		01
05	0501213909	WHEELED HUB COVER		01
06	0502040080	FLANGE NUT R.2.1/2 UN		01
07	0503010002	1800 GREASE FITTING		11
08	0501213917	ADJUSTMENT WASHER		01
09	0503012213	1/4" COTTERPIN		01
10	0531064113	SIDE WHEEL TOWER		01
11	0503010295	SCREW 5/16 UNC X 5/8 CS G.2 ZN		06
12	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
13	0501214462	NYLON PULLEY BUSHING		12
14	0501214303	WHEEL CHAIN		04
15	0531064110	PULLEY LOCK AXLE		06
16	0503010834	1/2 X 1 BOLT		04
17	0503010019	1/2" SPRING WASHER		04
18	0591017921	BRONZE GLOVE 90.5 X 115 X 91		02
19	0501214460	AXLE 1.1/2 X 140MM		01
20	0503010390	SEAL RING		02
21	0531055358	COMPLETE SIDE CYLINDER BEARING	96	02
22	0531055357	LOCK PIN SET	97	02
23	0501214302	ADJUSTMENT COVER PLATE		04
24	0503034377	3/8 UNC X 3/4 BOLT		24
25	0503010025	3/8 SPRING WASHER		24
26	0501017065	FLAT WASHER		06
27	0503011255	3/4" LOCK NUT		06
28	0501216430	ADJUSTING COVER CALCO		04
29	0531059818	HYDRAULIC RIGHT CYLINDER	98	01
30	0503012623	3/8" X 1-1/2" BOLT		01
31	0503010208	HEX NUT 3/8 UNF G.5 ZN		01




Item	Code	Description	See page	QT
32	0501311048	BEATER AXLE 230		01
33	0541050292	MONO RUEDA DERECHA NEUMÁTICO 500 X 50	99	01
34	0531057693	HOSE SUPPORT	102	01

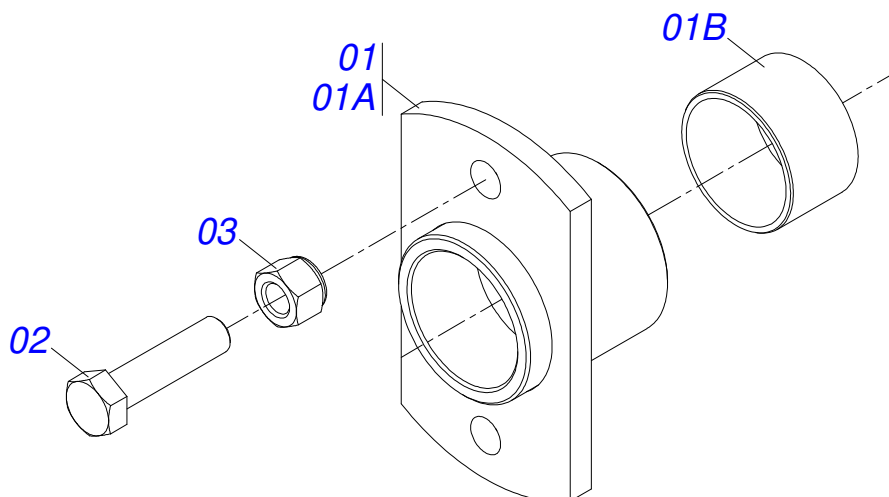

Item	Code	Description	See page	QT
01	0501111135	BIGGER BEARING CYLINDER SUPPORT WITHOUT LUBRICATION		01
01A	0531064111	LARGER FIXING FLANGE HYDRAULIC CYLIND		01
01B	0503019408	IGLIDUR GSM-4550-30 AUTO LUBRICANT GLOVE		01
02	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
03	0503010589	1/2" UNC SELF ADJUSTING NUT		02

LOCK PIN SET


0531055357

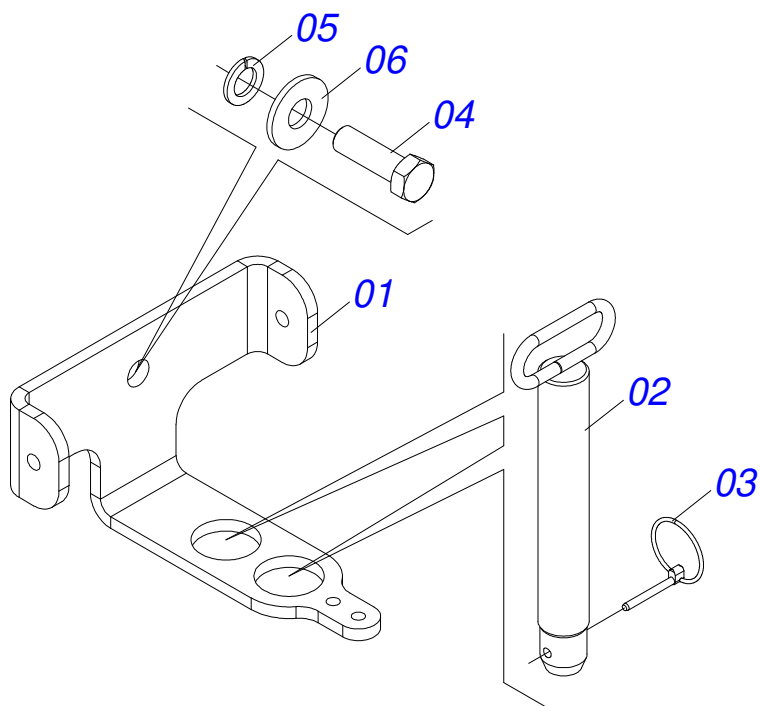


Item	Code	Description	See page	QT
01	0591016056	LOCK AXLE SUPPORT		01
02	0531061626	38 X 308 JUNCTION AXLE WITH HANDLE		02
03	0503030119	LOCK PIN		02
04	0503010834	1/2 X 1 BOLT		01
05	0503010019	1/2" SPRING WASHER		01
06	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		01

HYDRAULIC RIGHT CYLINDER


0531059818

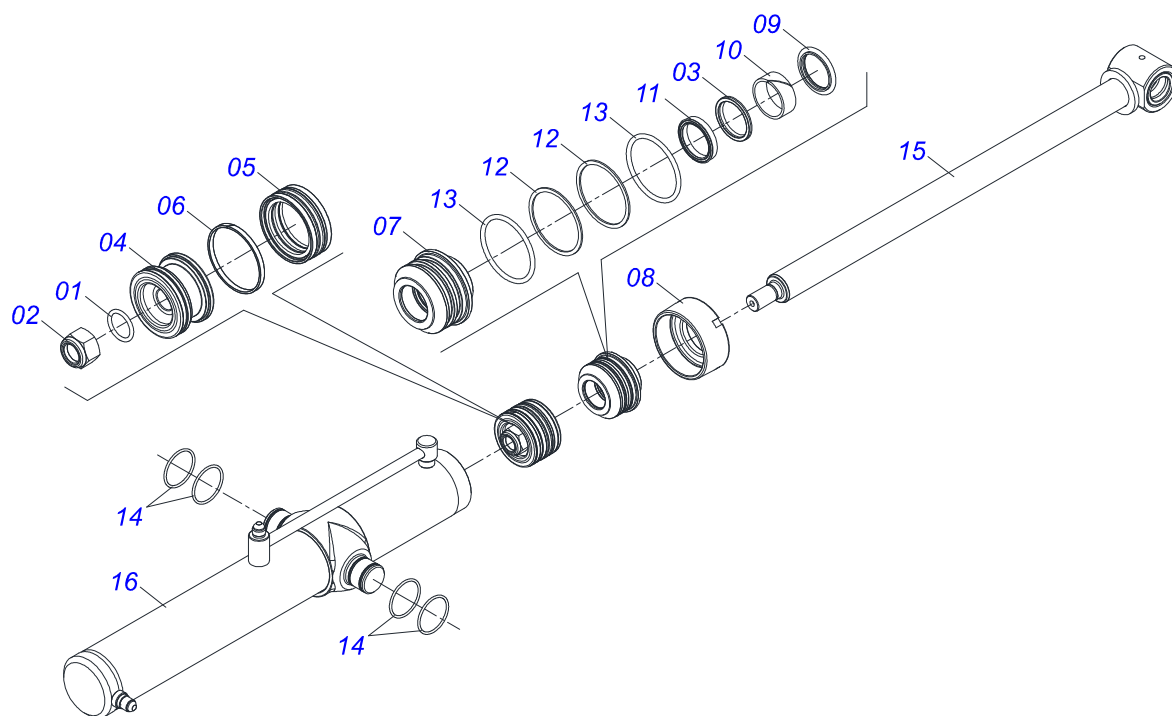


Item	Code	Description	See page	QT
01	0503010042	2-214 N 3006-9B O'RING		01
02	0503010063	1" SELF-ALIGNING NUT		01
03	0503010761	D-1750 SCRAPER RING		01
04	0571019710	1.7" X 3.4" PISTON		01
05	0503017935	RING		01
06	0503018144	RING		01
07	0571019711	RING SUPPORT		01
08	0571019709	DETACHABLE COVER		01
09	0503017936	RING		01
10	0503017938	RING GUIDE		01
11	0503017937	GASKET		01
12	0503017940	8-337 BACK-UP RING		02
13	0503017939	2-337 N 3006-9B O' RING		02
14	0503018045	2-130 (AGEL) O'RING		04
15	0531064358	ROD 1.3/4 X 745MM		01
16	0531066041	RIGHT CYLINDER CASE		01

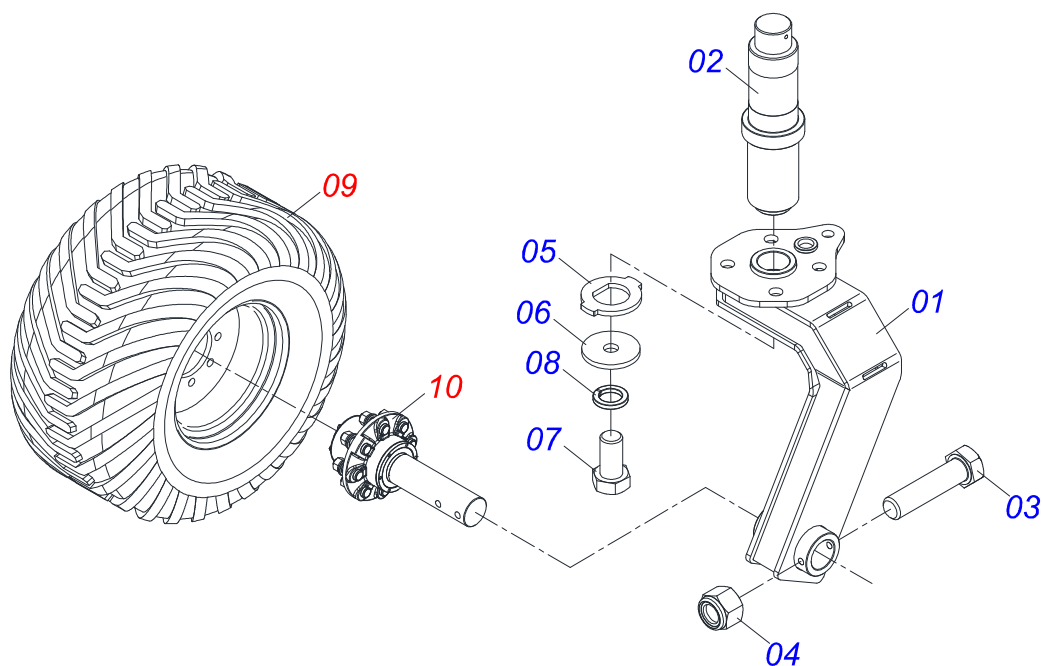

Item	Code	Description	See page	QT
01	0531064118	WHEEL RIGHT TIRE 500/50		01
02	0501213744	SINGLE ARM WHEEL AXLE		01
03	0503019246	BOLT		01
04	0503011075	3/4" UNC NUT		01
05	0501213743	LOCK AXLE		01
06	0501213742	SUPPORT WASHER		01
07	0503010953	BOLT 1 UNC X 2 C S G.5 ZN		01
08	0503010012	1" SPRING WASHER		01
09	0541050195	MOUNTED LEFT WHEEL	100	01
10	0541050294	FULL WHEEL BOX	101	01

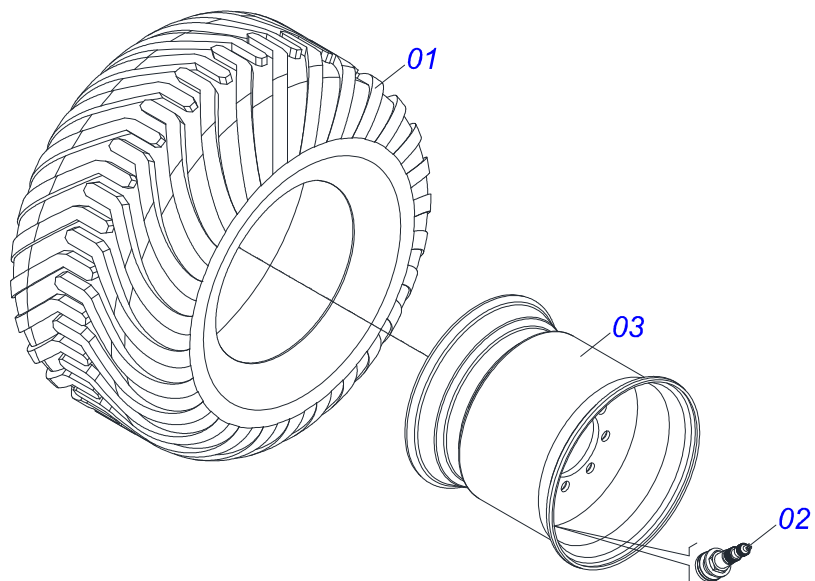


Item	Code	Description	See page	QT
01	0513010700	TIRE 500-50-17 FLOTATION T422 I1 18PR TECH SHEET		01
02	0503013999	VALVE		01
03	0503036301	RIM 16 X 17		01

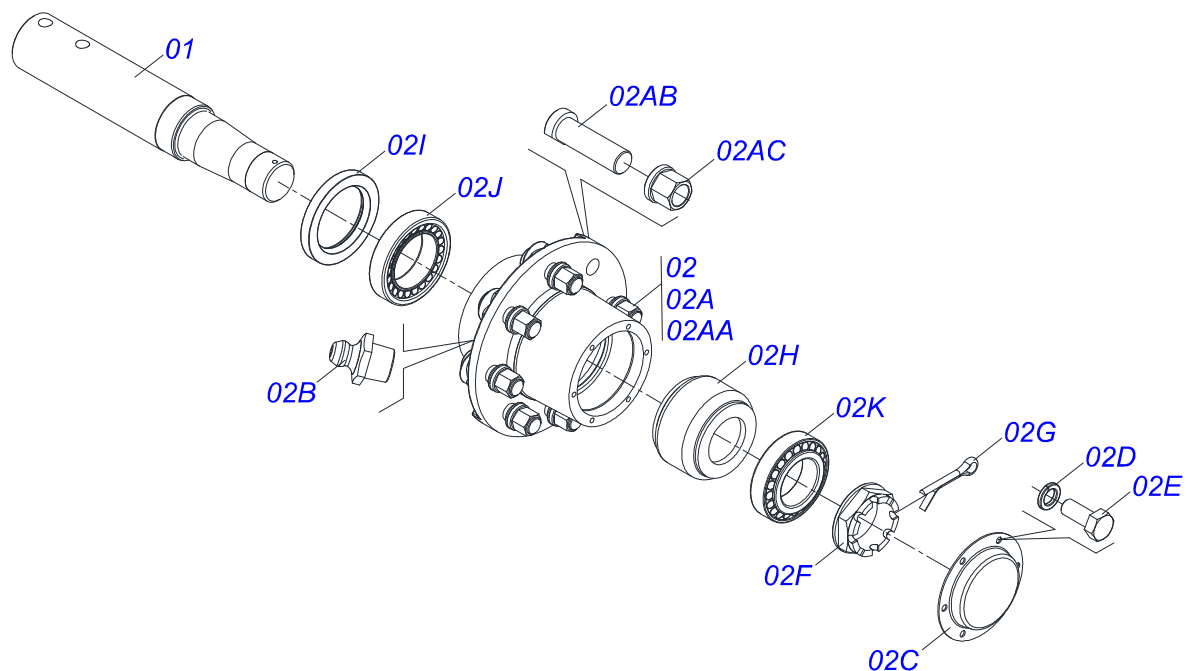

Item	Code	Description	See page	QT
01	0501213734	ROLLED EIXO		01
02	0541050193	WHEEL COMPLETE BOX		01
02A	0501111223	BOX ROUND WITH SCREW		01
02AA	0501213765	WHEEL BOX		01
02AB	0503014048	22 X 1.5 HEX NUT		08
02AC	0503810007	WHEEL BOLT		08
02B	0503010002	1800 GREASE FITTING		01
02C	0541013225	WHEEL HUB LID		01
02D	0503011444	SPRING WASHER		06
02E	0503010240	BOLT		06
02F	0502040080	FLANGE NUT R.2.1/2 UN		01
02G	0503011345	1/4" X 3-1/2" COTTERPIN		01
02H	1882970002	GREASE SOAP		01
02I	0503010050	SEAL 00085-B		01
02J	0503013633	BEARING 33287/33462		01
02K	0503013496	3982/3920 ROLLER BEARING		01

HOSE SUPPORT


0531057693

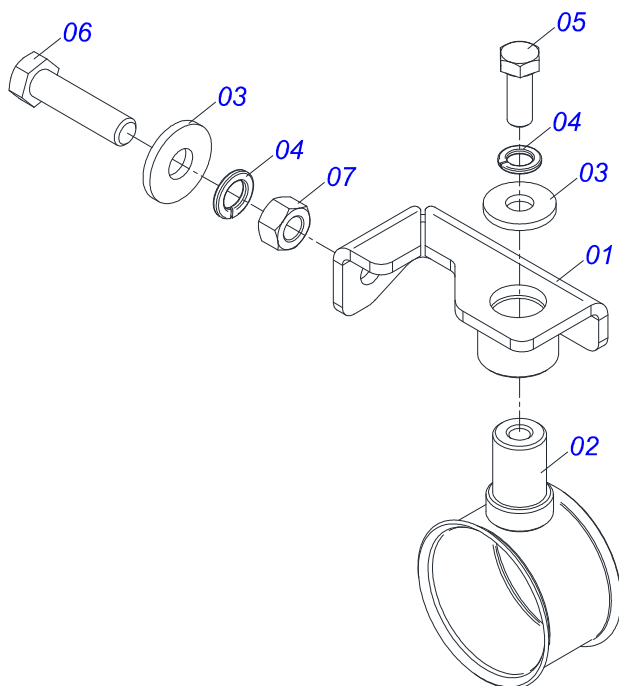


Item	Code	Description	See page	QT
01	0531065307	SUPPORT RIGHT HOSE		01
02	0531065306	ARTICULATOR HOSE		01
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
04	0503010025	3/8 SPRING WASHER		02
05	0503010237	3/8" X 1" BOLT		01
06	0503010849	3/8" X 1-1/2" BOLT		01
07	0503010026	3/8" NUT		01

SIDE SUPPORT


0541050557

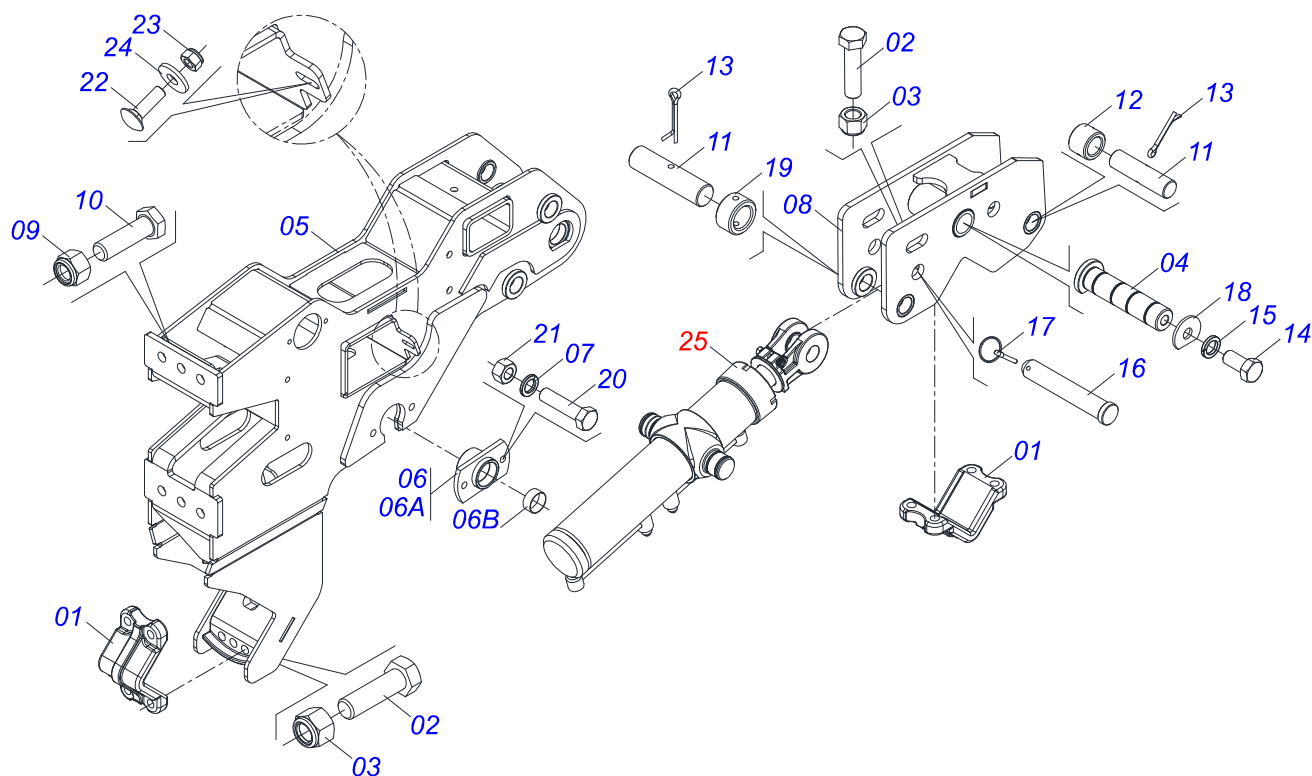


Item	Code	Description	See page	QT
01	0502012789	FIXER SUPPORT FERTILIZER ROW	02	
02	0503017857	BOLT 5/8 UNF 4	08	
03	0503010811	5/8" UNF SELF ADJUSTING NUT	08	
04	0591017796	ARTICULATION AXIS 222 R.1.1 / 4 UNF	01	
05	0531064321	UNIVERSAL SUPPORT	01	
06	0501111056	BEARING SUPPORT CYLINDER WITHOUT LUBRICATION	02	
06A	0531061418	FIXING FLANGE HYDRAULIC CYLINDER WITHOUT LUBRICATION	01	
06B	0503019408	IGLIDUR GSM-4550-30 AUTO LUBRICANT GLOVE	01	
07	0503010019	1/2" SPRING WASHER	04	
08	0501111070	SIDE SUPPORT ARTICULATOR	01	
09	0503011075	3/4" UNC NUT	06	
10	0501010125	3/4" X 2-1/2" BOLT	06	
11	0591013172	31.75 X126 AXLE WITH 8 HOLE	02	
12	0591013173	CYLINDER INTERMEDIATE BUSHING	01	
13	0503012231	1/4" X 3" COTTERPIN	02	
14	0501011544	3/4" X 1-1/2" BOLT	01	
15	0503010023	3/4" SPRING WASHER	01	
16	0591018408	PIN LOCK LINES	01	
17	0503030085	LOCK PIN	01	
18	0591019305	FLAT WASHER 20 X 60 X 4.75 WITH CUT OUT	01	
19	0501211496	GLOVE 16 X 25 X 27 WITH HOLE	01	
20	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN	04	
21	0503010060	1/2 UNC G.5 ZN HEX NUT	04	
22	0501010942	3/8" X 1-1/4" BOLT	02	
23	0503013357	3/8 SELF-ADJUSTING NUT	02	
24	0501010984	10,50 X 27 X 3,00 FLAT WASHER	02	
25	0541050570	SIDE ARTICULATION CYLINDER 104 44,45X85,70X291X657 DKO	01	

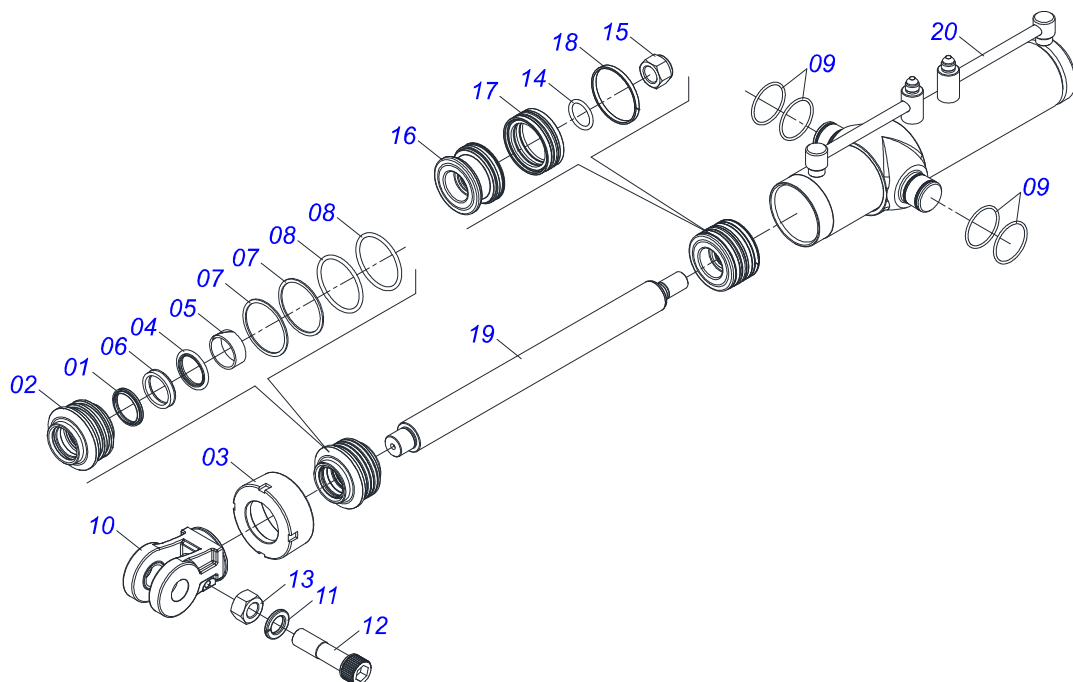

Item	Code	Description	See page	QT
01	0503010761	D-1750 SCRAPER RING		01
02	0571019711	RING SUPPORT		01
03	0571019709	DETACHABLE COVER		01
04	0503017936	RING		01
05	0503017938	RING GUIDE		01
06	0503017937	GASKET		01
07	0503017940	8-337 BACK-UP RING		02
08	0503017939	2-337 N 3006-9B O' RING		02
09	0503018045	2-130 (AGEL) O'RING		04
10	0511064408	FORK		01
11	0503010025	3/8 SPRING WASHER		01
12	0503011094	3/8" X 2" BOLT		01
13	0503010026	3/8" NUT		01
14	0503010042	2-214 N 3006-9B O'RING		01
15	0503010063	1" SELF-ALIGNING NUT		01
16	0571019710	1.7" X 3.4" PISTON		01
17	0503017935	RING		01
18	0503018144	RING		01
19	0591017818	EXTENSOR 44,45 X 550		01
20	0531066446	CILINDER CASE 85.70 X 499		01

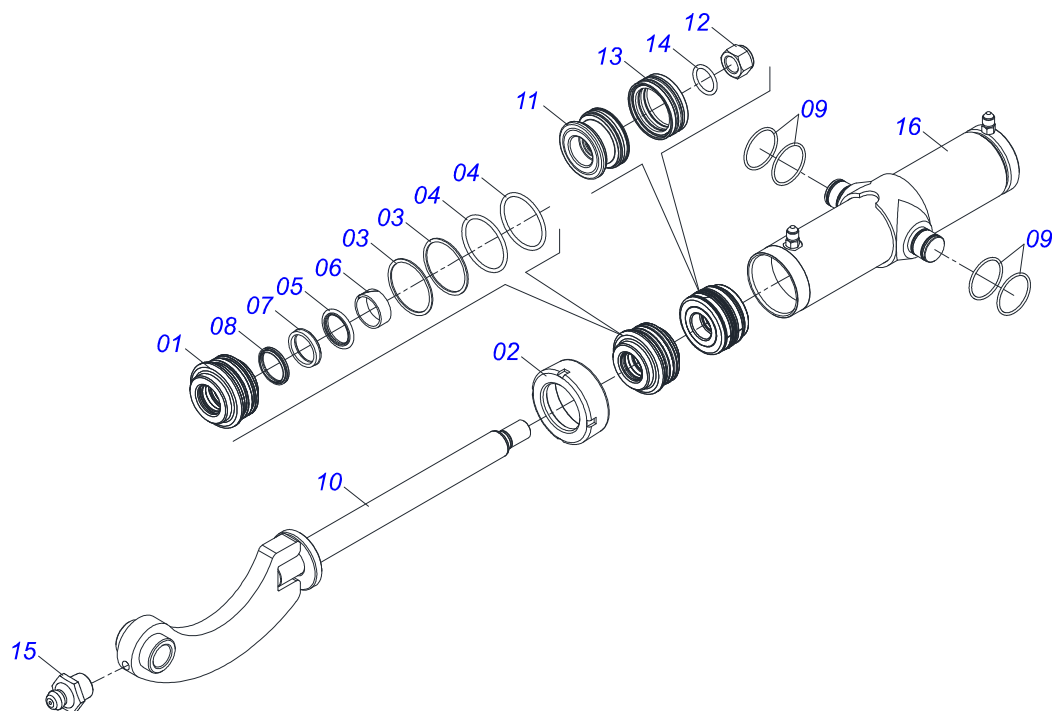


Item	Code	Description	See page	QT
01	0581010302	RING OF SUPPORT		01
02	0502012822	101.60 END CAP		01
03	0503011061	8-342 BACK-UP RING		02
04	0503010338	2-342 N 3006-9B O'RING		02
05	0503017936	RING		01
06	0503017938	RING GUIDE		01
07	0503017937	GASKET		01
08	0503010761	D-1750 SCRAPER RING		01
09	0503018045	2-130 (AGEL) O'RING		04
10	0531064847	ROTATING CYLINDER ROD		01
11	0581010837	PISTON		01
12	0503010817	1.1/4" SELF LOCKING NUT		01
13	0503015633	SELEMASTER SEALING		01
14	0503018029	2-217 O'RING		01
15	0503010002	1800 GREASE FITTING		01
16	0531066450	CILINDER CASE 101,60 X 497		01

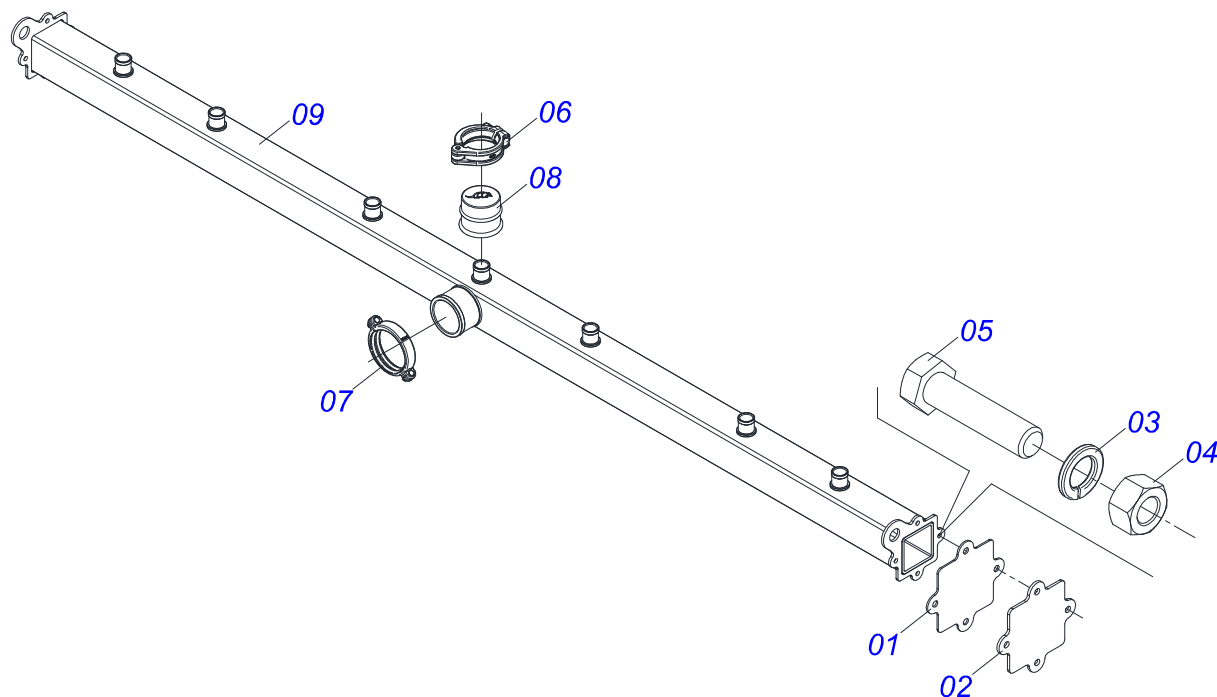


Item	Code	Description	See page	QT
01	0503036366	SEALING AIR TUBE		02
02	0501312852	COVER AIR TUBE		02
03	0503010025	3/8 SPRING WASHER		08
04	0503010026	3/8" NUT		08
05	0503010237	3/8" X 1" BOLT		08
06	0521052549	CLAMP	166	07
07	0531050772	RIGHT CLAMP 4		01
08	0503034867	AIR DISTRIBUTOR PUMP		01
09	0531066448	CONDUCTOR TUBE AIR 07 OUTLETS		01

TURBINE SUCTION

0541050590

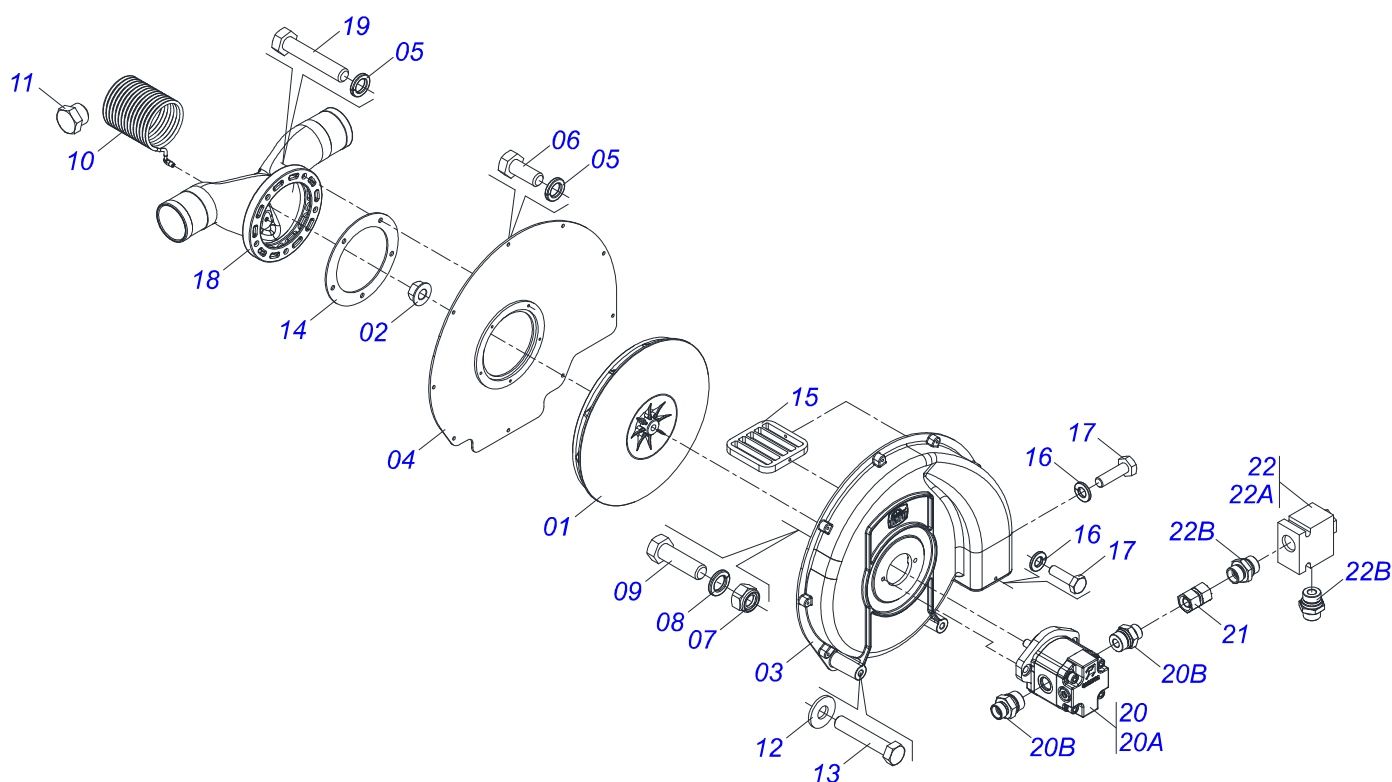


Item	Code	Description	See page	QT
01	0591018230	FAN 428		01
02	0513010047	1/2 NC HEXAGONAL FLANGED NUT		01
03	0501219835	BOX TURBINE SUCTION		01
04	0531065747	FRONT COVER TURBINE		01
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		14
06	0503010358	5/16" X 5/8" BOLT		09
07	0503013357	3/8 SELF-ADJUSTING NUT		02
08	0503010025	3/8 SPRING WASHER		02
09	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
10	0503062560	TUBE FOR METER CLOCK 730142		01
11	0511017907	1/8" BSPT X 6 PLUG		01
12	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
13	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02
14	0503035611	SUCTION DUCT SEAL		01
15	0501219837	PLATE COVER TURBINE		01
16	0503010143	1/4" SPRING WASHER		02
17	0503010294	1/4" X 7/8" BOLT		02
18	0503035455	HYDRAULIC TURBINE SUCTION DUCT		01
19	0503010397	5/16" X 1-3/4" BOLT		05
20	0541050591	COMPLETE PLM ENGINE		01
20A	0513010038	ENGINE		01
20B	0513011890	TERMINAL M22 X 1.50 MF ADAPTER		02
21	0513011686	TERMINAL UNION FG TB12L X FG TB12L		01
22	0531059913	ANTI CAVITATION VALVE SET		01
22A	0503015420	CV10208TN5 ANTI-CAVITATION VALVE		01
22B	0513011678	ADAPTER TERMINAL 3/4 UNF ORING X MF TB12L		02

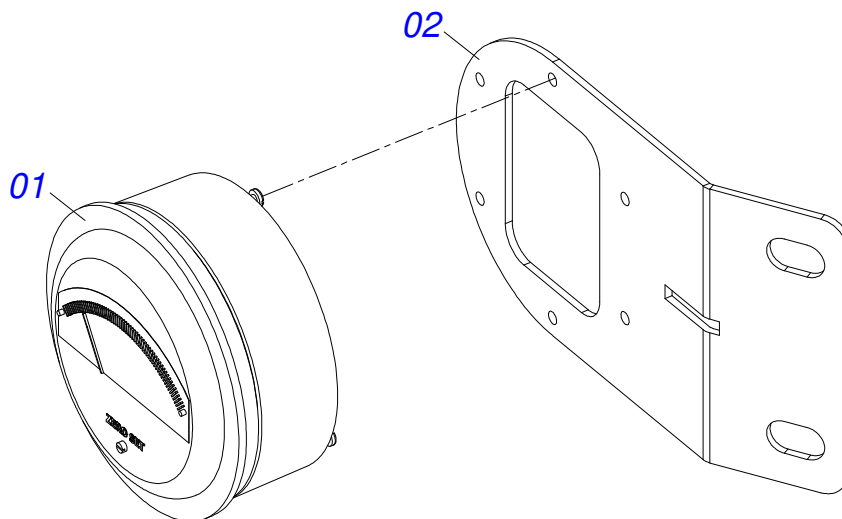


Item	Code	Description	See page	QT
01	0503013584	VACUUM GAUGE		01
02	0501210978	VACUOMETER SUPPORT		01

RIGHT SIDE DUCT ASSEMBLY

0541050667

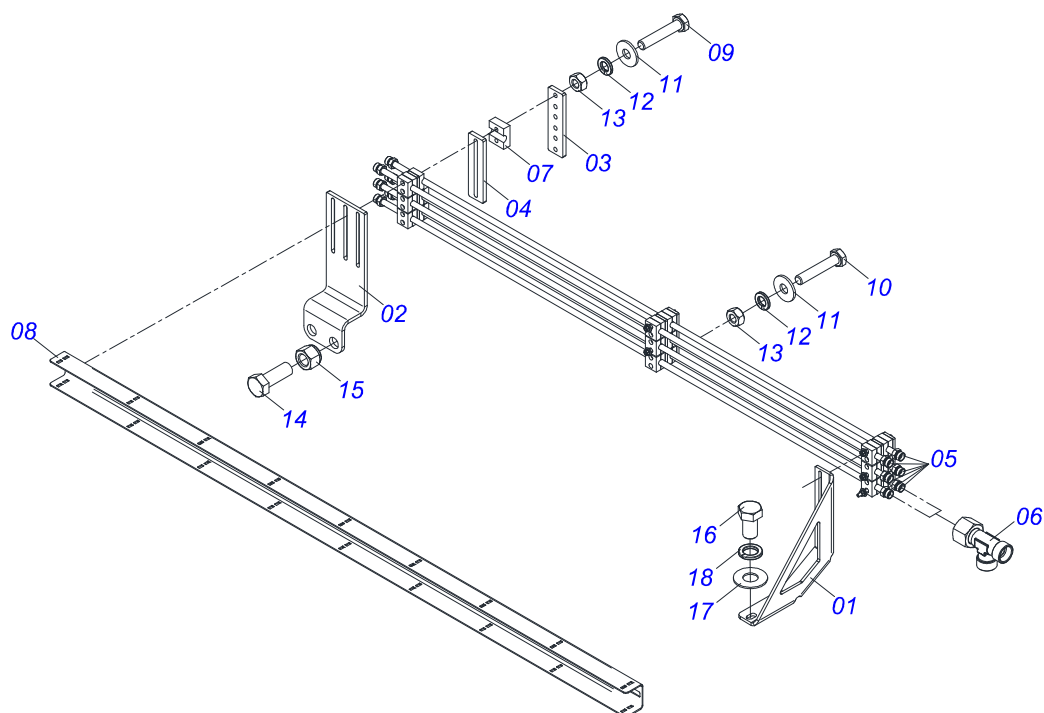


Item	Code	Description	See page	QT
01	0501312939	RIGHT SIDE SUPPORT	01	
02	0501312940	SUPPORT PLATE DUCT	02	
03	0501311237	FIXER	03	
04	0501311238	CLAMP UNION 112 X 30 X 6,30	03	
05	0503036389	HYDRAULIC TUBE PT12L X PT12L X 1450	06	
06	0513011685	TEE TERMINAL MF X MF X FG TB12L	02	
07	0513010752	SINGLE STANDARD CLAMP 12 MM - BLACK	36	
08	0501312946	GUTTER 50 X 30 X 1350	01	
09	0513011664	BOLT M6 X 1,00 X 80 - SXR6X80ZI	06	
10	0513011665	BOLT M6 X 1,00 X 90 - SXR6X90ZI	03	
11	0503010305	FLAT WASHER	09	
12	0503015110	M06 SPRING WASHER	09	
13	0503014540	M6 NUT	09	
14	0501010098	3/4" UNC BOLT	04	
15	0503011075	3/4" UNC NUT	04	
16	0503013776	BOLT 1/2 UNC X 7/8 C S G.5 ZN	02	
17	0501013519	FLAT WASHER	02	
18	0503010019	1/2" SPRING WASHER	02	

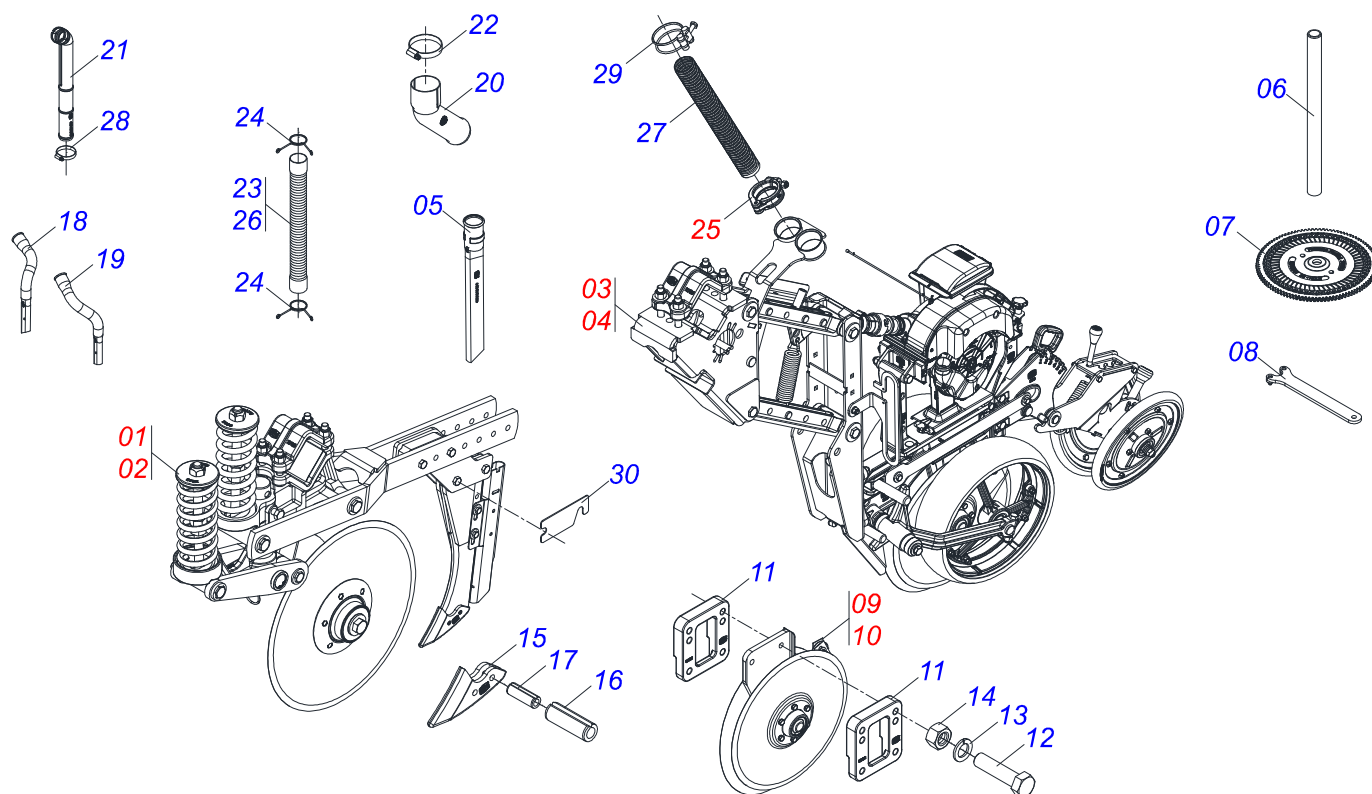

Item	Code	Description	See page	QT
01	0531055175	LONG FERTILIZER ROW SMALLER DC20 SHANKS	111	01
02	0531055166	SHORT DC20 FERTILIZER ROW WITHOUT LUBRICATION ROD	112	01
03	0541050617	SHORT RIGHT SEED ROW PPH/VDR/CPERRA	113	01
03.	0541050376	SHORT RIGHT SEED ROW TCC/SPICRR	114	01
04	0541050618	LONG SEED ROW LEFT PPH/VDR/CPERRA	115	01
04.	0541050373	LONG SEED ROW LEFT TCC/SPICRR	116	01
04..	0541050378	SUPER LONG LEFT SEED ROW TCC/SPICRR/SEM ABA/PPH	117	01
05	0503030520	SEED SOCKET		01
06	0531013600	PRESS ADJUSTMENT LEVER		01
07	0503062763	CONVERSION ASSY FOR DISTRIBUTOR SOY / BEANS		01
08	0521068982	DISC BLADE HUB KEY		01
09	0521055869	LEFT DUAL FERTILIZER DISC	164	01
10	0521055868	RIGHT DUAL FERTILIZER DISC	165	01
11	0502012815	DOUBLE-DISC SPACING PLATE		01
12	0503010479	BOLT		01
13	0503010019	1/2" SPRING WASHER		01
14	0503010060	1/2 UNC G.5 ZN HEX NUT		01
15	0502070085	FIXED ROD BEARING		01
16	0503016853	SPRING PIN		01
17	0503011402	0.2" X 0.8" SPRING PIN		01
18	0503030391	RIGHT FERTILIZER NOZZLE		01
19	0503030392	LEFT FERTILIZER NOZZLE		01
20	0503031050	CURVED CONDUCTOR		01
21	0503031826	CURVED CONDUCTOR		01
22	0503010246	CLAMP		01
23	0503030195	2" X 2" X 12.2" HOSE		01
24	0503031076	2" HOSE CLAMP		01
25	0521052549	CLAMP	166	01
26	0513011282	HOSE 175F		01


Item	Code	Description	See page	QT
27	0503036154	HOSE 2 X 2 X 505		01
28	0503019869	CLAMP		01
29	0503019222	BRACELET TYPE WIRE 3.2MM X 48 X 63 MM		01
30	0511018662	SPACING PLATE		01

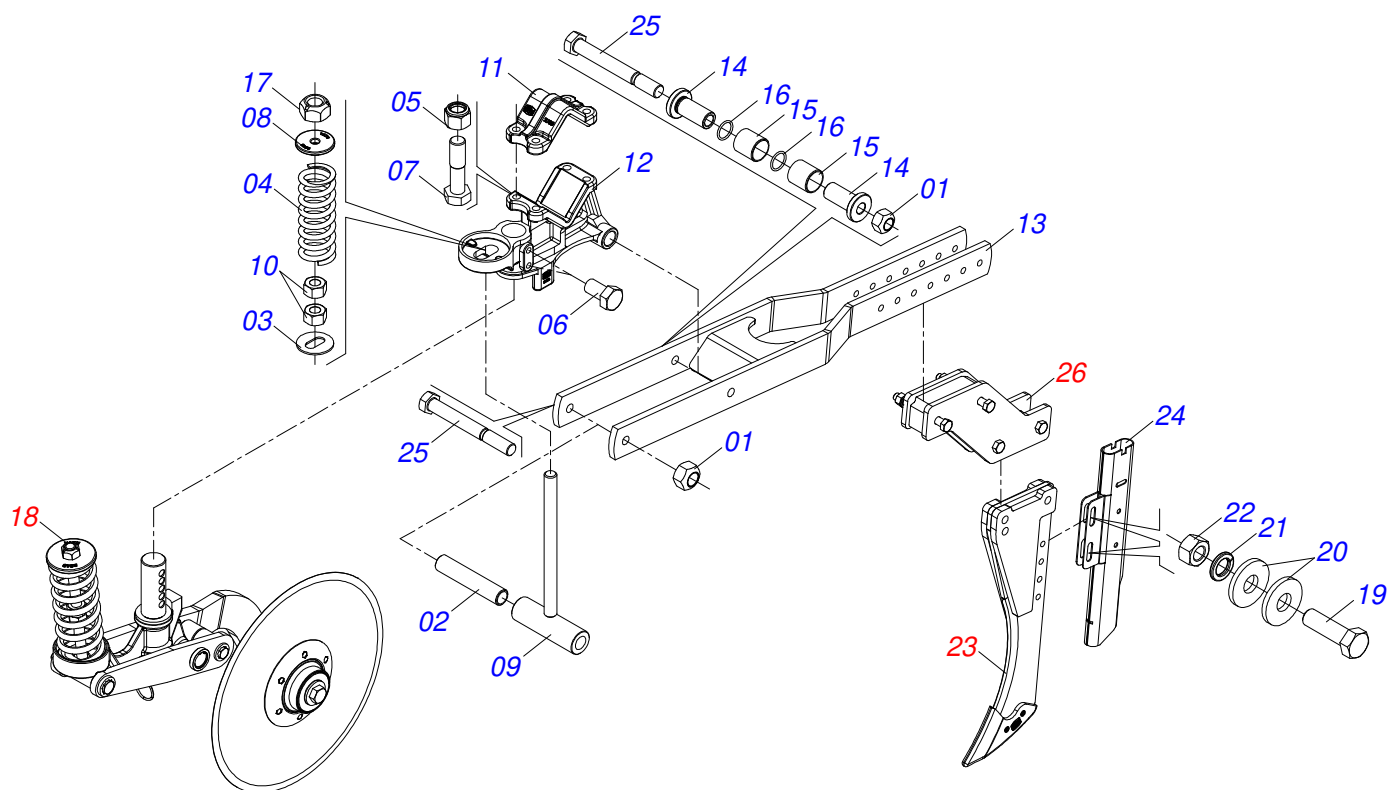


Item	Code	Description	See page	QT
01	0503011255	3/4" LOCK NUT		02
02	0571019062	SLEEVE		01
03	0571019059	SUPPORT WASHER		01
04	0503034320	COMPRESSSSION SPRING		01
05	0503010811	5/8" UNF SELF ADJUSTING NUT		04
06	0503011854	5/8" X 1-1/4" BOLT		02
07	0503017960	5/8" X 3-12" BOLT		04
08	0502012813	FLANGE WASHER SPRING		01
09	0531062203	REGULATOR SPRING LINE FERTILIZER		01
10	0503010417	7/8" NUT		02
11	0502012789	FIXER SUPPORT FERTILIZER ROW		01
12	0591011146	SUPPORT LONG		01
13	0531064024	LONG ARM MINOR FERTILIZER LINE		01
14	0591011147	SLEEVE ARM ROW		02
15	0503019278	LUBRICANT SLEEVE		02
16	0503011109	2-119 N 3006-9B O'RING		02
17	0503011254	7/8" HEX SELF ADJUSTING NUT		01
18	0531055165	20 COMPLETE CURVED CORRUGATED CUTTING DISC	118	01
19	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
20	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
21	0503010025	3/8 SPRING WASHER		02
22	0503010026	3/8" NUT		02
23	0521053673	SCARIFIER ROD WITH NOZZLE	121	01
24	0581014070	FERTILIZER NOZZLE		01
25	0521010066	3/4" X 8.12" BOLT		02
26	0531053737	MOUNTED SUPPORT	122	01

SHORT DC20 FERTILIZER ROW WITHOUT LUBRICATION ROD


0531055166

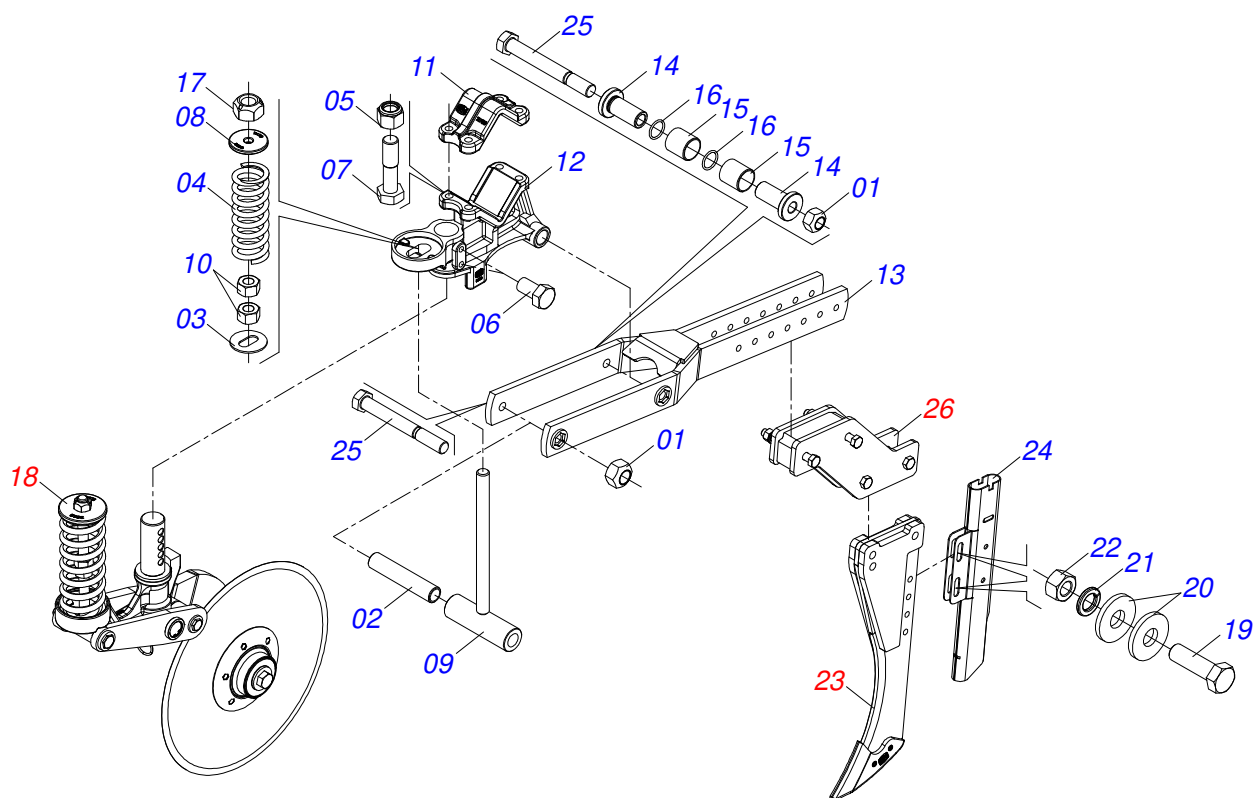


Item	Code	Description	See page	QT
01	0503011255	3/4" LOCK NUT		02
02	0571019062	SLEEVE		01
03	0571019059	SUPPORT WASHER		01
04	0503034320	COMPRESSSSION SPRING		01
05	0503010811	5/8" UNF SELF ADJUSTING NUT		04
06	0503011854	5/8" X 1-1/4" BOLT		02
07	0503017960	5/8" X 3-12" BOLT		04
08	0502012813	FLANGE WASHER SPRING		01
09	0531062203	REGULATOR SPRING LINE FERTILIZER		01
10	0503010417	7/8" NUT		02
11	0502012789	FIXER SUPPORT FERTILIZER ROW		01
12	0591011146	SUPPORT LONG		01
13	0531064025	LONG ARM MINOR FERTILIZER LINE		01
14	0591011147	SLEEVE ARM ROW		02
15	0503019278	LUBRICANT SLEEVE		02
16	0503011109	2-119 N 3006-9B O'RING		02
17	0503011254	7/8" HEX SELF ADJUSTING NUT		01
18	0521057679	ASSY CUTTING DISK 20	123	01
19	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		02
20	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
21	0503010025	3/8 SPRING WASHER		02
22	0503010026	3/8" NUT		02
23	0521053673	SCARIFIER ROD WITH NOZZLE	121	01
24	0581014070	FERTILIZER NOZZLE		01
25	0521010066	3/4" X 8.12" BOLT		02
26	0531053737	MOUNTED SUPPORT	122	01

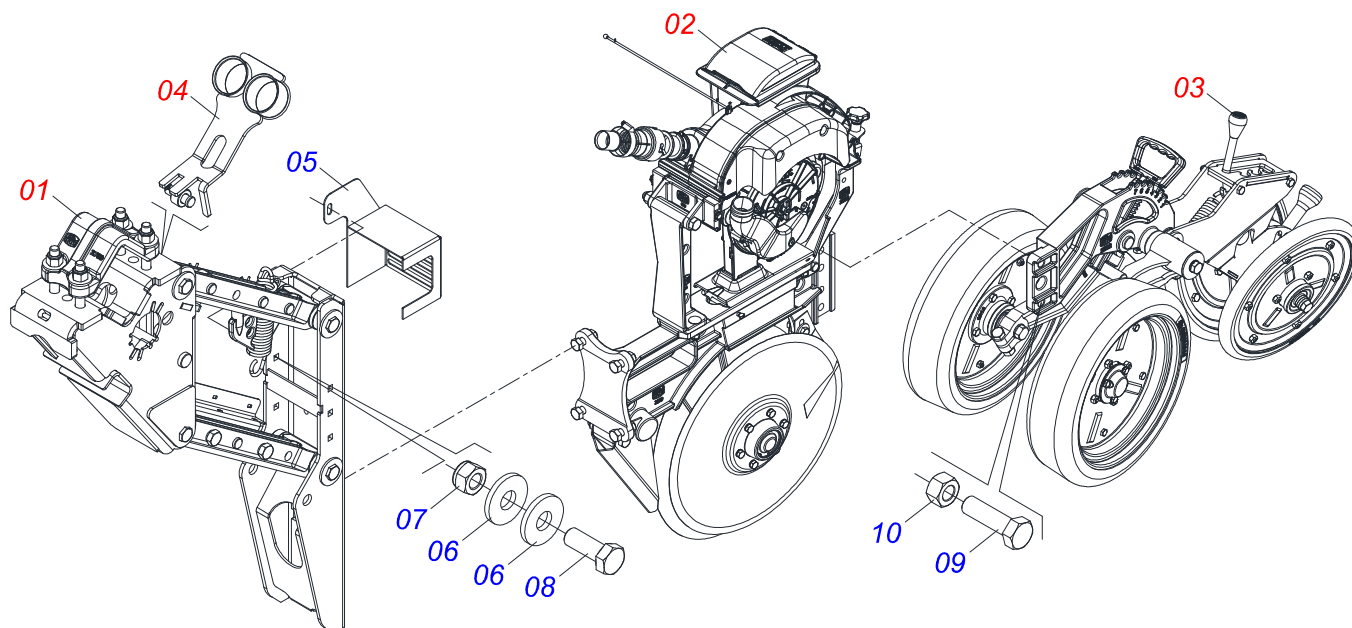


Item	Code	Description	See page	QT
01	0531054007	SHORT/LONG FRONT SEED ROW	124	01
02	0521056936	RIGHT REAR P.P CSC/V-DRIVE	125	01
03	0531050978	DEPTH CONTROL WITH FAST ANGLE REGULATING AXIS	133	01
04	0531051094	MOUNTED HOSE GUIDE ASSEMBLY	135	01
05	0501216680	SRM MODULE COVER		01
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
07	0503013357	3/8 SELF-ADJUSTING NUT		01
08	0503010237	3/8" X 1" BOLT		01
09	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
10	0503010060	1/2 UNC G.5 ZN HEX NUT		02

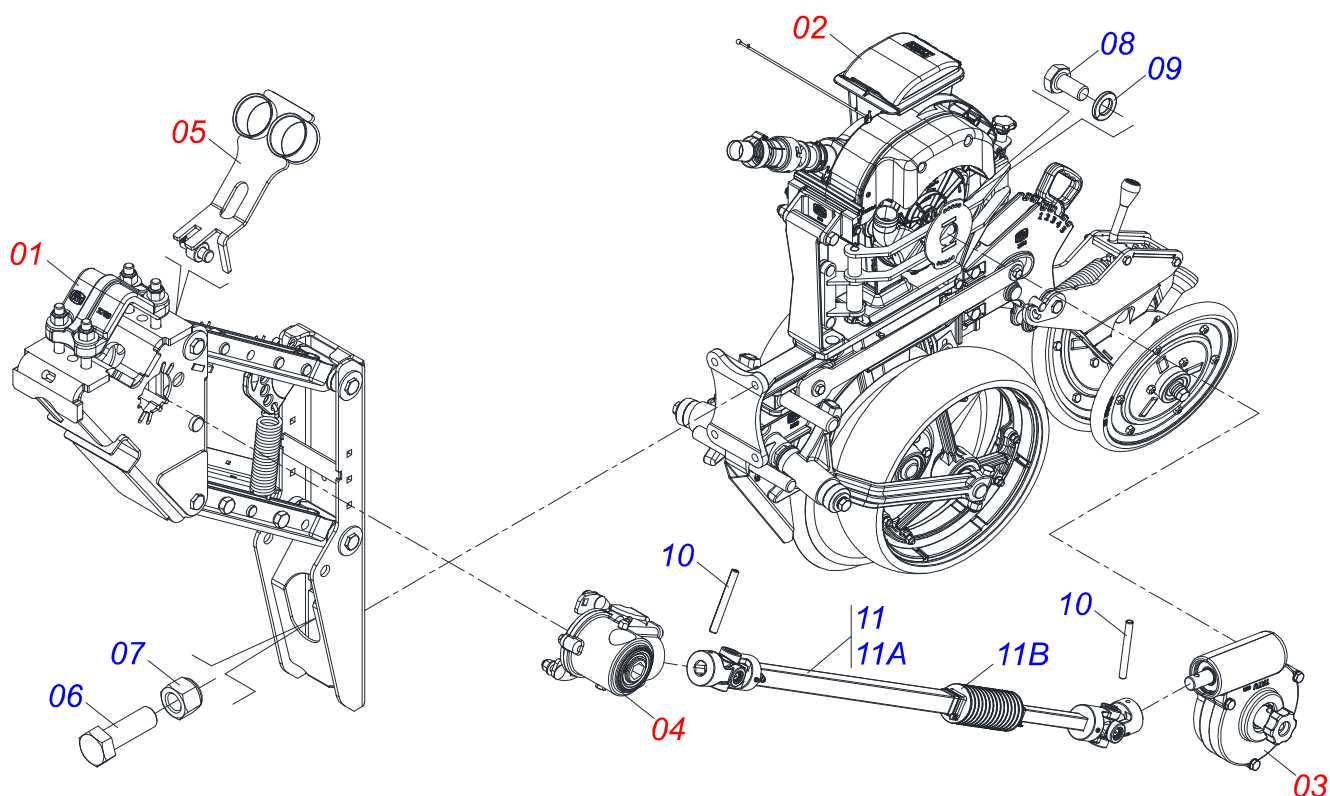


Item	Code	Description	See page	QT
01	0531054007	SHORT/LONG FRONT SEED ROW	124	01
02	0541050377	REAR WITH RIGHT DDD SPICRR WITHOUT FLAP / TCC PPH	143	01
03	0541050062	P.P. TRANSMISSION GEAR BOX RIGHT	153	01
04	0541050079	SEED ROW UPPER TRANSMISSION GEAR BOX	154	01
05	0531051094	MOUNTED HOSE GUIDE ASSEMBLY	135	01
06	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04
07	0503010589	1/2" UNC SELF ADJUSTING NUT		04
08	0503011812	BOLT M6 X 1 X 12 CS 8.8 ZN		04
09	0503015110	M06 SPRING WASHER		04
10	0503011855	0.2" X 1.8" SPRING PIN		02
11	0503064042	CARDAN T.S 16,00 X Q 15,90 X Q 22 X 577 FULL		01
11A	0503064146	CARDAN TS 16X Q 15,90 X Q 22 X 577 WITHOUT HOOD		01
11B	0503034480	SEED LINE CARDAN COOF		01

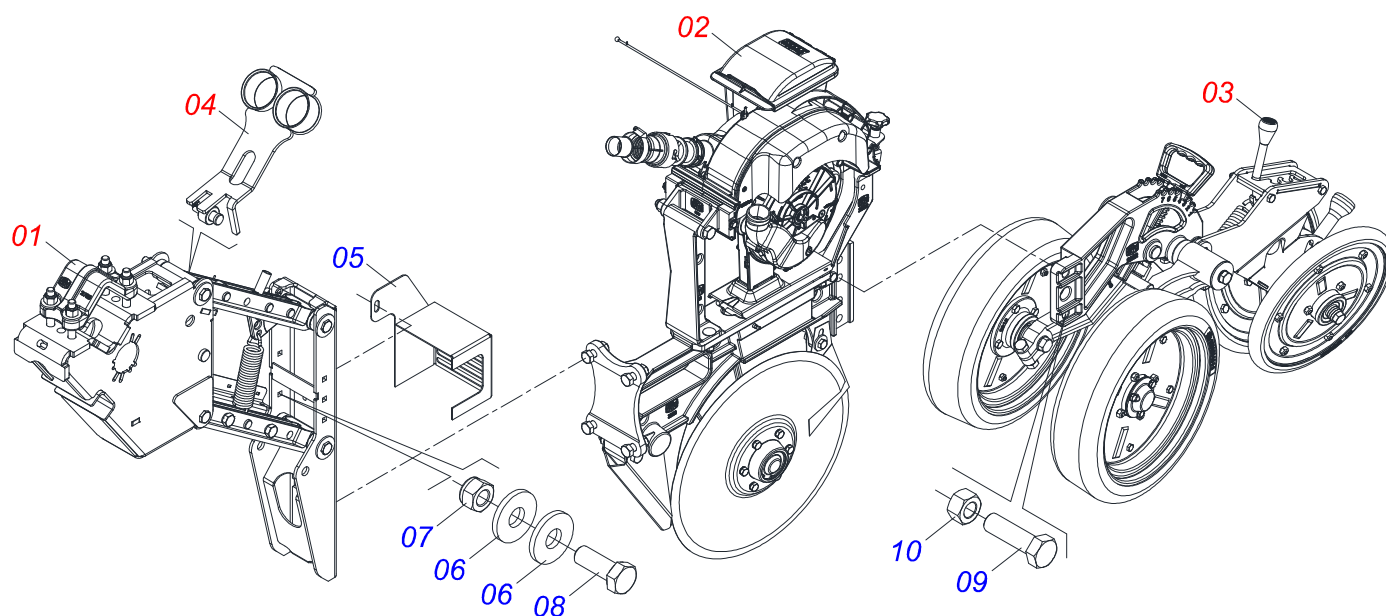


Item	Code	Description	See page	QT
01	0541050067	FRONT LONG SEED ROW	155	01
02	0521056937	LEFT REAR P.P CSC/V-DRIVE	156	01
03	0531050978	DEPTH CONTROL WITH FAST ANGLE REGULATING AXIS	133	01
04	0531051094	MOUNTED HOSE GUIDE ASSEMBLY	135	01
05	0501216680	SRM MODULE COVER		01
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
07	0503013357	3/8 SELF-ADJUSTING NUT		01
08	0503010237	3/8" X 1" BOLT		01
09	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
10	0503010060	1/2 UNC G.5 ZN HEX NUT		02

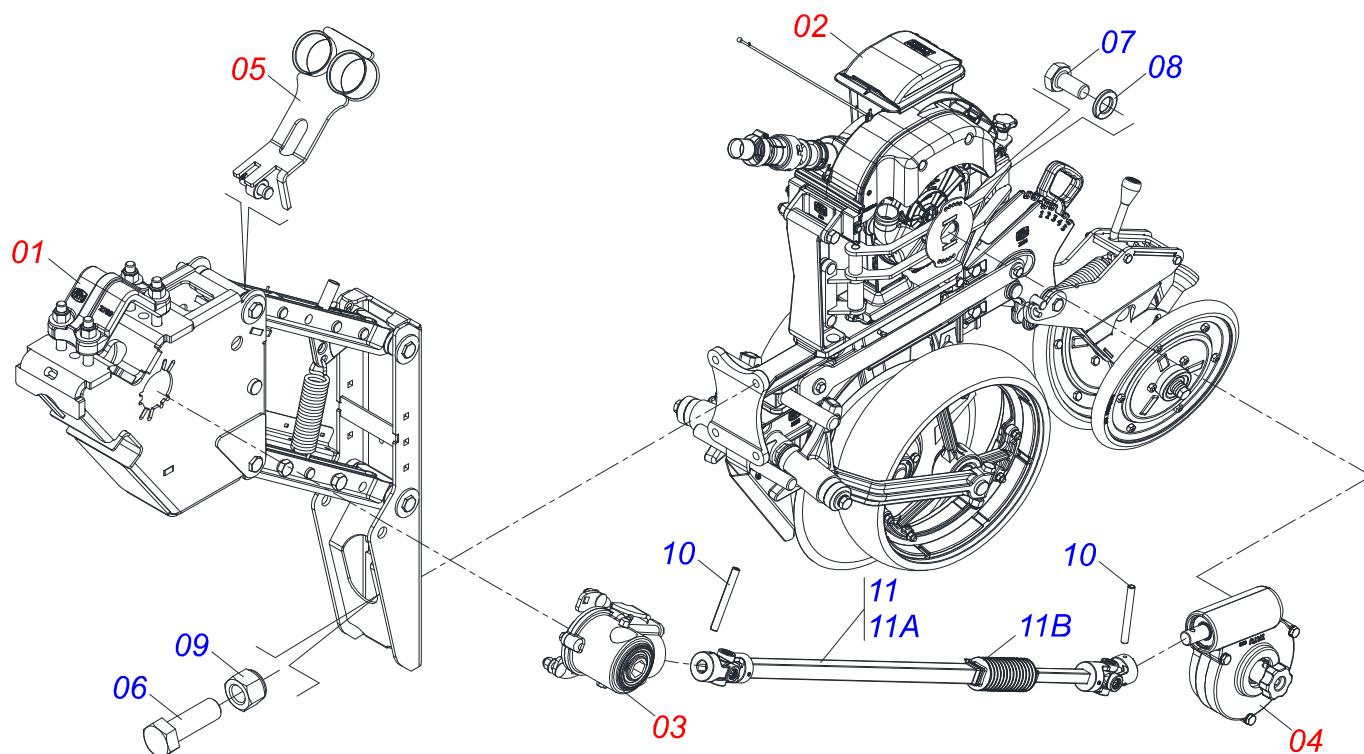


Item	Code	Description	See page	QT
01	0541050067	FRONT LONG SEED ROW	155	01
02	0541050375	REAR WITH LEFT DDD SPICRR WITHOUT FLAP /TCC/PPH	158	01
03	0541050079	SEED ROW UPPER TRANSMISSION GEAR BOX	154	01
04	0541050062	P.P. TRANSMISSION GEAR BOX RIGHT	153	01
05	0531051094	MOUNTED HOSE GUIDE ASSEMBLY	135	01
06	0503011082	C1/2" X 1.3/4" SCREW		04
07	0503011812	BOLT M6 X 1 X 12 CS 8.8 ZN		04
08	0503015110	M06 SPRING WASHER		04
09	0503010589	1/2" UNC SELF ADJUSTING NUT		04
10	0503011855	0.2" X 1.8" SPRING PIN		02
11	0503064041	CARDAN T.S 16,00 X Q 15,90 X Q 22 X 697		01
11A	0503064136	CARDAN TS 16,00XQ 15,90XQ 22 X 697		01
11B	0503034480	SEED LINE CARDAN COOF		01

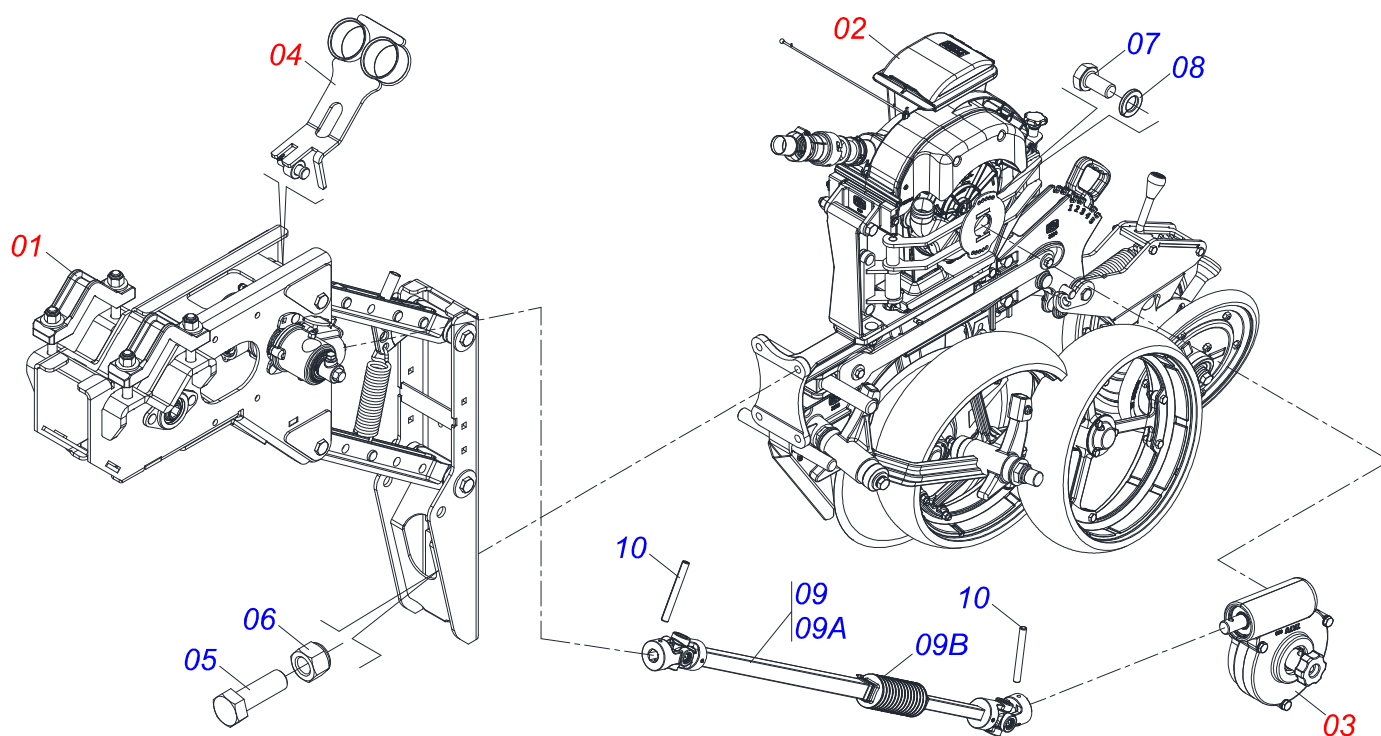

Item	Code	Description	See page	QT
01	0541050048	SUPER LONG FRONT TCC	161	01
02	0541050375	REAR WITH LEFT DDD SPICRR WITHOUT FLAP /TCC/PPH	158	01
03	0541050062	P.P. TRANSMISSION GEAR BOX RIGHT	153	01
04	0531051094	MOUNTED HOSE GUIDE ASSEMBLY	135	01
05	0503010589	1/2" UNC SELF ADJUSTING NUT		04
06	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04
07	0503011812	BOLT M6 X 1 X 12 CS 8.8 ZN		04
08	0503015110	M06 SPRING WASHER		04
09	0503064042	CARDAN T.S 16,00 X Q 15,90 X Q 22 X 577 FULL		01
09A	0503064146	CARDAN TS 16X Q 15,90 X Q 22 X 577 WITHOUT HOOD		01
09B	0503034480	SEED LINE CARDAN COOF		01
10	0503011855	0.2" X 1.8" SPRING PIN		02

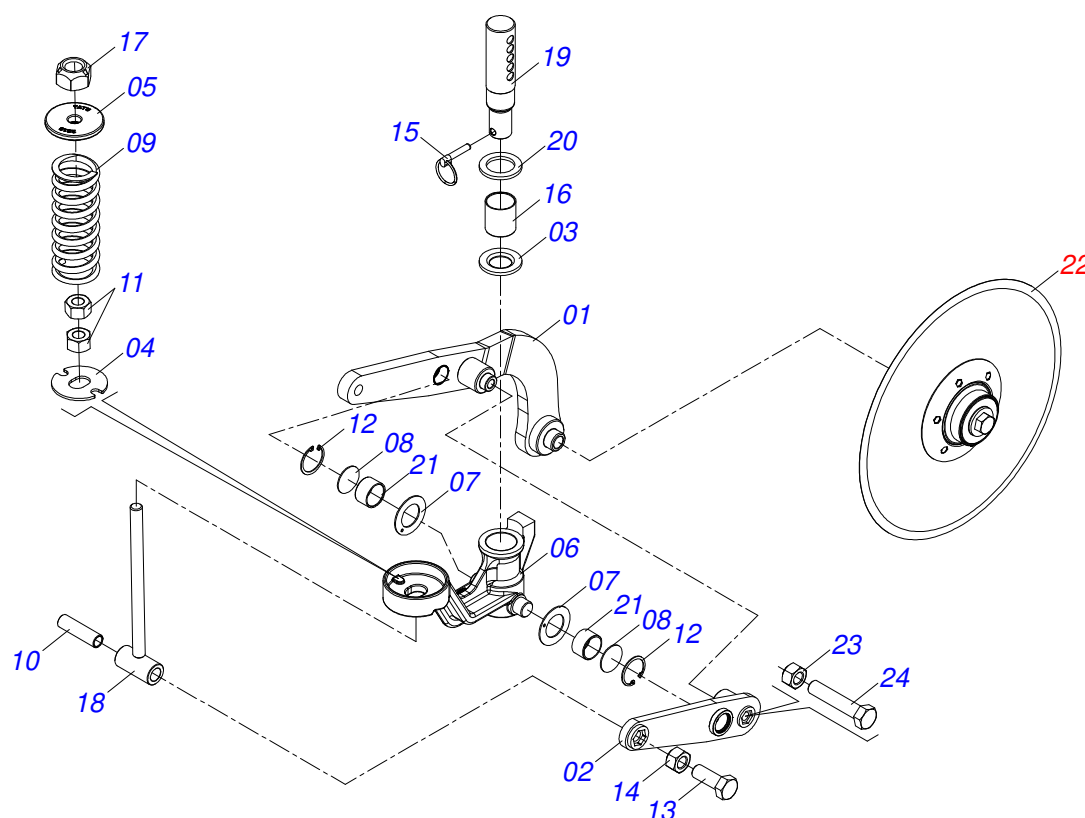


Item	Code	Description	See page	QT
01	0531064023	SINGLE ARM DISC LONG CUT		01
02	0531064022	ARM SUPPORT		01
03	0571019034	FLANGE WASHER AXLE		01
04	0571019032	SUPPORT WASHER		01
05	0502012813	FLANGE WASHER SPRING		01
06	0502013046	SPRING SUPPORT DISC LONG CUT		01
07	0503019274	WASHER		02
08	0581017628	LID		02
09	0503034320	COMPRESSION SPRING		01
10	0591010625	19,50 X 25 X 91,50/91,30 SLEEVE		01
11	0503010417	7/8" NUT		02
12	0503010390	SEAL RING		02
13	0503011198	C3/4" X 6" SCREW		01
14	0503011255	3/4" LOCK NUT		01
15	0503030430	7/16 X 2" PIN LOCK		01
16	0503019271	SELF LUBRICATING BUSHING		01
17	0503011254	7/8" HEX SELF ADJUSTING NUT		01
18	0531061481	MONO SPRING DISC CUTTING REGULATOR		01
19	0591011144	FIXATION AXLE		01
20	0591010628	DC AXIS BACKREST WASHER		01
21	0503019272	LUBRICANT SLEEVE		02
22	0521057681	BOX WITH DISC CUTTING 20 BEARING CONICO	119	01
23	0503012412	5/8" UNC SELF LOCKING NUT		01
24	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN		01

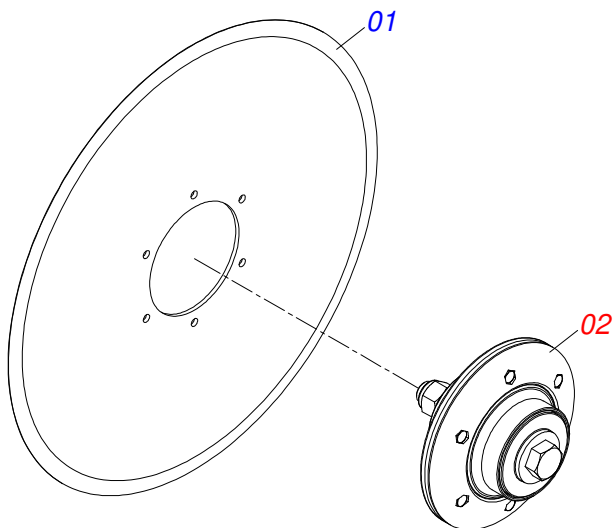


Item	Code	Description	See page	QT
01	0603027851	20" X 0.2" FLAT PLAIN DISC		01
02	0521057680	DISC CUTTING BOX	120	01

DISC CUTTING BOX


0521057680

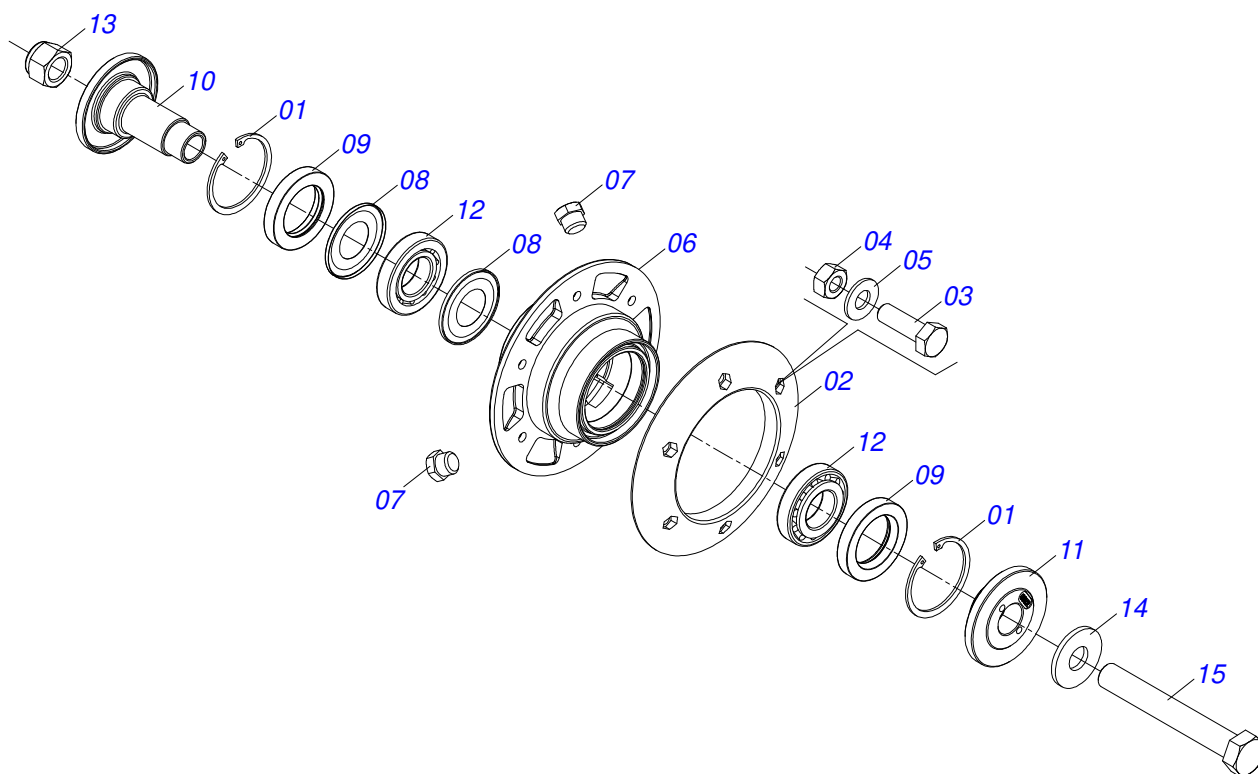


Item	Code	Description	See page	QT
01	0503010370	502072 CLAMPING RING (FOR AXLE)	02	
02	0502020641	BLADE DISC FLANGE	01	
03	0503018825	5/16 UNC UNC BOLT	06	
04	0503013816	5/16" LOCKNUT	06	
05	0501010694	FLAT WASHER	06	
06	0502012862	DISC BLADE HUB	01	
07	0511017907	1/8" BSPT X 6 PLUG	02	
08	0503019285	RING	02	
09	0503010590	00674-B SEAL	02	
10	0591012836	CUTTING DISC AXLE	01	
11	0502040872	REGULATORY NUT	01	
12	0503012170	30207 ROLLER BEARING	02	
13	0503010812	7/8" UNF SELF LOCKING NUT	01	
14	0501010067	22.5 X 56 X 4.75 FLAT WASHER	01	
15	0503019283	SCREW 7/8 UNF X 6.1/4	01	

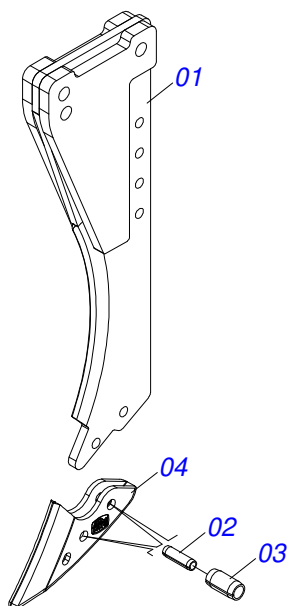


Item	Code	Description	See page	QT
01	0511061768	FERTILIZER SCARIFIER ROD		01
02	0503011402	0.2" X 0.8" SPRING PIN		02
03	0503016853	SPRING PIN		02
04	0502040869	FIXED ROD BEARING		01

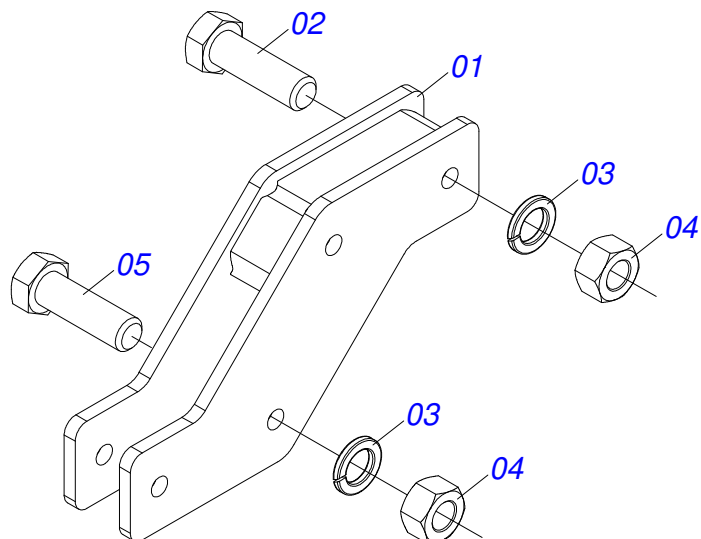


Item	Code	Description	See page	QT
01	0531063324	LONG LINE COMPLEMENT SUPPORT		01
02	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		02
03	0503010019	1/2" SPRING WASHER		04
04	0503010060	1/2 UNC G.5 ZN HEX NUT		04
05	0503010479	BOLT		02

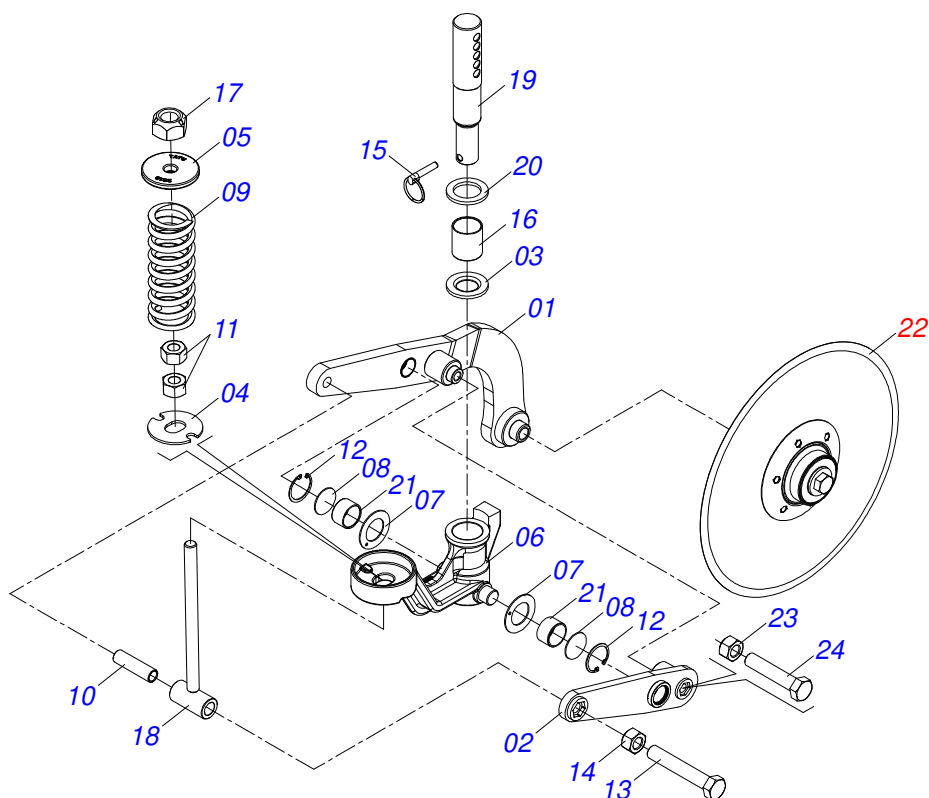


Item	Code	Description	See page	QT
01	0531060662	MONO ARM DISC CUTTING		01
02	0531060661	ARM SUPPORT		01
03	0571019034	FLANGE WASHER AXLE		01
04	0571019032	SUPPORT WASHER		01
05	0502012813	FLANGE WASHER SPRING		01
06	0591010619	DC SPRING SUPPORT		01
07	0503019274	WASHER		02
08	0581017628	LID		02
09	0503034320	COMPRESSION SPRING		01
10	0591010625	19,50 X 25 X 91,50/91,30 SLEEVE		01
11	0503010417	7/8" NUT		02
12	0503010390	SEAL RING		02
13	0503011198	C3/4" X 6" SCREW		01
14	0503011255	3/4" LOCK NUT		01
15	0503030430	7/16 X 2" PIN LOCK		01
16	0503019271	SELF LUBRICATING BUSHING		01
17	0503011254	7/8" HEX SELF ADJUSTING NUT		01
18	0531061481	MONO SPRING DISC CUTTING REGULATOR		01
19	0591011144	FIXATION AXLE		01
20	0591010628	DC AXIS BACKREST WASHER		01
21	0503019272	LUBRICANT SLEEVE		02
22	0521057681	BOX WITH DISC CUTTING 20 BEARING CONICO	119	01
23	0503012412	5/8" UNC SELF LOCKING NUT		01
24	0503010967	SCREW 5/8 UNC X 5.1/2 CS G.5 ZN		01

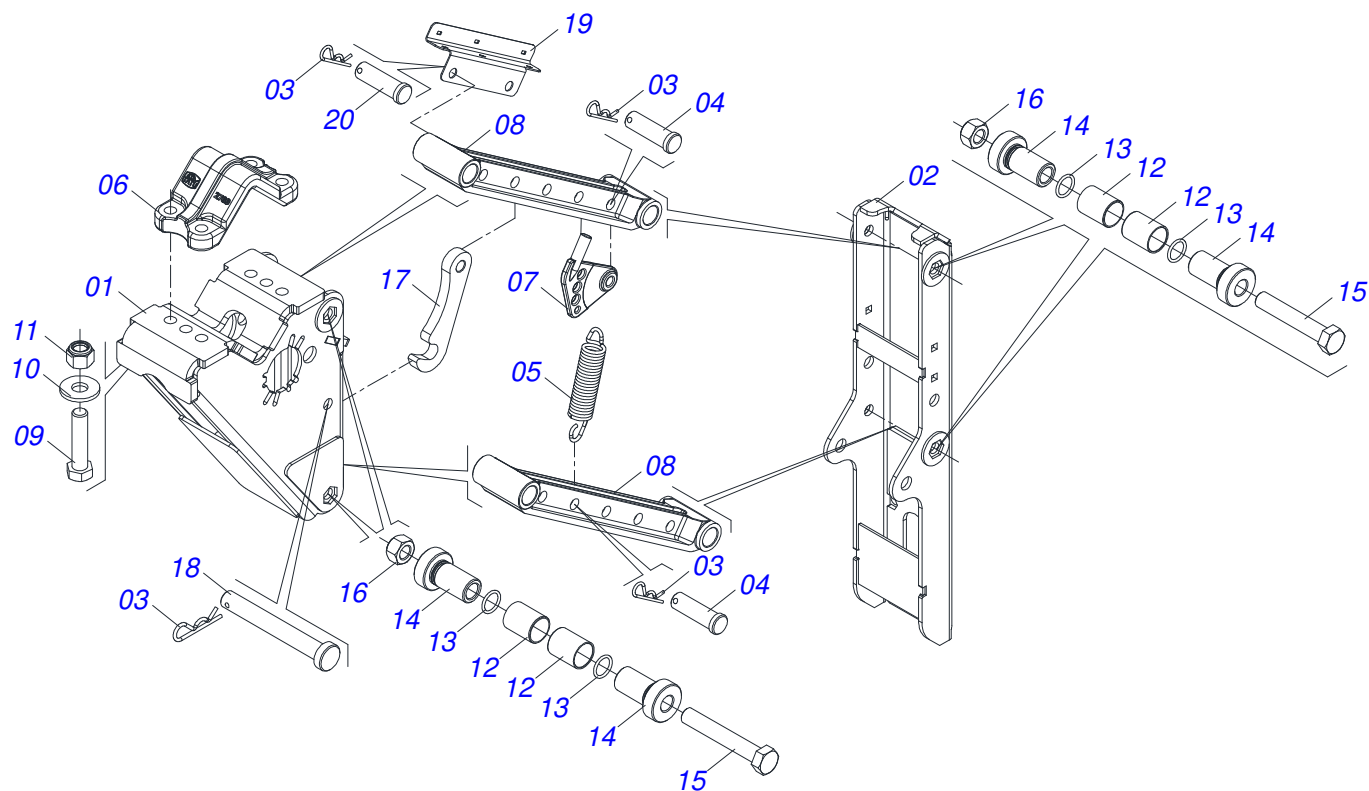


Item	Code	Description	See page	QT
01	0531060663	FRONT FRAME SEED LINE	01	
02	0531061428	REAR LINE	01	
03	0503030168	HITCH PIN CLIP	05	
04	0571018883	PIN FIXER SPRING	04	
05	0503034198	SPRING TRACTION 40 X 198 X 5,5	01	
06	0502012789	FIXER SUPPORT FERTILIZER ROW	01	
07	0502012812	SEED ROW ADJUSTMENT LEVER ASSY	01	
08	0591011156	PIVOT ARM SEED ROW	02	
09	0503017857	BOLT 5/8 UNF 4	04	
10	0501012140	FLAT WASHER	04	
11	0503010811	5/8\" UNF SELF ADJUSTING NUT	04	
12	0503019273	AUTO LUBRICANT SLEEVE	08	
13	0503010045	O'RING	08	
14	0591012829	SPACER LOWER SLEEVE	08	
15	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN	04	
16	0503012412	5/8\" UNC SELF LOCKING NUT	04	
17	0591012827	FRONT PENDULUM LINE	01	
18	0591012828	LOCK PIN ROW ARTICULAT	01	
19	0501219536	LINE GUTTER	01	
20	0501310623	SPRING FIXING PIN	02	

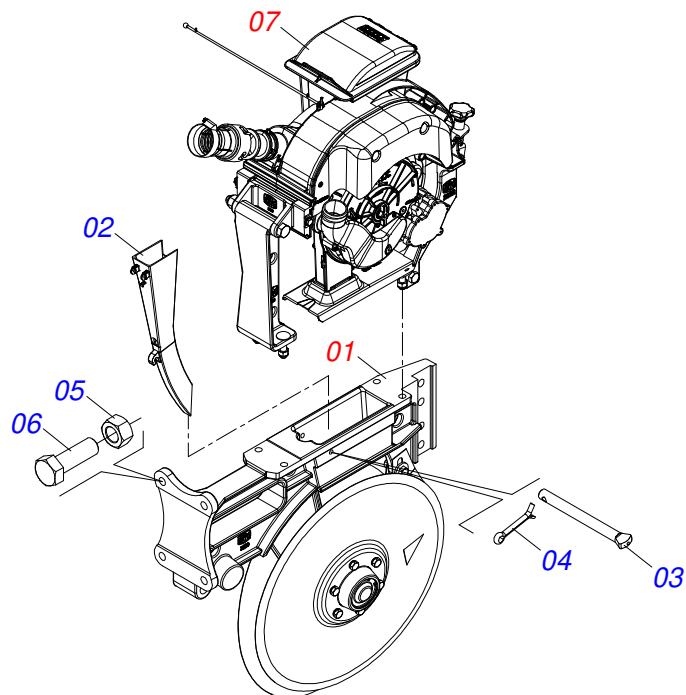


Item	Code	Description	See page	QT
01	0521056955	RIGHT DDD ASSY	126	01
02	0503062403	TUBE SEED P.P		01
03	0571017895	PIN FIXER CONDUCTOR P.P		01
04	0503010140	1/8" X 3/4" COTTERPIN		01
05	0503012136	NUT 1/2 NF		04
06	0503012135	BOLT 1/2 UNF X 1.1/2 CS G.5 ZN		04
07	0521056952	ASSY P.P CSC/V-DRIVE	131	01

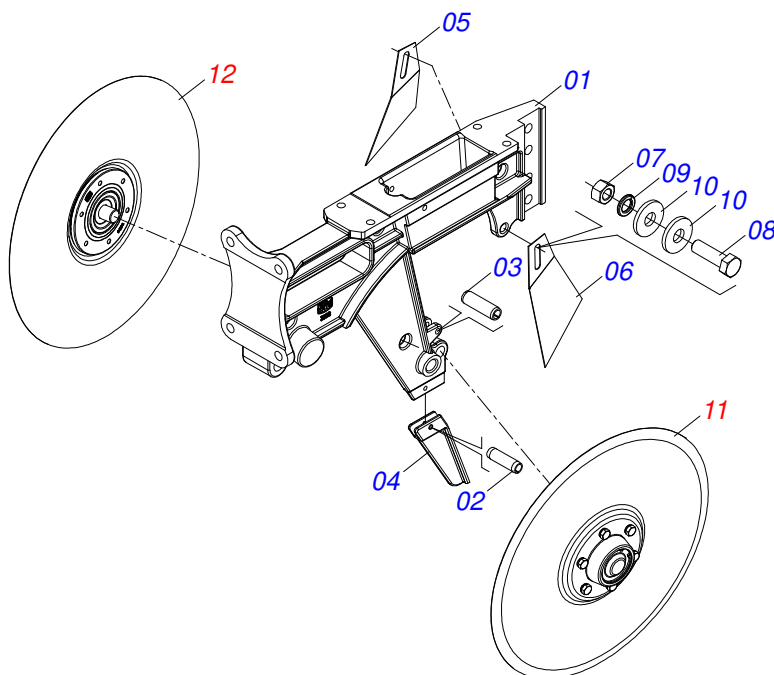


Item	Code	Description	See page	QT
01	0591011773	RIGHT DDD BODY		01
02	0503011402	0.2" X 0.8" SPRING PIN		01
03	0503013129	ELASTIC PIN		01
04	1902012779	PROTECTION CONDUCTOR PNEUMATIC PRECISION		01
05	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
07	0503010026	3/8" NUT		01
08	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
09	0503010025	3/8 SPRING WASHER		01
10	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
11	0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 127 FERTILIZER / SEED		01
12	0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 128 FERTILIZER / SEED		01

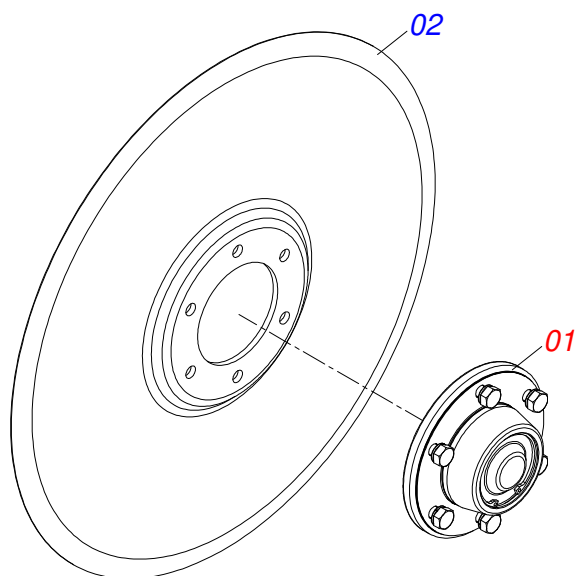


Item	Code	Description	See page	QT
01	0521055865	ASSY LEFT HUB DDD FERTILIZER / SEED	129	01
02	0612023500	DPL CPR 15X4 C123 AFSFR72,00+6FR D568		01

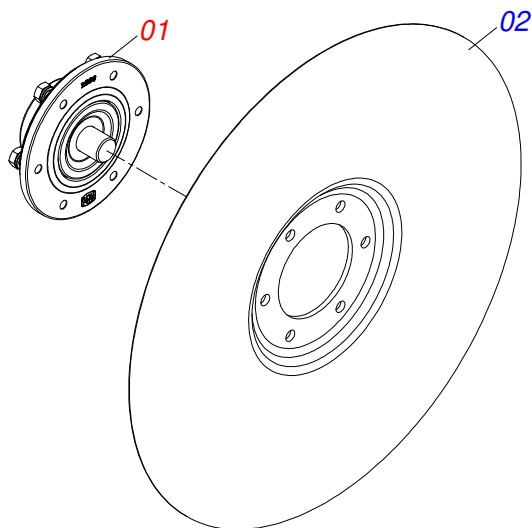


Item	Code	Description	See page	QT
01	0521055864	ASSY RIGHT HUB DDD FERTILIZER / SEED	130	01
02	0612023500	DPL CPR 15X4 C123 AFSFR72,00+6FR D568		01

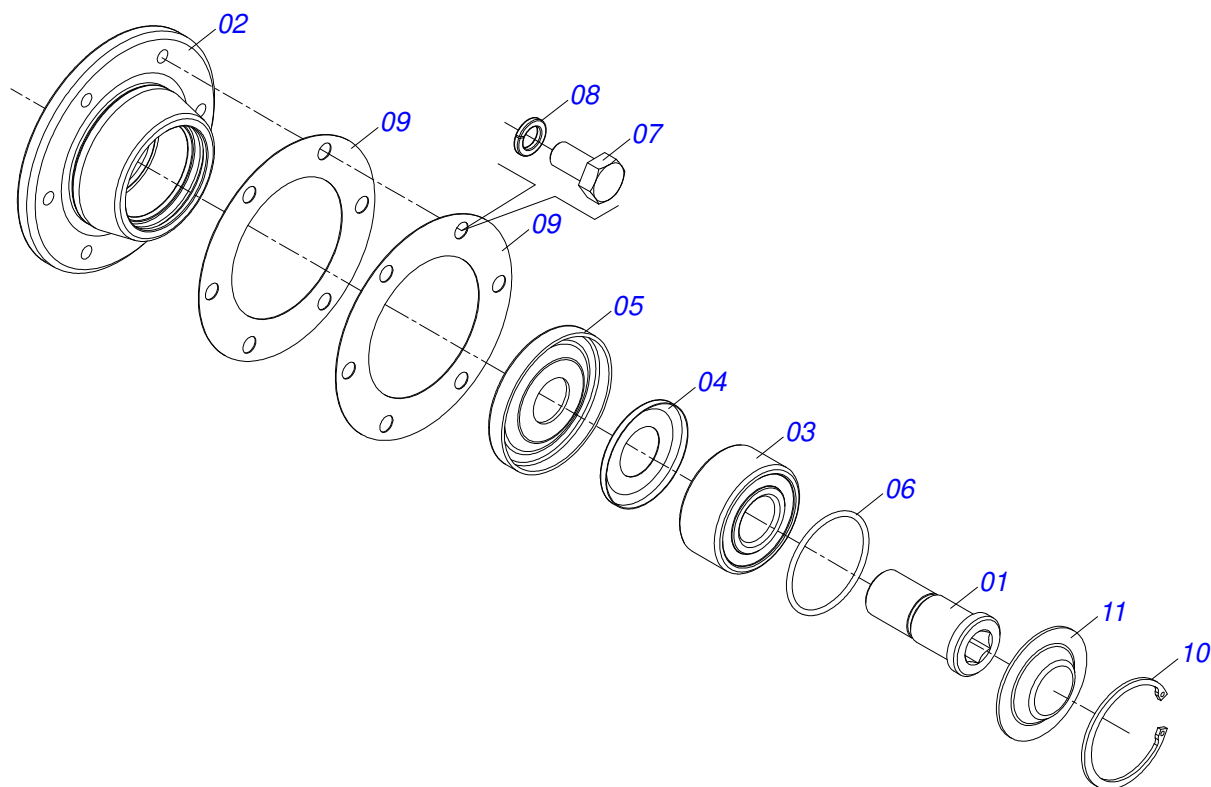


Item	Code	Description	See page	QT
01	0571011151	LEFT DOUBLE DISC HUB		01
02	0502012896	SHORT CUBE FERTILIZER/SEED HUB		01
03	0503019342	ROLLER BEARING		01
04	0503034055	CLAMPING RING		01
05	0511011927	DUST CLOAK		01
06	0503014679	2-134 O'RING		01
07	0503019377	SCREW 5/16 UNC X 5/8 C S R I G.8 ZN		06
08	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
09	0591010493	WASHER DDD FERTILIZER / SEED		02
10	0503015081	502052 CLAMPING RING (FOR AXLE)		01
11	0571011152	DOUBLE DISC CAP		01

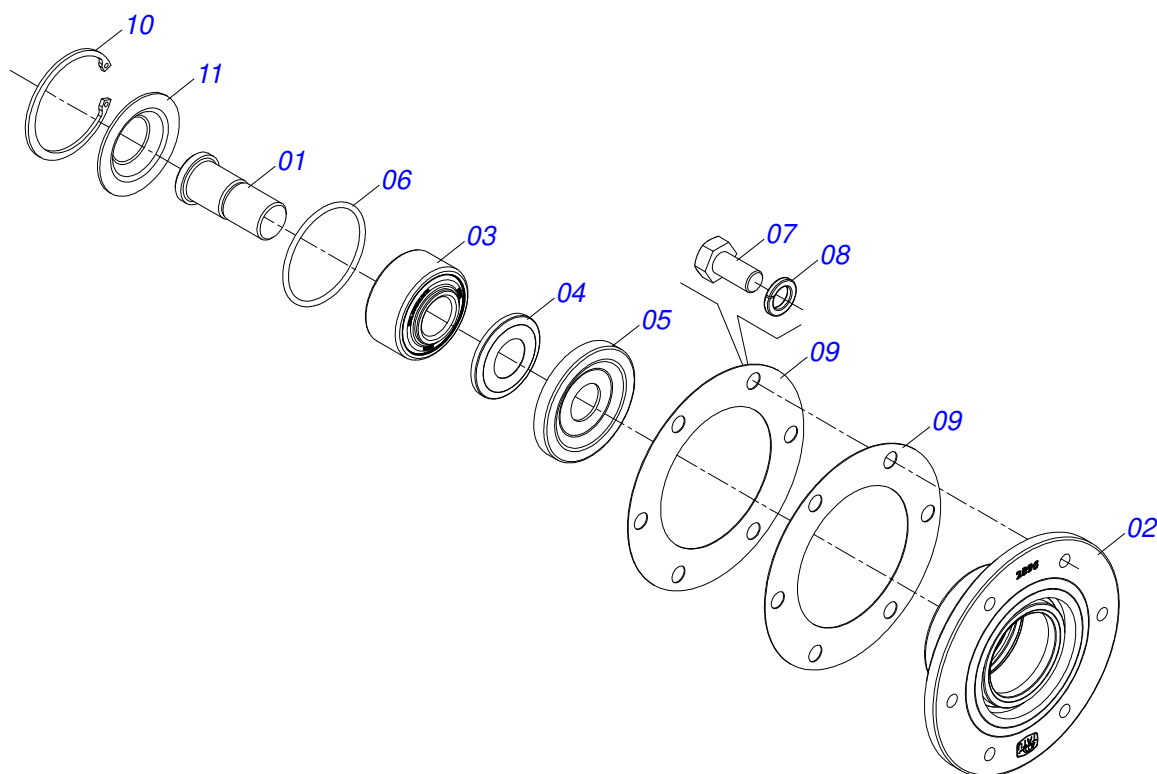


Item	Code	Description	See page	QT
01	0571011150	RIGHT DOUBLE DISC AXLE		01
02	0502012896	SHORT CUBE FERTILIZER/SEED HUB		01
03	0503019342	ROLLER BEARING		01
04	0503034055	CLAMPING RING		01
05	0511011927	DUST CLOAK		01
06	0503014679	2-134 O'RING		01
07	0503019377	SCREW 5/16 UNC X 5/8 C S R I G.8 ZN		06
08	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
09	0591010493	WASHER DDD FERTILIZER / SEED		02
10	0503015081	502052 CLAMPING RING (FOR AXLE)		01
11	0571011152	DOUBLE DISC CAP		01

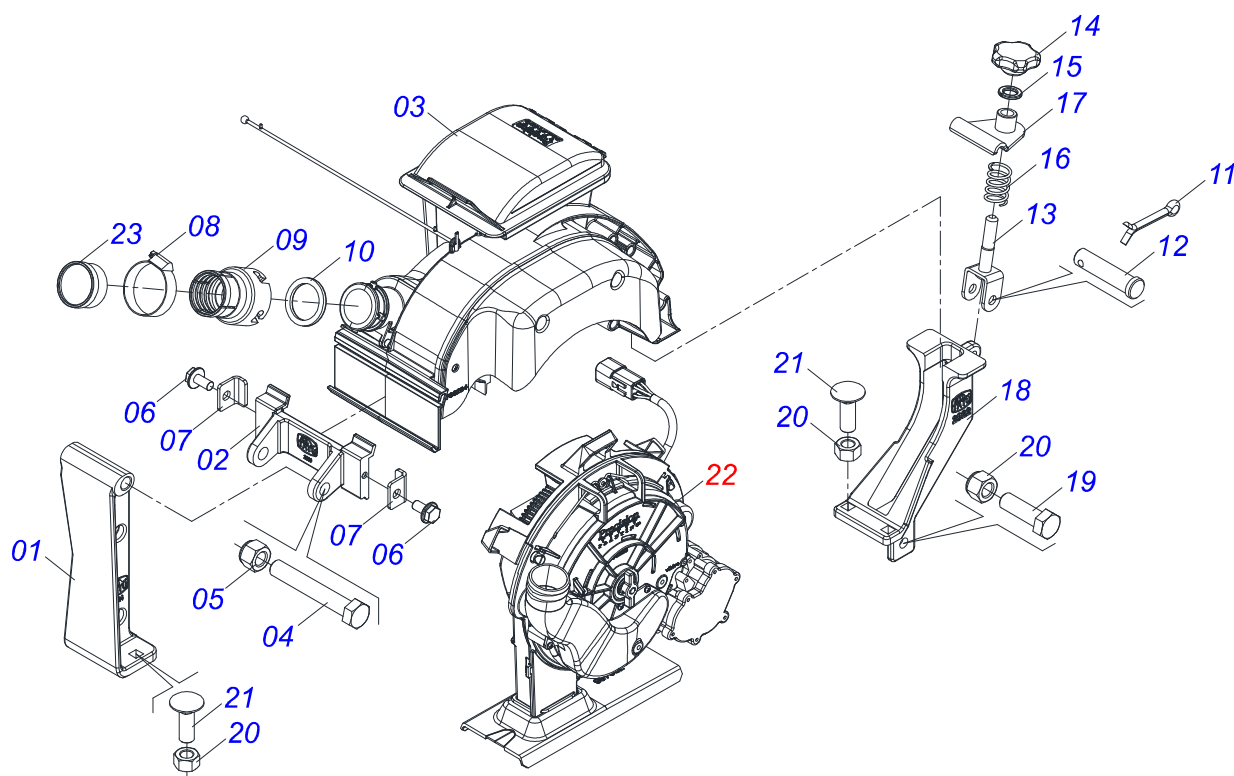


Item	Code	Description	See page	QT
01	0502012924	PRECISION PLANTING SUPPORT		01
02	0502012800	SUPPORT ARTICULATION PNEUMATIC		01
03	0503062406	SEED HOPPER		01
04	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		01
05	0503010589	1/2" UNC SELF ADJUSTING NUT		01
06	0503810009	BOLT		02
07	0571018649	SUPPORT FIXER		02
08	0503019869	CLAMP		01
09	0581017816	TERMINAL		01
10	0503034204	SEALING		01
11	0503010140	1/8" X 3/4" COTTERPIN		01
12	0571014024	FAST BOLT GUIDE AXLE		01
13	0503034824	FIXATIVE		01
14	0503010293	CLAMP KNOB		01
15	0503010025	3/8 SPRING WASHER		01
16	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING		01
17	0501110894	FIXER		01
18	0502012922	FIXING SUPPORT		01
19	0503011404	BOLT		01
20	0503013357	3/8 SELF-ADJUSTING NUT		05
21	0503019529	SCREW 3/8 UNC X 1.1/2 CAPQ RI G.5 ZN		04
22	0521052131	VSET2 DISTRIBUTOR WITH CORN DISC WITHOUT PROTECTION	132	01
23	0501210173	FIXATION RING		01

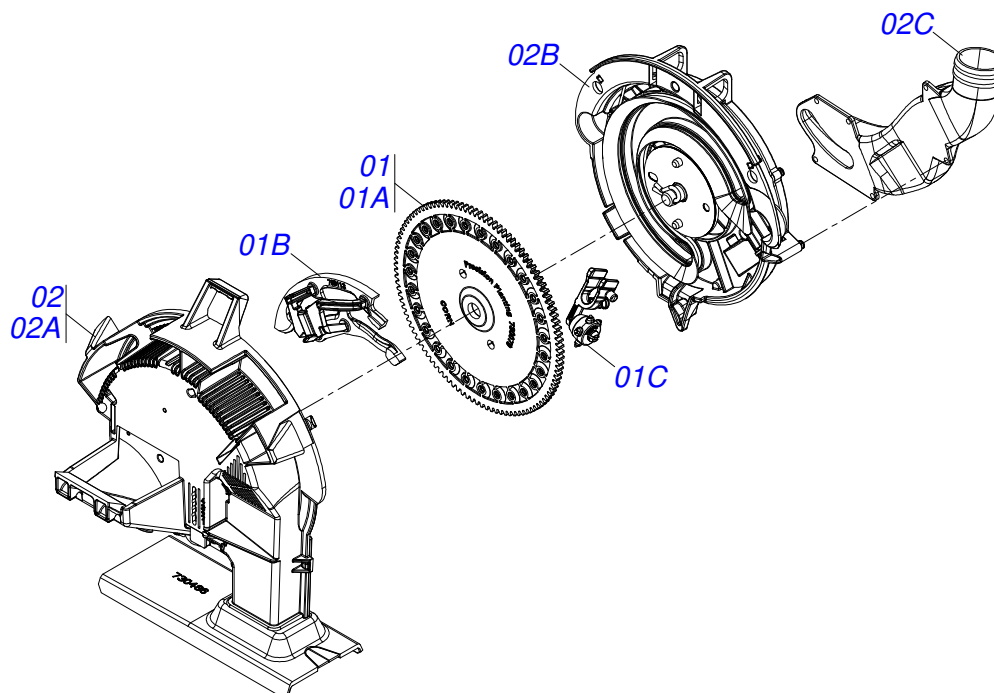


Item	Code	Description	See page	QT
01	0503062417	KIT CORN DISTRIBUTION		01
01A	0503018160	CORN PLASTIC DISC		01
01B	0503062472	SELECTOR SEED CORN		01
01C	0503062474	EJECTOR CORN SEED SET		01
02	0503062405	SEED DISTRIBUTOR		01
02A	0503062567	FIXED BASE SEEDS DISTRIBUTOR		01
02B	0503062974	MOBILE BASE WITHOUT SNORKEL		01
02C	0503062973	SNORKEL ASSY PP768718		01

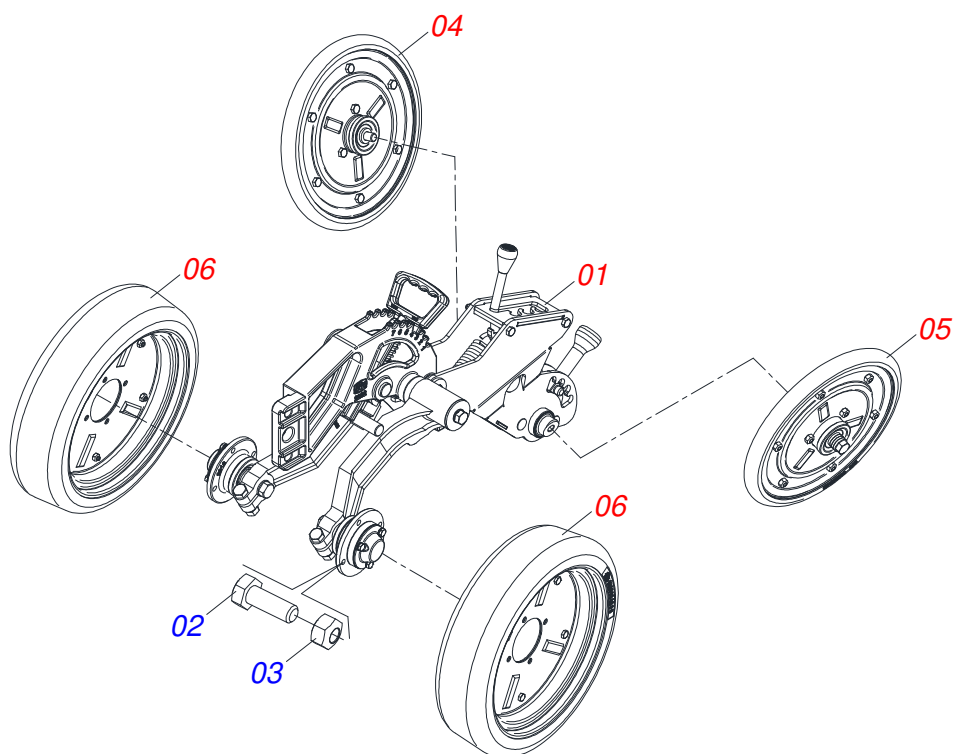


Item	Code	Description	See page	QT
01	0531050980	SEM SEMI-ASSEMBLED CONTROL WITHOUT LUBRICATION	134	01
02	0503010358	5/16" X 5/8" BOLT		08
03	0503013816	5/16" LOCKNUT		08
04	0521055017	RIGHT COMPACTOR WHEEL	140	01
05	0521054990	LEFT COMPACTOR WHEEL	139	01
06	0511055819	DEPTH BAND WITH RIM	142	02

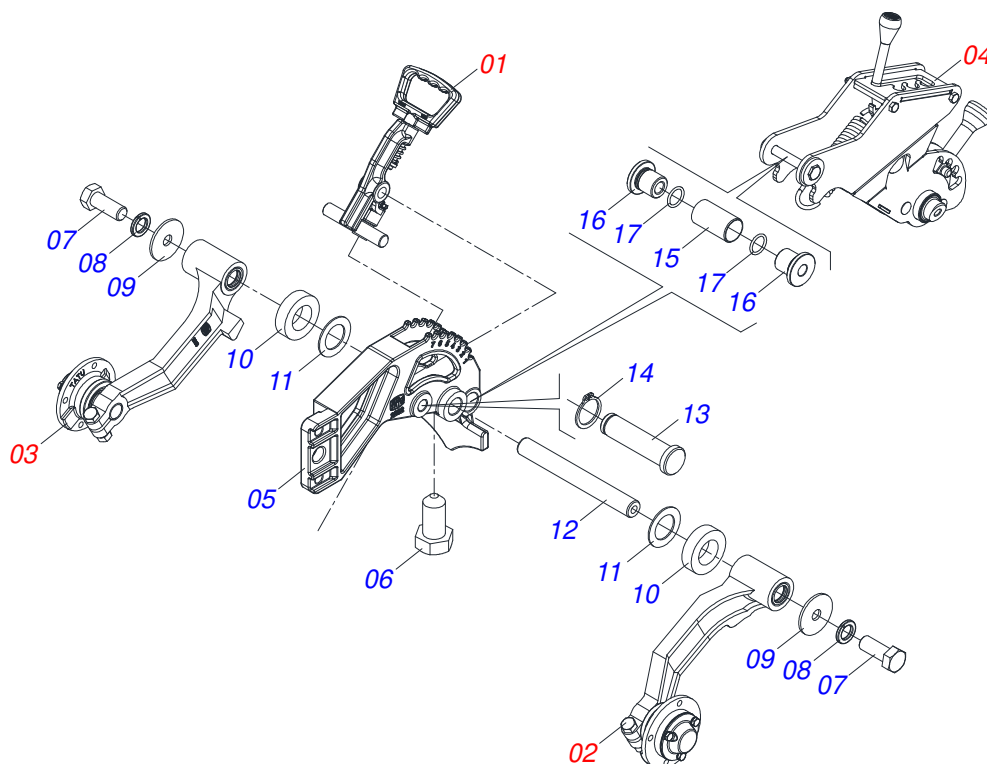


Item	Code	Description	See page	QT
01	0501052297	DEPTH WHEELS REGULATOR ASSY	138	01
02	0531050975	LEFT ARM WHEELS DEPTH WITH HUB WITHOUT LUBRICATION	136	01
03	0531050973	RIGHT ARM DEPTH WHEEL WITH HUB WITHOUT LUBRICATION		01
04	0521055033	SEMI-ASSEMBLED COMPACTOR BODY		01
05	0502012282	DEPTH CONTROL SUPPORT		01
06	0503034377	3/8 UNC X 3/4 BOLT		01
07	0503010311	1/2" X 1-1/4" BOLT		02
08	0503010019	1/2" SPRING WASHER		02
09	0571017749	FLAT WASHER		02
10	0571015974	WASHER		02
11	0511015346	FLAT WASHER		02
12	0581011100	DEPTH WHEEL AXLE		01
13	0521019093	0.6" X 2.7" PIVOT SHAFT		01
14	0503010581	RING		01
15	0503019275	SLEEVE LUBRICATION SYSTEM		01
16	0581019473	ARTICULATED SLEEVE		02
17	0503010045	O'RING		02

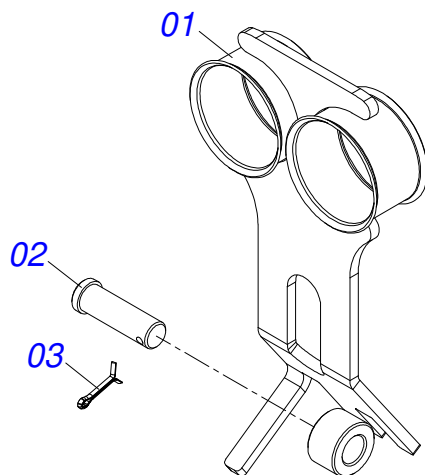


Item	Code	Description	See page	QT
01	0531062260	GUIDE HOSE L / TRANSMISSION		01
02	0571018883	PIN FIXER SPRING		01
03	0503010257	1/8" X 1" COTTERPIN		01

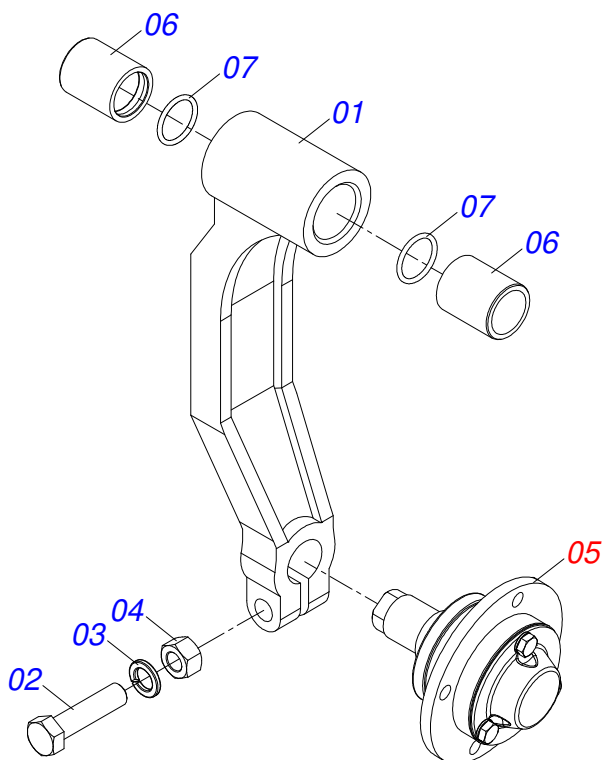

Item	Code	Description	See page	QT
01	0581019472	LEFT ARM WHEEL CONTROL DEPTH		01
02	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		01
03	0503010019	1/2" SPRING WASHER		01
04	0503010060	1/2 UNC G.5 ZN HEX NUT		01
05	0531050974	CUBE CONTROL DEPTH WITHOUT LUBRICATION	137	01
06	0581019514	LUBRICANT SLEEVE		02
07	0503011109	2-119 N 3006-9B O'RING		02

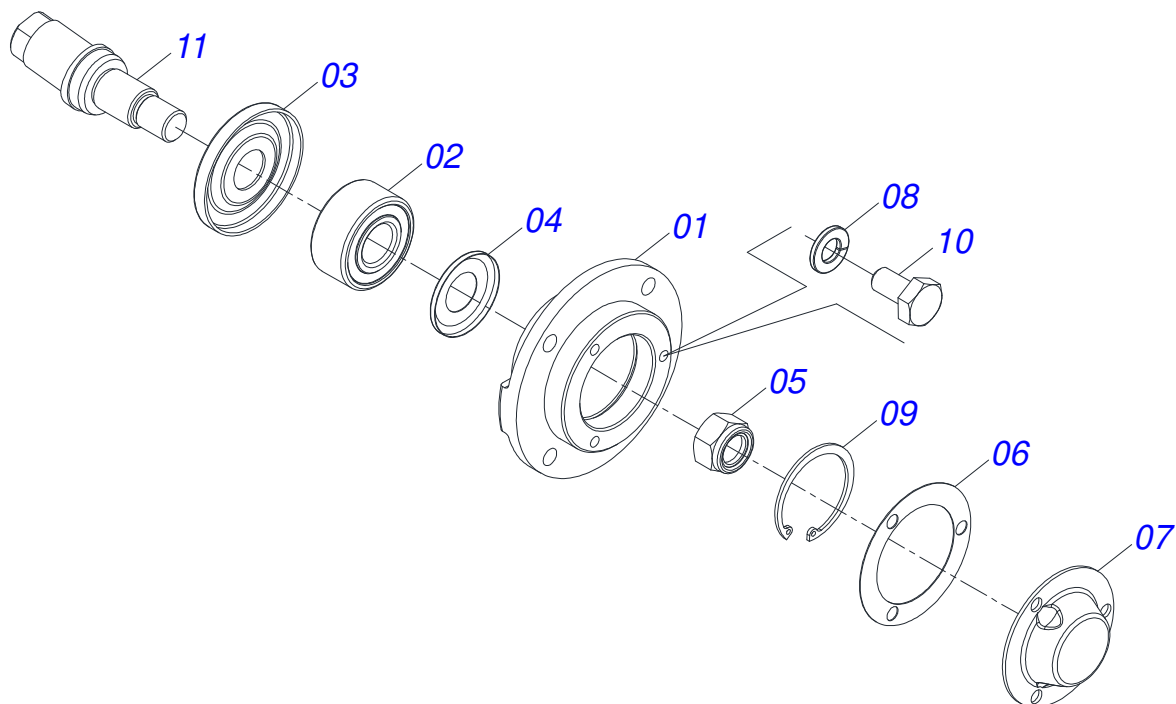


Item	Code	Description	See page	QT
01	0581019513	DEPTH WHEEL HUB		01
02	0503019342	ROLLER BEARING		01
03	0581019168	DUST CLOAK		01
04	0503034055	CLAMPING RING		01
05	0503010878	5/8" SELF ALIGNING NUT		01
06	0503030757	2.9" X 2" X 0.02" JOINT		01
07	0521019178	PROTECTION LID		01
08	0503010143	1/4" SPRING WASHER		03
09	0503011105	SEAL RING		01
10	0503014729	1/4" UNF X 1/2" BOLT		03
11	0591018029	DEPTH REGULATING AXLE WITH ANGLE		01

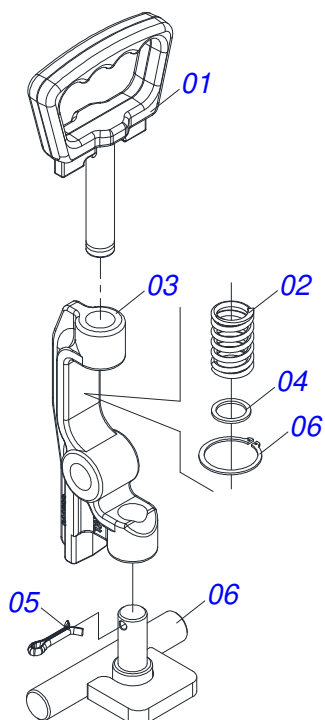


Item	Code	Description	See page	QT
01	0502011689	1/8" DEPTH CONTROL LEVER		01
02	0503030975	0.9" X 1.5" X 0.1" SPRING		01
03	0502011688	DEPTH CONTROL LEVER		01
04	0581019519	FLAT WASHER		01
05	0503010071	3/16" X 1" COTTERPIN		01
06	0511060699	DEPTH WHEEL STOP		01
07	0503019398	AXLE RETAINER RING		01

LEFT COMPACTOR WHEEL


0521054990

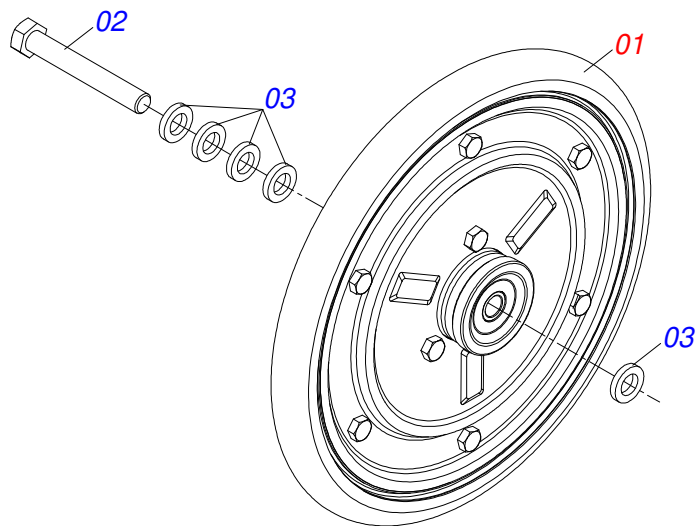


Item	Code	Description	See page	QT
01	0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	141	01
02	0503013739	1/2" X 1" BOLT		01
03	0521014508	FLAT WASHER		05

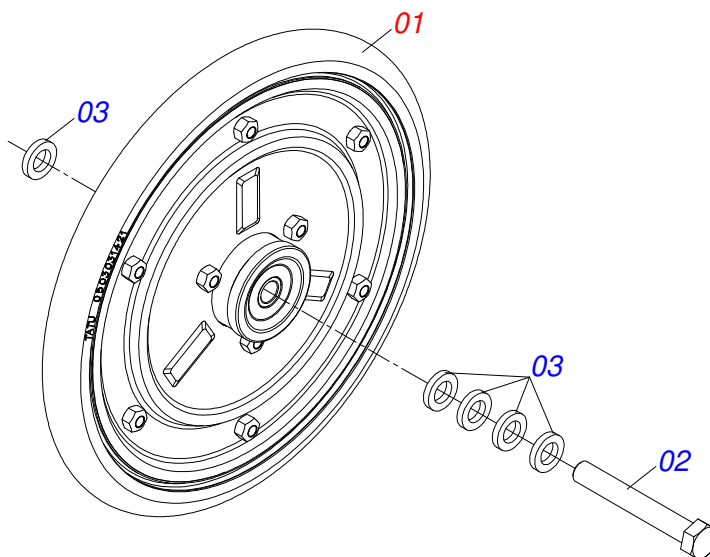


Item	Code	Description	See page	QT
01	0521054989	RUBBER WHEEL ASSEMBLY WITHOUT LUBRICATION	141	01
02	0503010752	1/2" X 3.1/2" BOLT		01
03	0521014508	FLAT WASHER		05

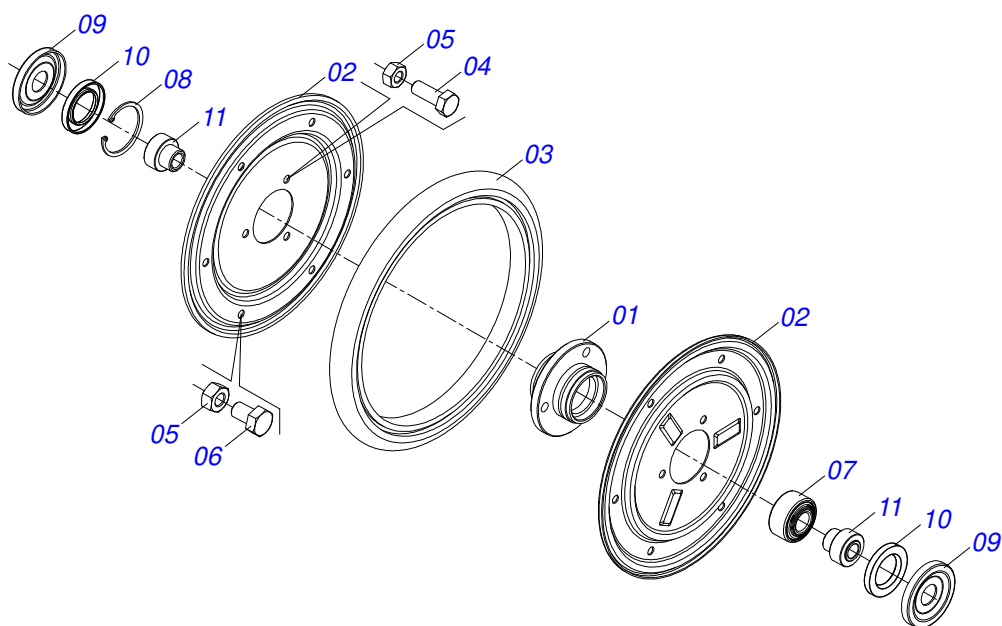


Item	Code	Description	See page	QT
01	0502012894	CUBE WHEELS		01
02	0521018928	PRESS WHEEL RIM		02
03	0503031421	DEPTH CONTROL WHEEL RUBBER BAND		01
04	0503010358	5/16" X 5/8" BOLT		03
05	0503013816	5/16" LOCKNUT		09
06	0503010011	5/16" X 1/2" BOLT		06
07	0503019342	ROLLER BEARING		01
08	0503011105	SEAL RING		01
09	0511011927	DUST CLOAK		02
10	0503013848	5072-BR SEAL		02
11	0581019533	AXIS		02

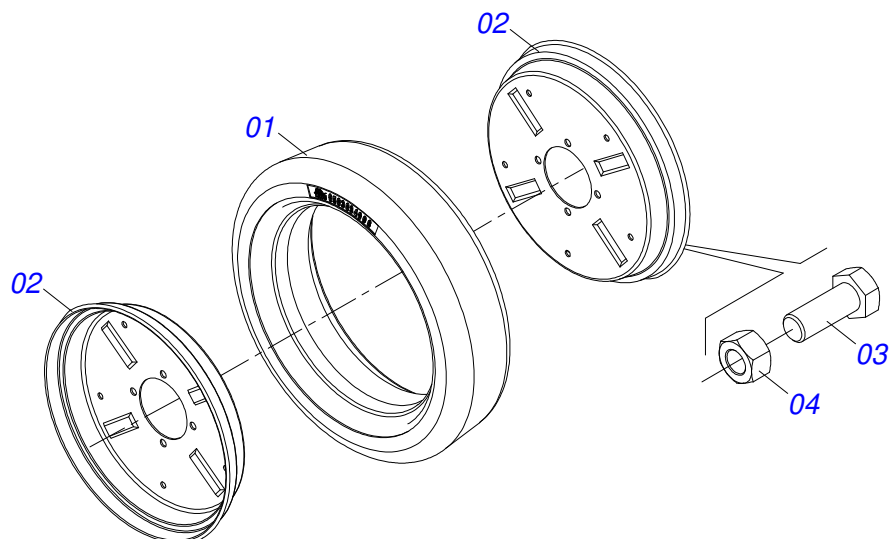

Item	Code	Description	See page	QT
01	0503034008	DEPTH CONTROL		01
02	0521010832	RIM FLANGE		02
03	0503013758	1/4" X 1-1/2" BOLT		05
04	0503013814	1/4" NC LOCKNUT		05

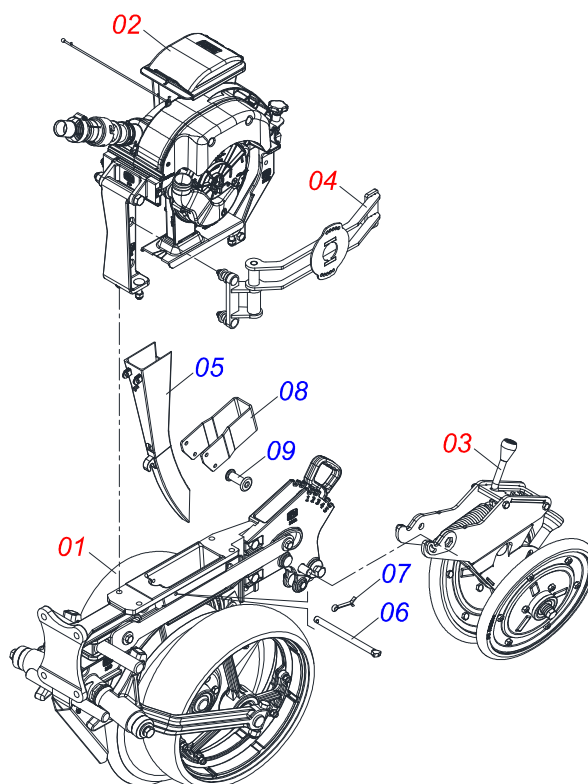

Item	Code	Description	See page	QT
01	0531059830	REAR WITH RIGHT DDD WITHOUT FLAP WITHOUT FULL WHEEL	144	01
02	0521056640	PRECISION PLANTING CSC CABLE / TRANSMISSION ASSY	149	01
03	0531059836	COMPACTOR WHEEL ASSEMBLY	150	01
04	0531051264	FULL SUPPORT FOR ENCAPSULATED CURRENT FIXATION	152	01
05	0503062403	TUBE SEED P.P		01
06	0571017895	PIN FIXER CONDUCTOR P.P		01
07	0503010140	1/8" X 3/4" COTTERPIN		01
08	0591017565	SEED CONDUCTOR GUIDE		01
09	0503015341	POP RIVET		02

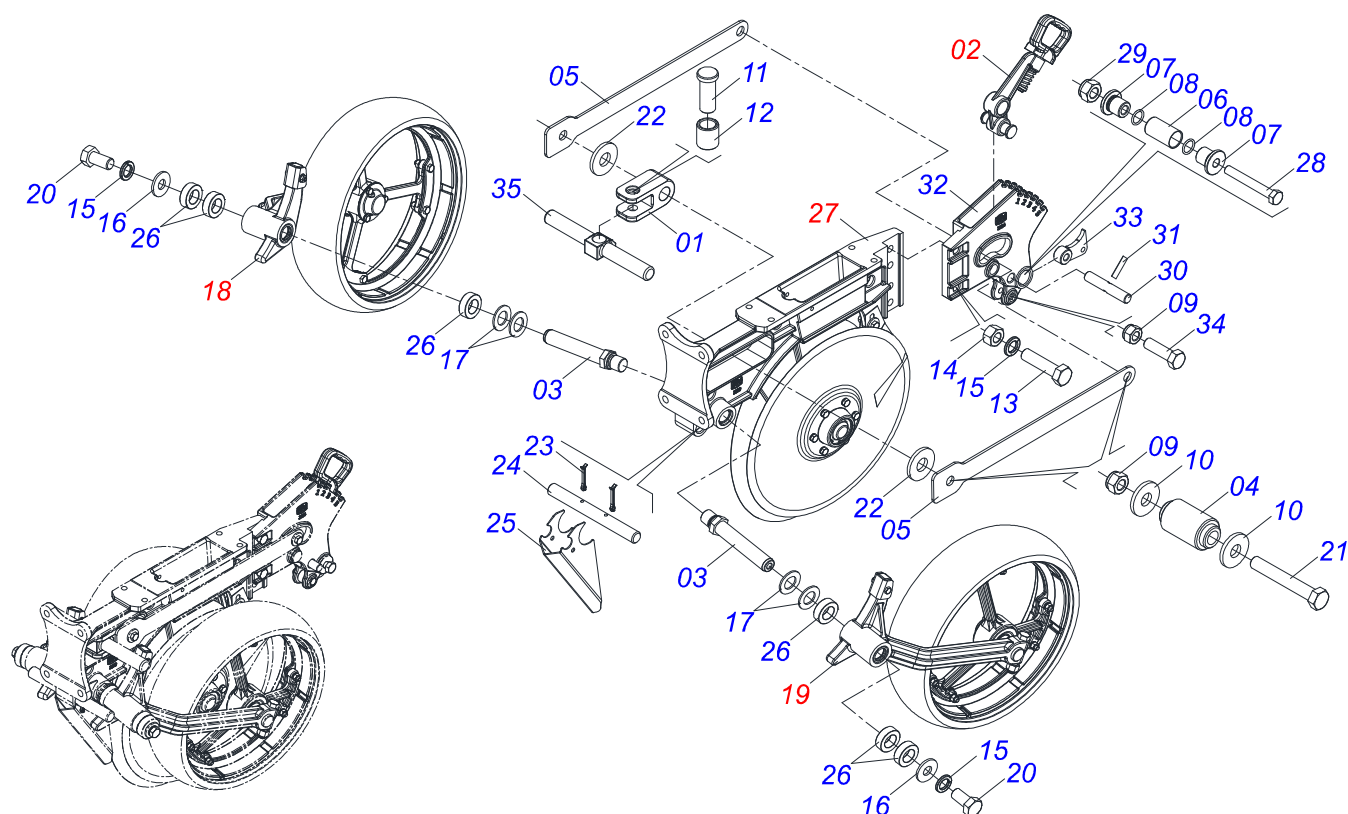

Item	Code	Description	See page	QT
01	0502012923	BEATER		01
02	0531059833	DEPTH REGULATOR	145	01
03	0591016905	DEPTH WHEEL JOINT AXLE		02
04	0591011309	ADJUSTMENT BUSHING		02
05	0591011310	ADJUSTMENT BAR		02
06	0503019275	SLEEVE LUBRICATION SYSTEM		01
07	0581019473	ARTICULATED SLEEVE		02
08	0503010045	O'RING		02
09	0503013357	3/8 SELF-ADJUSTING NUT		03
10	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
11	0591011326	LOCK PIN		01
12	0571015326	ARTICULATION SLEEVE HANDLE		01
13	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
14	0503010060	1/2 UNC G.5 ZN HEX NUT		02
15	0503010019	1/2" SPRING WASHER		04
16	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
17	0501011445	FLAT WASHER		04
18	0531059832	ASSEMBLED RIGHT ARM	146	01
19	0531059831	ASSEMBLED LEFT ARM		01
20	0503012556	1/2" X 1" BOLT		02
21	0503018882	3/8 UNC X 3.1/2 C S G.7 ZN SCREW		02
22	0591011306	ADJUSTMENT LOCK		02
23	0503010131	3/16" X 1-1/2" COTTERPIN		02
24	0591016900	BEATING AXLE		01
25	0591016988	SPICER PROTECTOR		01
26	0591016907	SPACER GLOVE 14MM		06
27	0521056635	RIGHT ASSY DDD INTEGRATED DEPTH SYSTEM SPI		01
28	0503011140	1/2" X 3-3/4" BOLT		01
29	0503011336	1/2" HEX SELF ADJUSTING NUT		01
30	0501311083	AXIS 5/8 X 90MM		01
31	0503012342	CLAMPING PIN		01




USAP 3200 AP SUPREMA ALP - FRAME 9520
REAR WITH RIGHT DDD WITHOUT FLAP WITHOUT FULL

Page 144
0531059830

Item	Code	Description	See page	QT
32	0502013084	SUPPORT REGULATOR		01
33	0531066051	FIXER SPRING		01
34	0503011404	BOLT		01
35	0502013083	ADJUSTMENT SHAFT DEPTH		01

DEPTH REGULATOR


0531059833

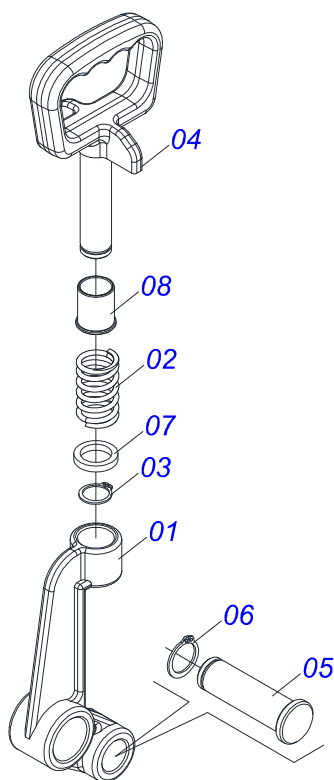


Item	Code	Description	See page	QT
01	0501310947	BODY REGULATORY		01
02	0503030975	0.9" X 1.5" X 0.1" SPRING		01
03	0503010581	RING		01
04	0502012892	DEPTH CONTROL HANDLE		01
05	0581019526	ARTICULATED AXLE LEVER DEPTH		01
06	0503010302	501019 SEAL RING		01
07	0581019519	FLAT WASHER		01
08	0501311082	NYLON GLOVE 17.20 X 20 X 25MM		01

ASSEMBLED RIGHT ARM


0531059832

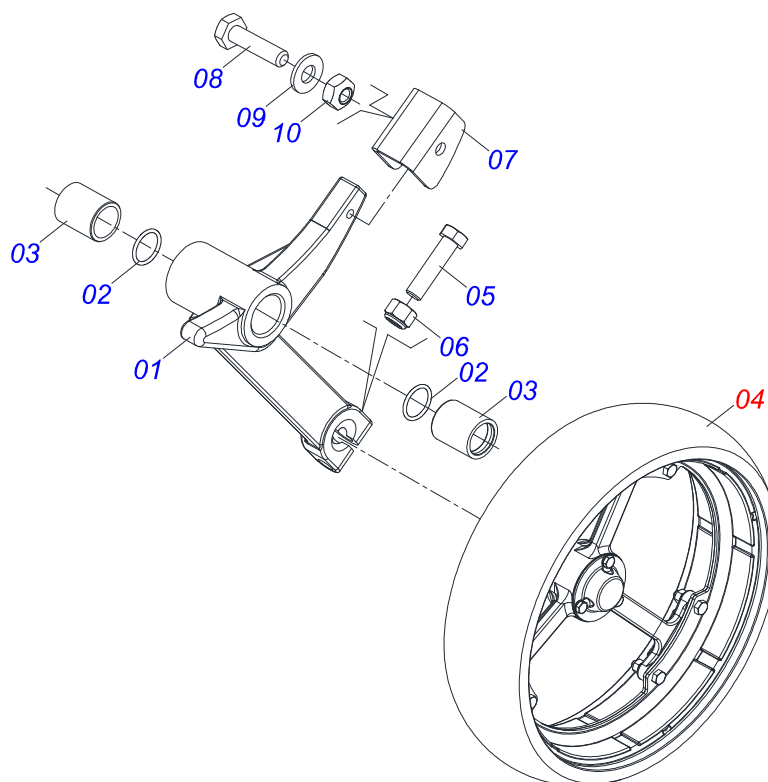


Item	Code	Description	See page	QT
01	0502013082	RIGHT ARM		01
02	0503011109	2-119 N 3006-9B O'RING		02
03	0581019514	LUBRICANT SLEEVE		02
04	0521055056	WHEEL RAYED ASSY BAND	147	01
05	0503010741	1/2" X 2-3/4" BOLT		01
06	0503010589	1/2" UNC SELF ADJUSTING NUT		01
07	0501311081	BEATER WHEEL CONTROL DEPTH		01
08	0503010420	BOLT		01
09	0511017303	FLAT WASHER		01
10	0503013814	1/4" NC LOCKNUT		01

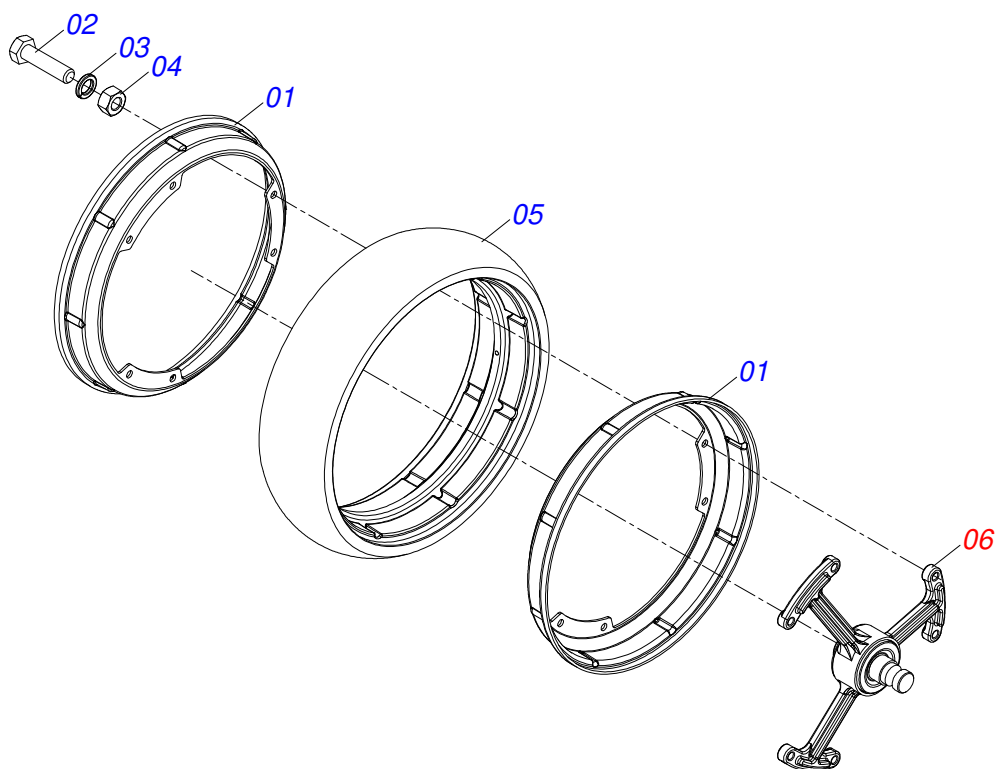


Item	Code	Description	See page	QT
01	0551019904	PRESS WHEEL RIM		02
02	0503010365	BOLT 5/16 UNC X 1.1/4 C S G.5 ZN		06
03	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
04	0503010337	5/16" NUT		06
05	0503032970	RUBBER BAND		01
06	0521055073	ASSEMBLY DEPTH WHEEL HUB	148	01

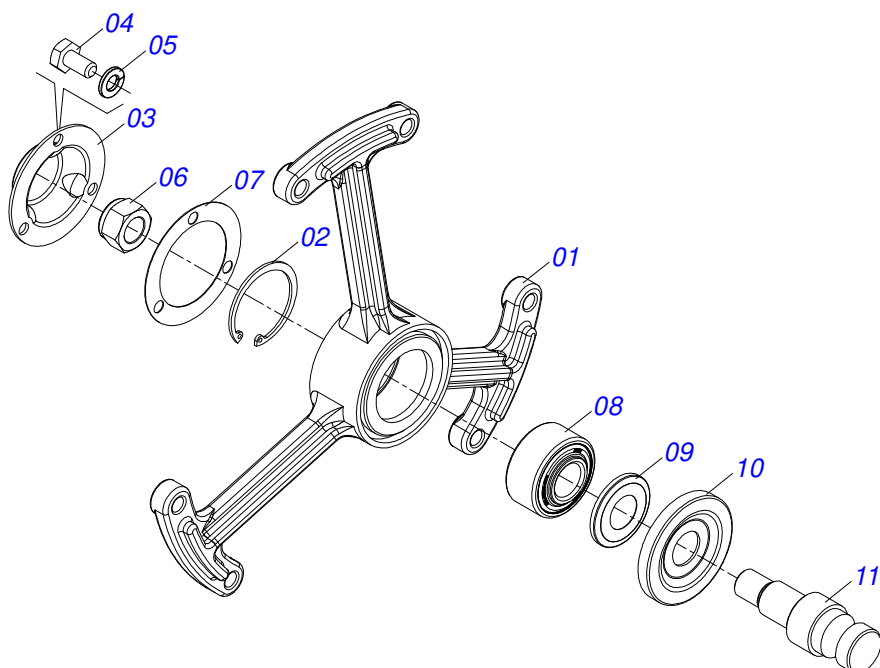


Item	Code	Description	See page	QT
01	0581019528	WHEEL DEPTH SPA HUB WITHOUT LUBRICATION		01
02	0503011105	SEAL RING		01
03	0521019178	PROTECTION LID		01
04	0503014729	1/4" UNF X 1/2" BOLT		03
05	0503010143	1/4" SPRING WASHER		03
06	0503010878	5/8" SELF ALIGNING NUT		01
07	0503030757	2.9" X 2" X 0.02" JOINT		01
08	0503019342	ROLLER BEARING		01
09	0503034055	CLAMPING RING		01
10	0581019168	DUST CLOAK		01
11	0581019529	DEPTH REGULATOR SHAFT		01

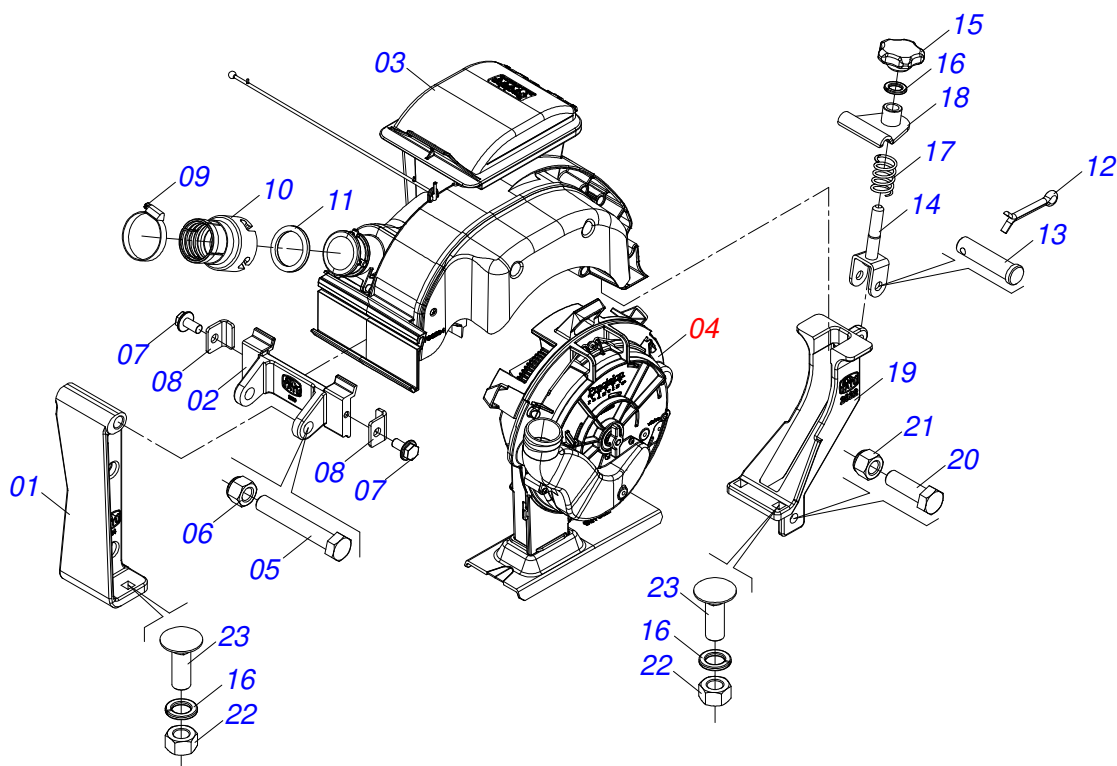


Item	Code	Description	See page	QT
01	0502012924	PRECISION PLANTING SUPPORT		01
02	0502012800	SUPPORT ARTICULATION PNEUMATIC		01
03	0503062406	SEED HOPPER		01
04	0521052131	VSET2 DISTRIBUTOR WITH CORN DISC WITHOUT 132 PROTECTION		01
05	0503010706	BOLT 1/2 UNC X 4.1/2 C S G.5 ZN		01
06	0503010589	1/2" UNC SELF ADJUSTING NUT		01
07	0503810009	BOLT		02
08	0571018649	SUPPORT FIXER		02
09	0503010243	CLAMP		01
10	0581017816	TERMINAL		01
11	0503034204	SEALING		01
12	0503010140	1/8" X 3/4" COTTERPIN		01
13	0571014024	FAST BOLT GUIDE AXLE		01
14	0503034824	FIXATIVE		01
15	0503010293	CLAMP KNOB		01
16	0503010025	3/8 SPRING WASHER		05
17	0503032035	0.7" X 1.2" X 1" COMPRESSION SPRING		01
18	0501110894	FIXER		01
19	0502012922	FIXING SUPPORT		01
20	0503011404	BOLT		01
21	0503013357	3/8 SELF-ADJUSTING NUT		01
22	0503010026	3/8" NUT		04
23	0503019529	SCREW 3/8 UNC X 1.1/2 CAPQ RI G.5 ZN		04

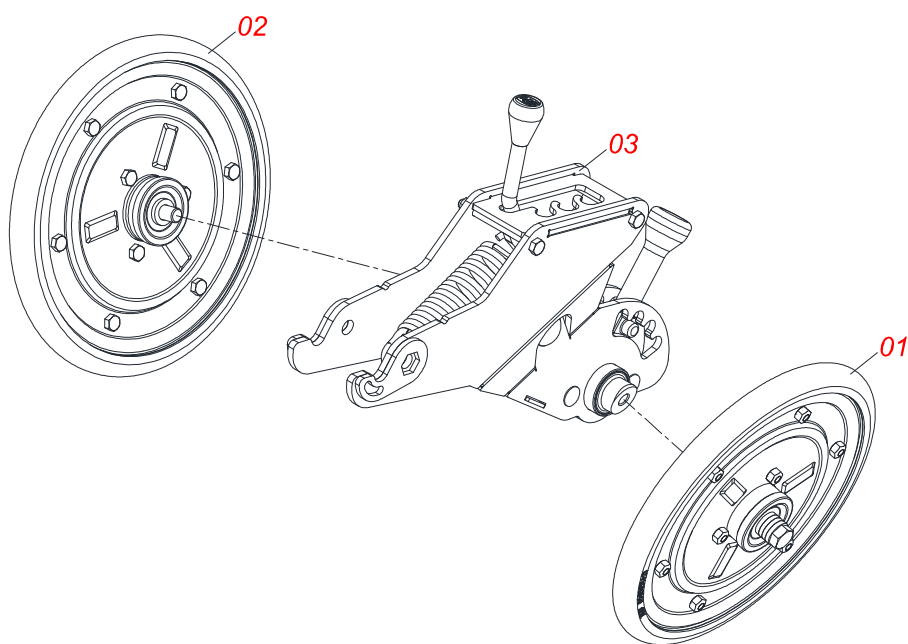


Item	Code	Description	See page	QT
01	0521054990	LEFT COMPACTOR WHEEL	139	01
02	0521055017	RIGHT COMPACTOR WHEEL	140	01
03	0531059837	SPA COMPACTING BODY WITHOUT BOLT	151	01

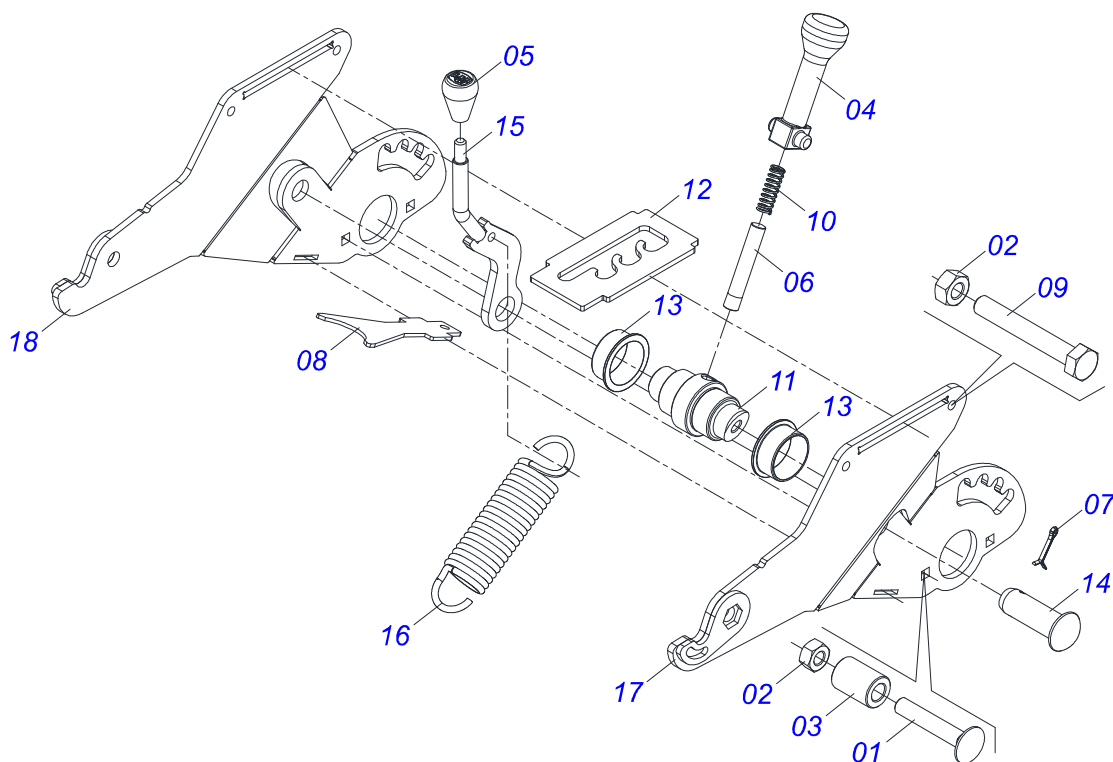


Item	Code	Description	See page	QT
01	0501011753	5/16" X 1-3/4" BOLT	02	
02	0503013816	5/16" LOCKNUT	04	
03	0581015855	SLEEVE	02	
04	0502012877	PRESS WHEEL ADJUSTMENT LEVER	01	
05	0503030878	LEVER CRANK	01	
06	0581019520	AXIS	01	
07	0503010257	1/8" X 1" COTTERPIN	01	
08	0581019511	COVER	01	
09	0503010848	5/16" X 3.1/2" BOLT	02	
10	0503030190	0.5" X 1.6" X 0.05" SPRING	01	
11	0581019510	AXIS	01	
12	0581019512	PLATE TOP	01	
13	0503019351	LUBRICANT SLEEVE	02	
14	0571012442	COUPLING SHAFT	01	
15	0531062651	LEVER COMPACTOR	01	
16	0503034817	SPRING	01	
17	0531066053	SIDE LEFT	01	
18	0531066052	RIGHT SIDE	01	

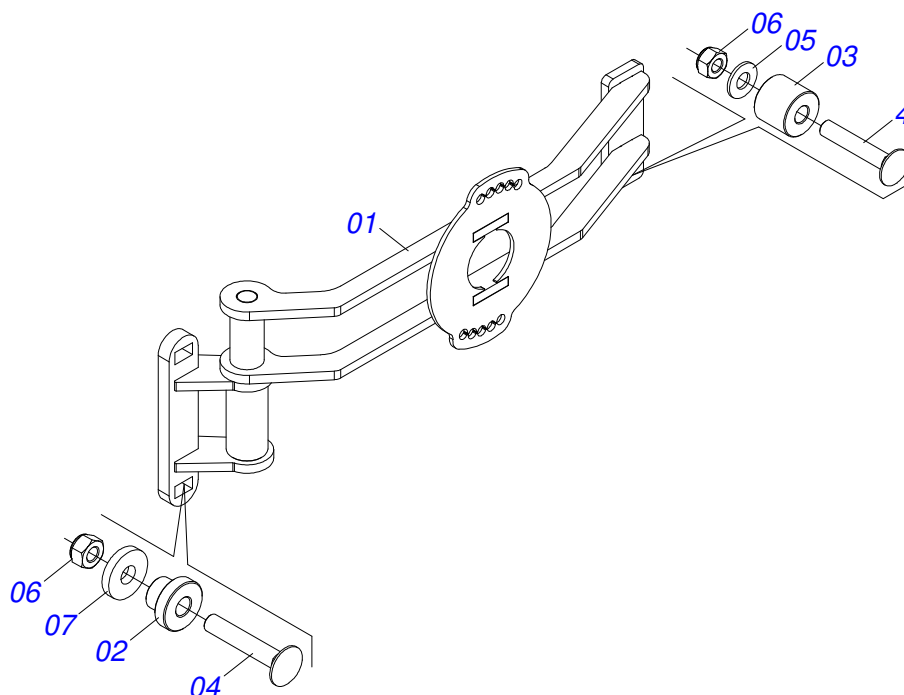


Item	Code	Description	See page	QT
01	0521068129	ENCAPSULATED CHAIN FIXATION SUPPORT		01
02	0591015755	CHAIN SUPPORT SLEEVE		02
03	0591016332	SUPPORT REAR SLEEVE		01
04	0501011753	5/16" X 1-3/4" BOLT		03
05	0501010694	FLAT WASHER		01
06	0503019657	HEX LOCK NUT WITH NYLON 5/16		03
07	0591016334	FLAT WASHER 8,50 X 23 X 4,00		02

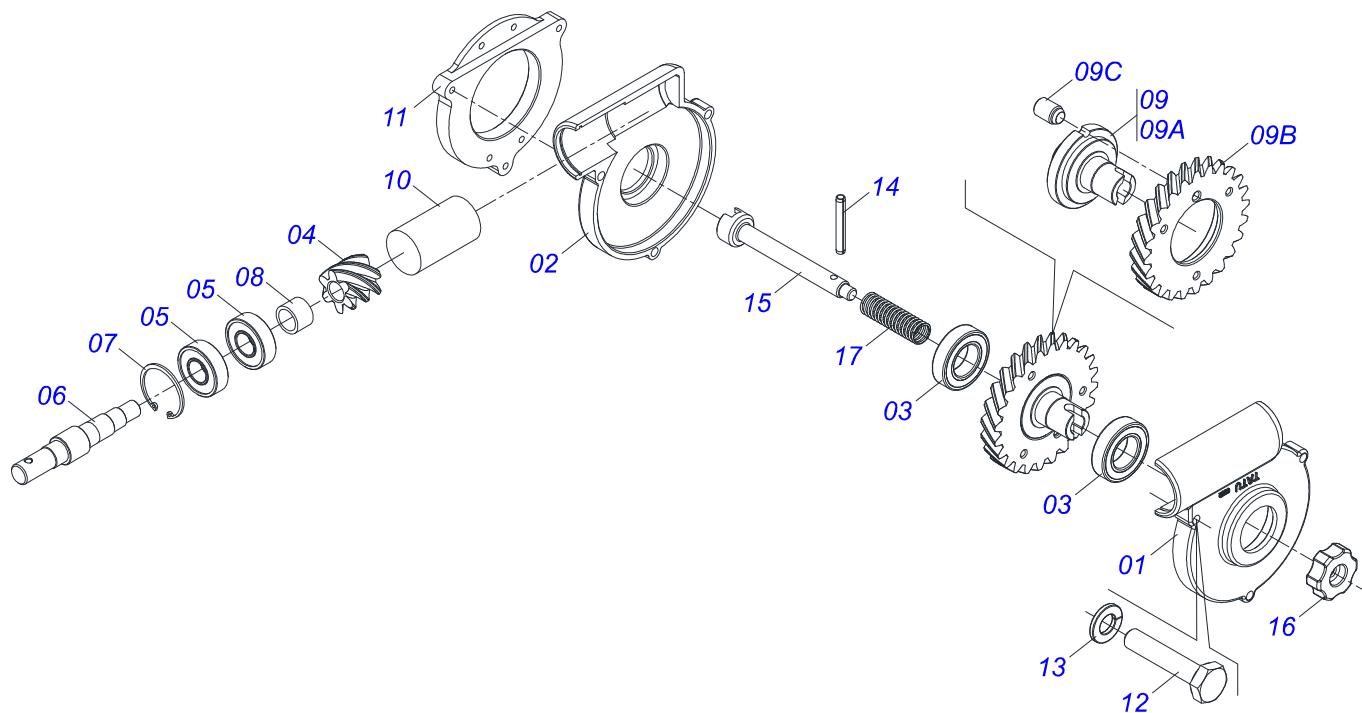


Item	Code	Description	See page	QT
01	0502050052	LEFT SIDE TRANSMISSION HOPPER PP		01
02	0502050053	RIGHT SIDE TRANSMISSION HOPPER PP		01
03	0503011410	ROLLER BEARING		02
04	0503033976	GEAR 6Z PNEUMATIC 2014		01
05	0503011182	6203 ROLLER BEARING		02
06	0571016187	PINION AXLE 6Z PNEUMATIC		01
07	0503011184	502040 CLAMPING RING (FOR AXLE)		01
08	0571017655	FIXER SLEEVE		01
09	0511057504	JOIN GEAR		01
09A	0571017898	BODY GEAR TRANSMISSION		01
09B	0503033975	24Z GEAR PNEUMATIC		01
09C	0503011769	M8 X 0.5" BOLT		01
10	3402510052	GRAXA SHELL STAMINA/RL-2		01
11	0501311464	GEARBOX FLANGE		01
12	0503010733	1/4" X 1-3/4" BOLT		03
13	0503010143	1/4" SPRING WASHER		03
14	0503015356	SPRING PIN		01
15	0501311462	PIN DRAG 126		01
16	0503035749	LOCKING KNOB		01
17	0503036278	SPRING COMPRESSION		01

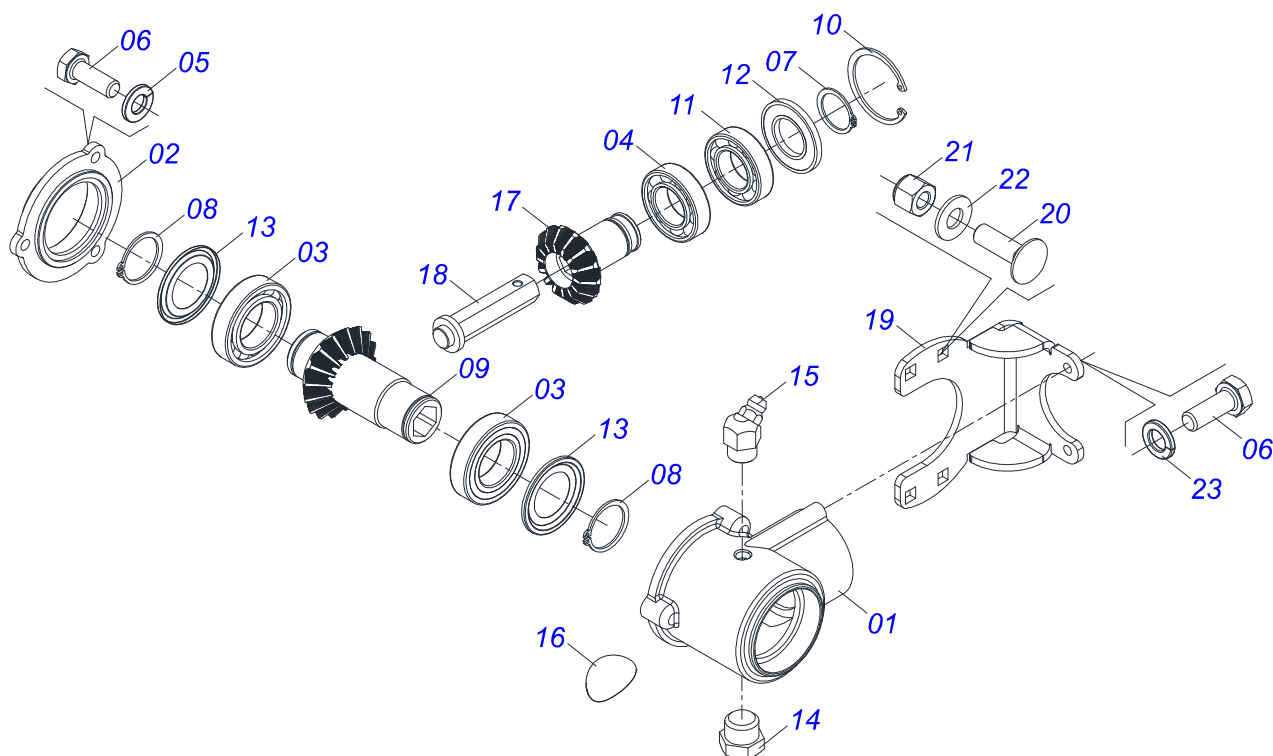

Item	Code	Description	See page	QT
01	0502012465	TRANSMISSION HUB	01	
02	0502012464	HOPPER TRANSMISSION LID	01	
03	0503016995	6006 BALL BEARING	02	
04	0503015895	6005 Z BALL BEARING	01	
05	0503010143	1/4" SPRING WASHER	03	
06	0503011378	M6X1X16 C S 8.8 ZN BOLT	05	
07	0503010406	501025 CLAMPING RING (FOR AXLE)	01	
08	0503010707	501030 CLAMPING RING (FOR AXLE)	02	
09	0502040856	CONICAL GEAR	01	
10	0503011105	SEAL RING	01	
11	0503011409	6005 Z BALL BEARING	01	
12	0503017008	SEAL RING	01	
13	0503017007	SEAL RING	02	
14	0511017907	1/8" BSPT X 6 PLUG	01	
15	0503010003	1845 GREASE FITTING	01	
16	0503035316	LUBRICATED POINTS ADHESIVE LABEL	01	
17	0501311461	CONIC GEAR 14 TEETH	01	
18	0531066150	WELDED DRIVE AXLE	01	
19	0501311524	FIXER BOX TRANSMISSION	01	
20	0503011953	5/16" X 1" BOLT	02	
21	0503013759	NUT	02	
22	0501010694	FLAT WASHER	02	
23	0503015110	M06 SPRING WASHER	02	

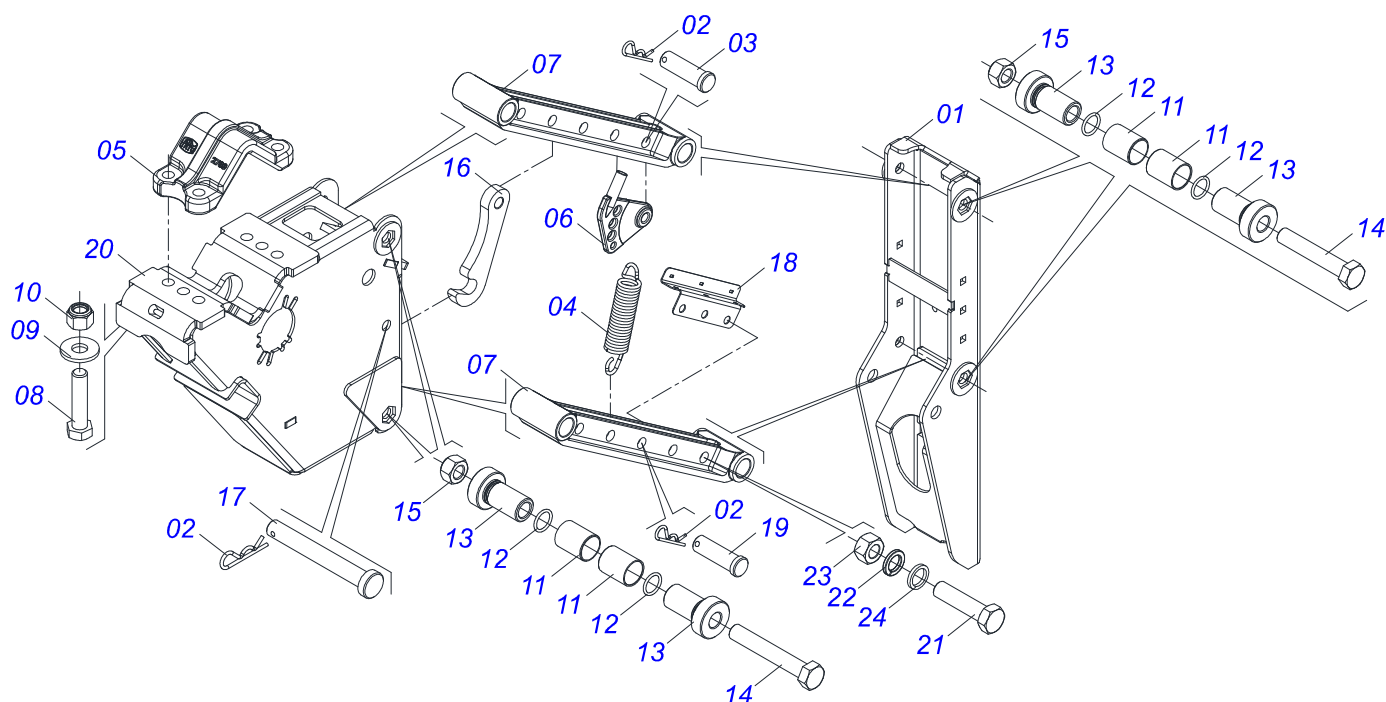


Item	Code	Description	See page	QT
01	0531061428	REAR LINE	01	
02	0503030168	HITCH PIN CLIP	05	
03	0571018883	PIN FIXER SPRING	03	
04	0503034198	SPRING TRACTION 40 X 198 X 5,5	01	
05	0502012789	FIXER SUPPORT FERTILIZER ROW	01	
06	0502012812	SEED ROW ADJUSTMENT LEVER ASSY	01	
07	0591011156	PIVOT ARM SEED ROW	02	
08	0503017857	BOLT 5/8 UNF 4	04	
09	0501012140	FLAT WASHER	04	
10	0503010811	5/8" UNF SELF ADJUSTING NUT	04	
11	0503019273	AUTO LUBRICANT SLEEVE	08	
12	0503010045	O'RING	08	
13	0591012829	SPACER LOWER SLEEVE	08	
14	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN	04	
15	0503012412	5/8" UNC SELF LOCKING NUT	04	
16	0591012827	FRONT PENDULUM LINE	01	
17	0591012828	LOCK PIN ROW ARTICULAT	01	
18	0501219536	LINE GUTTER	01	
19	0501310623	SPRING FIXING PIN	01	
20	0531066157	FRONT CHASSIS SEED LINE	01	
21	0503010233	5/8" X 2-1/2" BOLT	02	
22	0503010027	5/8 SPRING WASHER	02	
23	0503010013	5/8 NUT	02	
24	0511015705	FLAT WASHER	02	

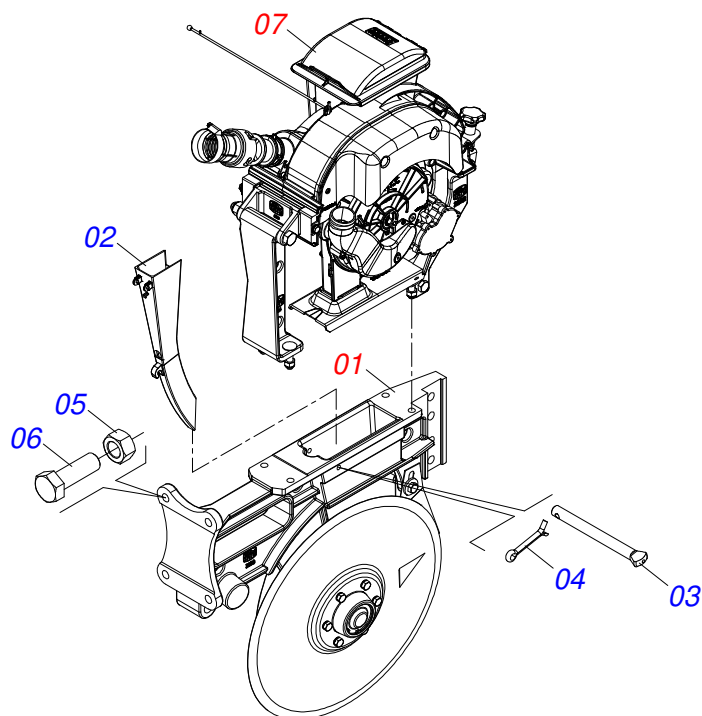


Item	Code	Description	See page	QT
01	0521056954	LEFT DDD ASSY	157	01
02	0503062403	TUBE SEED P.P		01
03	0571017895	PIN FIXER CONDUCTOR P.P		01
04	0503010140	1/8" X 3/4" COTTERPIN		01
05	0503012136	NUT 1/2 NF		04
06	0503012135	BOLT 1/2 UNF X 1.1/2 CS G.5 ZN		04
07	0521056952	ASSY P.P CSC/V-DRIVE	131	01

LEFT DDD ASSY


0521056954

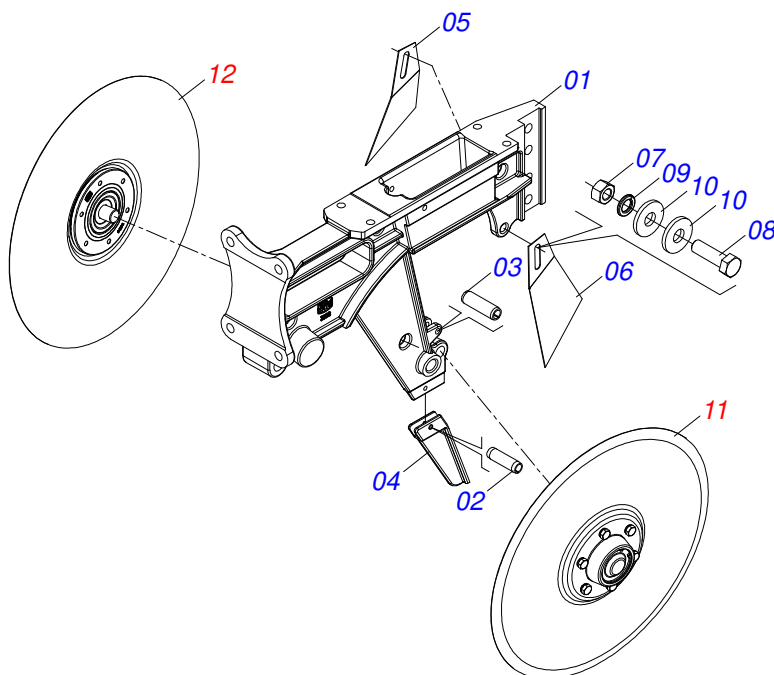

Item	Code	Description	See page	QT
01	0591011772	LEFT DDD BODY		01
02	0503011402	0.2" X 0.8" SPRING PIN		01
03	0503013129	ELASTIC PIN		01
04	1902012779	PROTECTION CONDUCTOR PNEUMATIC PRECISION		01
05	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
07	0503010026	3/8" NUT		01
08	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
09	0503010025	3/8 SPRING WASHER		01
10	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
11	0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 127 FERTILIZER / SEED		01
12	0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 128 FERTILIZER / SEED		01

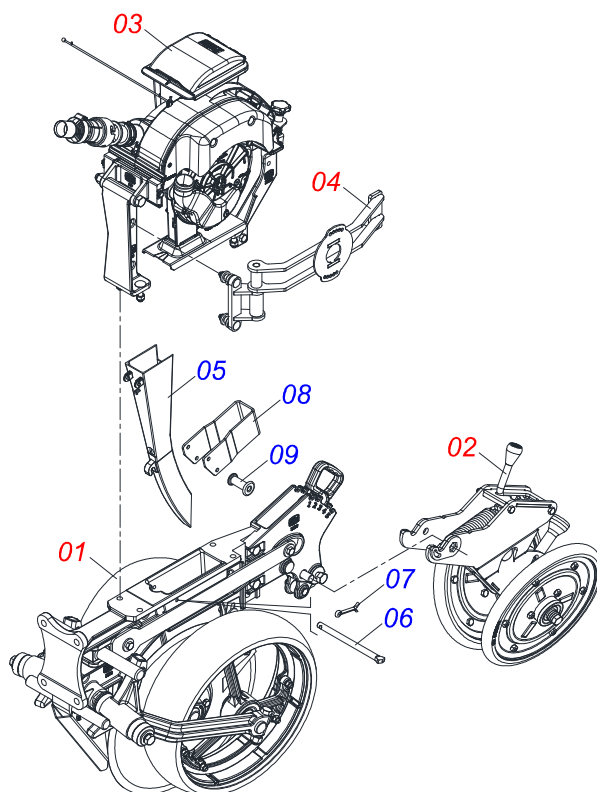

Item	Code	Description	See page	QT
01	0531059835	REAR WITH LEFT DDD SPICRR WITHOUT FLAP WITHOUT FULL WHEEL	159	01
02	0531059836	COMPACTOR WHEEL ASSEMBLY	150	01
03	0521056640	PRECISION PLANTING CSC CABLE / TRANSMISSION ASSY	149	01
04	0531051264	FULL SUPPORT FOR ENCAPSULATED CURRENT FIXATION	152	01
05	0503062403	TUBE SEED P.P		01
06	0571017895	PIN FIXER CONDUCTOR P.P		01
07	0503010140	1/8" X 3/4" COTTERPIN		01
08	0591017565	SEED CONDUCTOR GUIDE		01
09	0503015341	POP RIVET		02

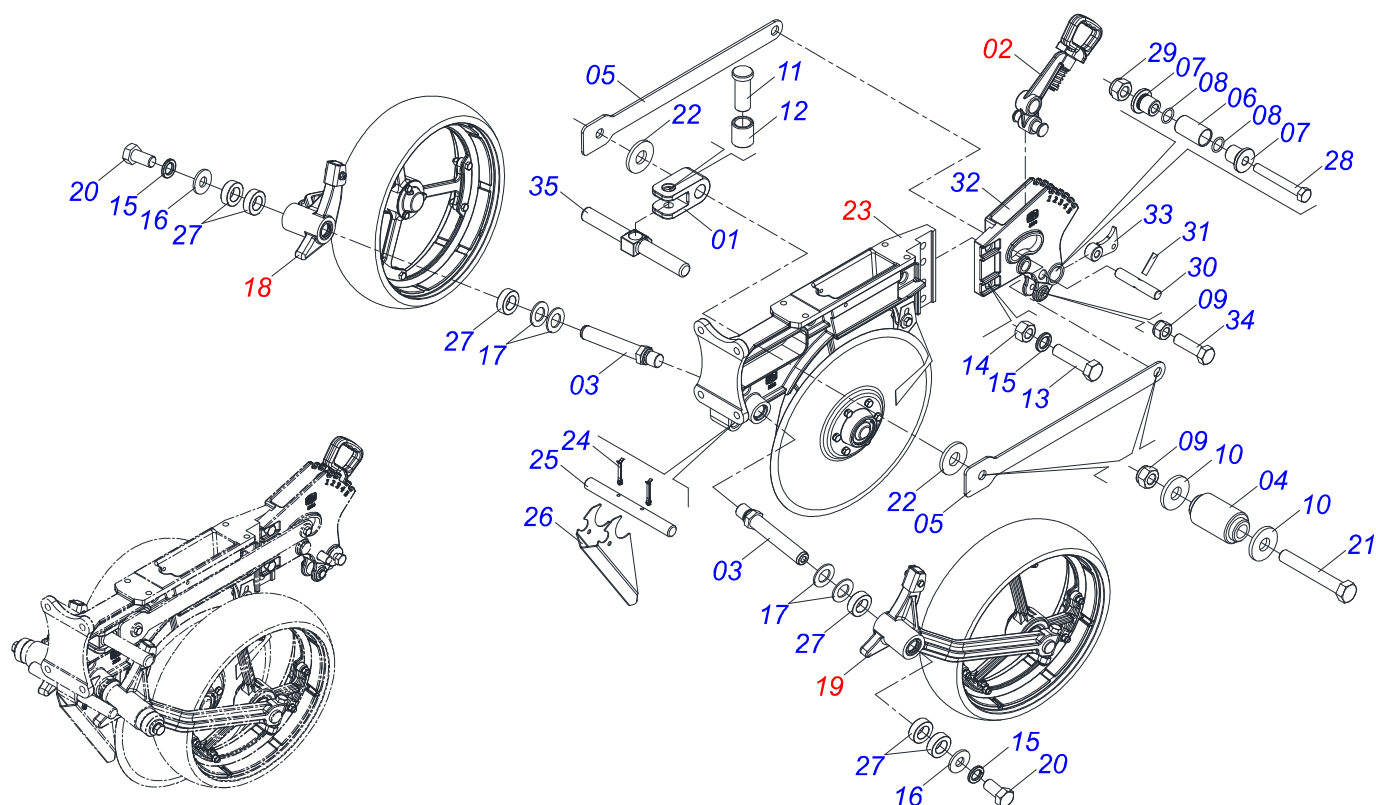


Item	Code	Description	See page	QT
01	0502012923	BEATER		01
02	0531059833	DEPTH REGULATOR	145	01
03	0591016905	DEPTH WHEEL JOINT AXLE		02
04	0591011309	ADJUSTMENT BUSHING		02
05	0591011310	ADJUSTMENT BAR		02
06	0503019275	SLEEVE LUBRICATION SYSTEM		01
07	0581019473	ARTICULATED SLEEVE		02
08	0503010045	O'RING		02
09	0503013357	3/8 SELF-ADJUSTING NUT		03
10	0501010984	10,50 X 27 X 3,00 FLAT WASHER		04
11	0591011326	LOCK PIN		01
12	0571015326	ARTICULATION SLEEVE HANDLE		01
13	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
14	0503010060	1/2 UNC G.5 ZN HEX NUT		02
15	0503010019	1/2" SPRING WASHER		04
16	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		02
17	0501011445	FLAT WASHER		04
18	0531059832	ASSEMBLED RIGHT ARM	146	01
19	0531059831	ASSEMBLED LEFT ARM		01
20	0503012556	1/2" X 1" BOLT		02
21	0503018882	3/8 UNC X 3.1/2 C S G.7 ZN SCREW		02
22	0591011306	ADJUSTMENT LOCK		02
23	0521056634	LEFT ASSY DDD INTEGRATED DEPTH SYSTEM 160 SPI		01
24	0503010131	3/16" X 1-1/2" COTTERPIN		02
25	0591016900	BEATING AXLE		01
26	0591016988	SPICER PROTECTOR		01
27	0591016907	SPACER GLOVE 14MM		06
28	0503011140	1/2" X 3-3/4" BOLT		01
29	0503011336	1/2" HEX SELF ADJUSTING NUT		01
30	0501311083	AXIS 5/8 X 90MM		01
31	0503012342	CLAMPING PIN		01




USAP 3200 AP SUPREMA ALP - FRAME 9520
REAR WITH LEFT DDD SPICRR WITHOUT FLAP WITHOUT

Page 159
0531059835


Item	Code	Description	See page	QT
32	0502013084	SUPPORT REGULATOR		01
33	0531066051	FIXER SPRING		01
34	0503011404	BOLT		01
35	0502013083	ADJUSTMENT SHAFT DEPTH		01

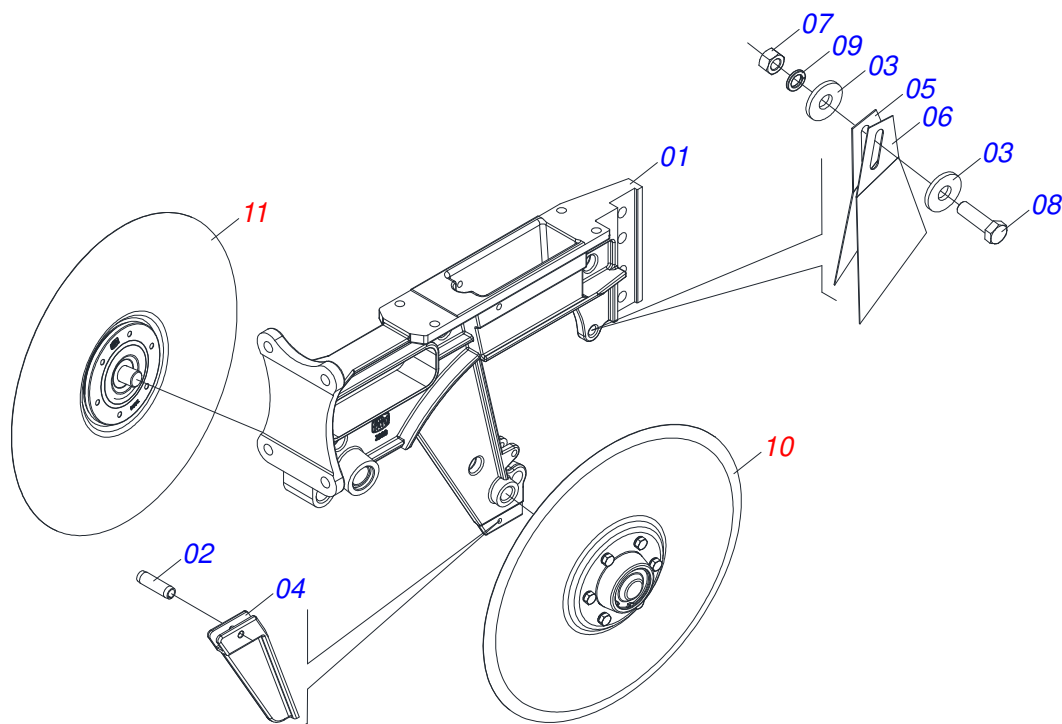


Item	Code	Description	See page	QT
01	0502012928	LEFT EXTENSOR		01
02	0503011402	0.2" X 0.8" SPRING PIN		01
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
04	1902012779	PROTECTION CONDUCTOR PNEUMATIC PRECISION		01
05	0561010264	RH DOUBLE DISC SCRAPER - STARTING 04/18		01
06	0561010265	LH DOUBLE DISC SCRAPER - STARTING 04/18		01
07	0503010026	3/8" NUT		01
08	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
09	0503010025	3/8 SPRING WASHER		01
10	0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 127 FERTILIZER / SEED		01
11	0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 128 FERTILIZER / SEED		01

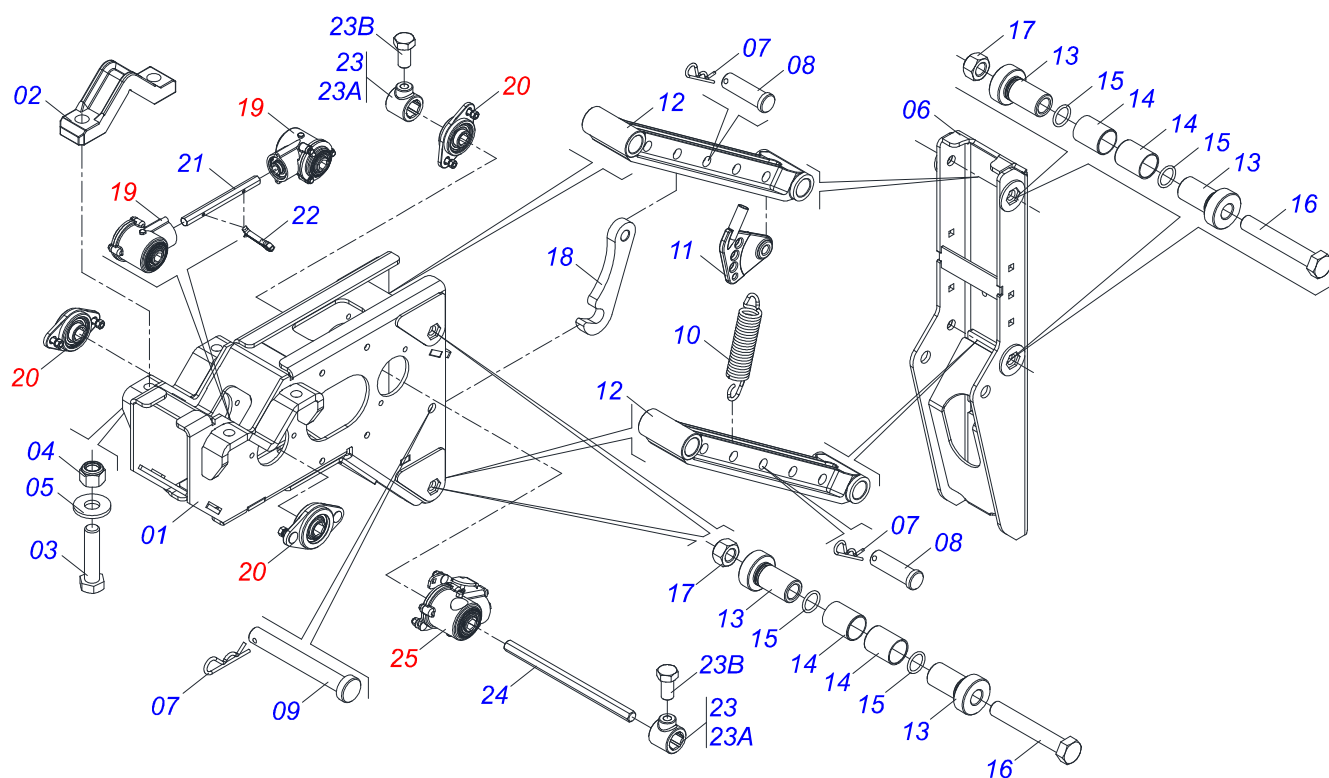


Item	Code	Description	See page	QT
01	0531063425	FRONT FRAME SEED ROW		01
02	1902010175	HITCH CLAMP		02
03	0503017857	BOLT 5/8 UNF 4		04
04	0503010811	5/8" UNF SELF ADJUSTING NUT		04
05	0501012140	FLAT WASHER		04
06	0531061428	REAR LINE		01
07	0503030168	HITCH PIN CLIP		05
08	0571018883	PIN FIXER SPRING		04
09	0591012828	LOCK PIN ROW ARTICULAT		01
10	0503034198	SPRING TRACTION 40 X 198 X 5,5		01
11	0502012812	SEED ROW ADJUSTMENT LEVER ASSY		01
12	0591011156	PIVOT ARM SEED ROW		02
13	0591012829	SPACER LOWER SLEEVE		08
14	0503019273	AUTO LUBRICANT SLEEVE		08
15	0503010045	O'RING		08
16	0501010422	BOLT 5/8 UNC X 6.1/2 CS G.5 ZN		04
17	0503012412	5/8" UNC SELF LOCKING NUT		04
18	0591012827	FRONT PENDULUM LINE		01
19	0511057159	TRANSMISSION HOPPER SEED ROW	162	02
20	0501057684	SIDE BEARING FRONT SUPPORT SEED ROW	163	03
21	0501212270	5/8 X 200 HEXAGONAL AXLE		01
22	0503010071	3/16" X 1" COTTERPIN		02
23	0511054314	TRANSMISSION AXLE LOCK SLEEVE		02
23A	0502012699	TRANSMISSION HUB LOCK SLEEVE		01
23B	0503010256	3/8" X 3/4" BOLT		01
24	0501311487	HEXAGONAL SHAFT 3/4 X 320		01
25	0541050079	SEED ROW UPPER TRANSMISSION GEAR BOX	154	01

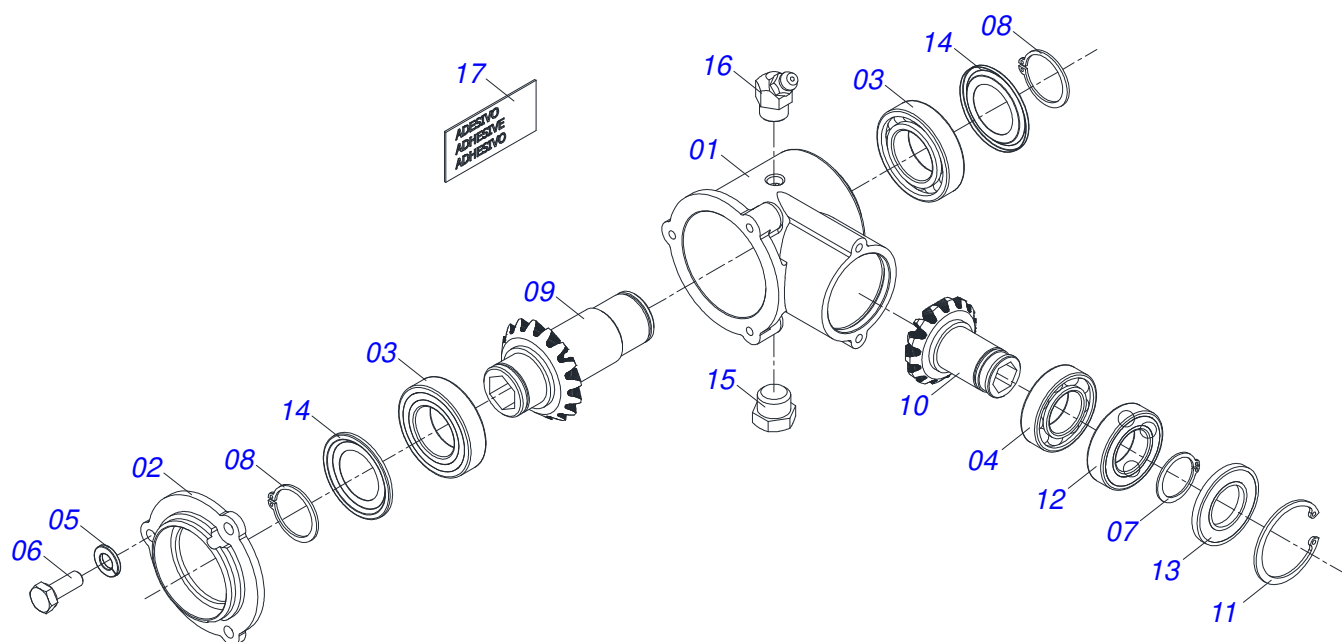


Item	Code	Description	See page	QT
01	0502012465	TRANSMISSION HUB		01
02	0502012464	HOPPER TRANSMISSION LID		01
03	0503016995	6006 BALL BEARING		02
04	0503015895	6005 Z BALL BEARING		01
05	0503010143	1/4" SPRING WASHER		03
06	0503011378	M6X1X16 C S 8.8 ZN BOLT		03
07	0503010406	501025 CLAMPING RING (FOR AXLE)		01
08	0503010707	501030 CLAMPING RING (FOR AXLE)		02
09	0502040856	CONICAL GEAR		01
10	0571018870	14Z CONICAL GEAR		01
11	0503011105	SEAL RING		01
12	0503011409	6005 Z BALL BEARING		01
13	0503017008	SEAL RING		01
14	0503017007	SEAL RING		02
15	0511017907	1/8" BSPT X 6 PLUG		01
16	0503010003	1845 GREASE FITTING		01
17	0503035316	LUBRICATED POINTS ADHESIVE LABEL		01

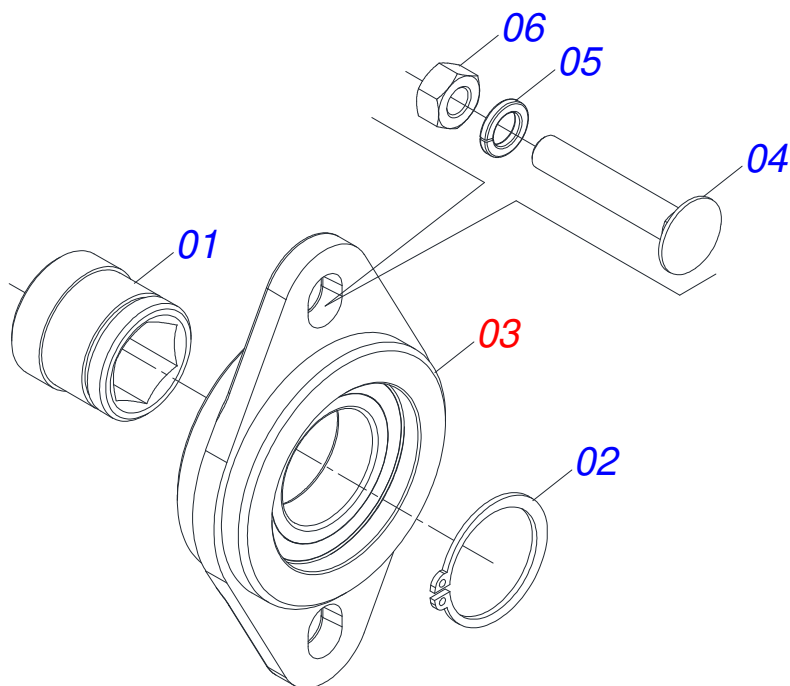

Item	Code	Description	See page	QT
01	0551015804	BEARING AXLE BODY		01
02	0503010707	501030 CLAMPING RING (FOR AXLE)		01
03	0501053566	ROW SEED BEARING		01
04	0503011953	5/16" X 1" BOLT		02
05	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
06	0503010337	5/16" NUT		02

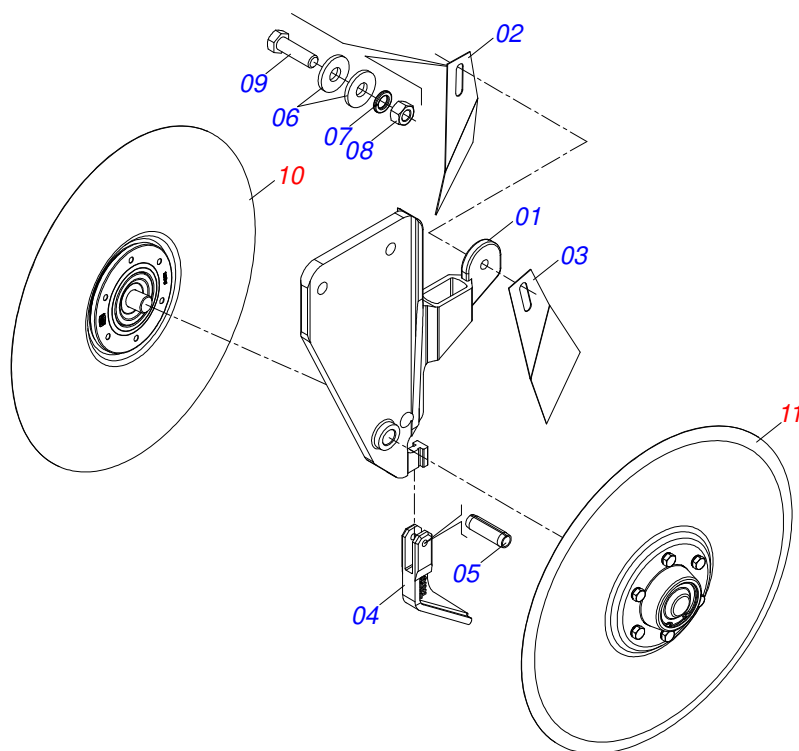


Item	Code	Description	See page	QT
01	0502011161	15"X15" LEFT DOUBLE DISC SUPPORT		01
02	0501017542	LH DOUBLE DISC SCRAPER		01
03	0501017541	RIGHT DOUBLE DISC SCRAPER		01
04	0502070062	SCRAPER		01
05	0503011402	0.2" X 0.8" SPRING PIN		01
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
07	0503010025	3/8 SPRING WASHER		01
08	0503010026	3/8" NUT		01
09	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
10	0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 128 FERTILIZER / SEED		01
11	0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 127 FERTILIZER / SEED		01

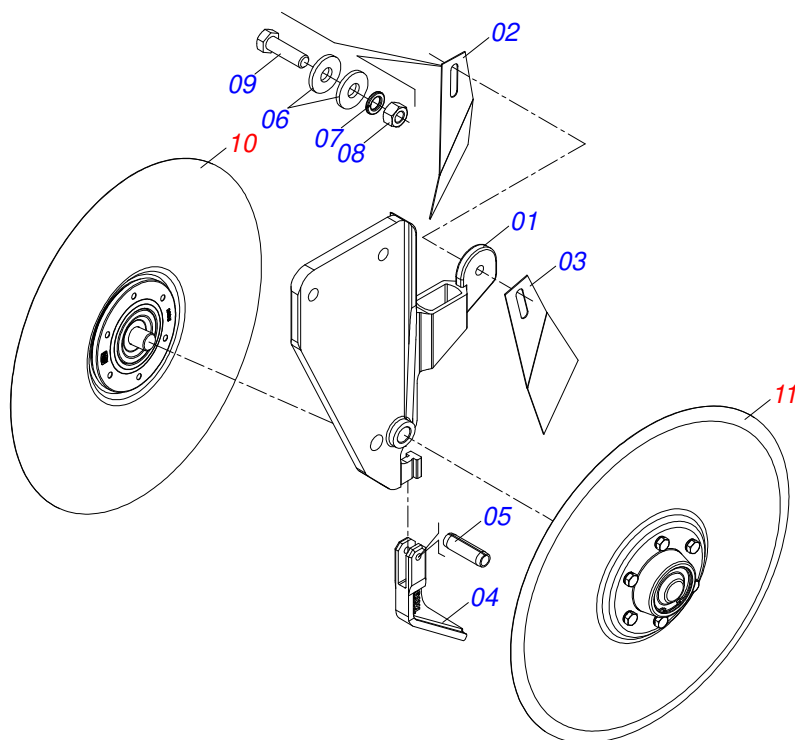


Item	Code	Description	See page	QT
01	0502011160	15"X15" RIGHT DOUBLE DISC SUPPORT		01
02	0501017542	LH DOUBLE DISC SCRAPER		01
03	0501017541	RIGHT DOUBLE DISC SCRAPER		01
04	0502070062	SCRAPER		01
05	0503011402	0.2" X 0.8" SPRING PIN		01
06	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
07	0503010025	3/8 SPRING WASHER		01
08	0503010026	3/8" NUT		01
09	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		01
10	0521055866	HUB RIGHT QUICK-CHANGE DPL 15 X 4.00 128 FERTILIZER / SEED		01
11	0521055867	HUB LEFT QUICK-CHANGE DPL 15 X 4.00 127 FERTILIZER / SEED		01

CLAMP


0521052549

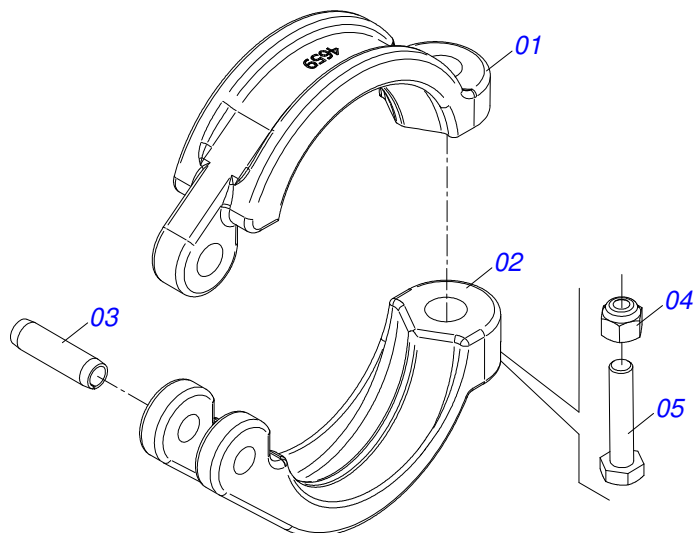


Item	Code	Description	See page	QT
01	0503034660	CLAMP LOWER		01
02	0503034659	CLAMP UPPER		01
03	0503010686	0.2" X 0.7" SPRING PIN		01
04	0503011776	M6 SELF ADJUSTINGNUT		01
05	0503011813	M6 X 1.2" BOLT		01

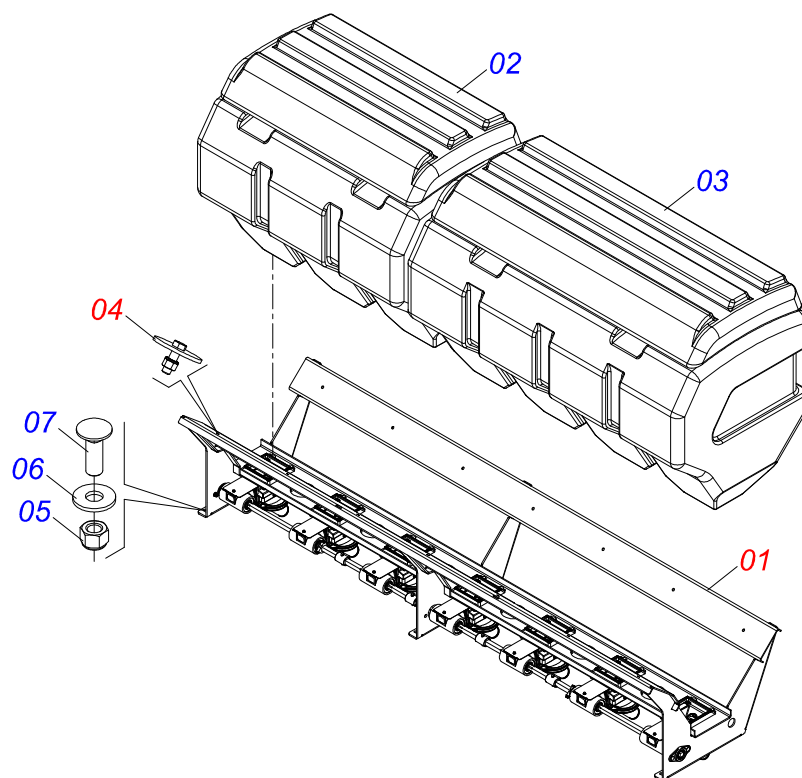


Item	Code	Description	See page	QT
01	0531055350	CENTRAL SUPPORT WITH 07 NOZZLES	168	01
02	0503063507	COMPLETE SILO 03 MOUTHS 540L		01
03	0503063508	COMPLETE SILO 04 MOUTH 720L		01
04	0521051407	FERTILIZER HOPPER FIXER	92	14
05	0503010589	1/2" UNC SELF ADJUSTING NUT		06
06	0503014378	1/2" X 1-1/2" BOLT		06
07	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		06

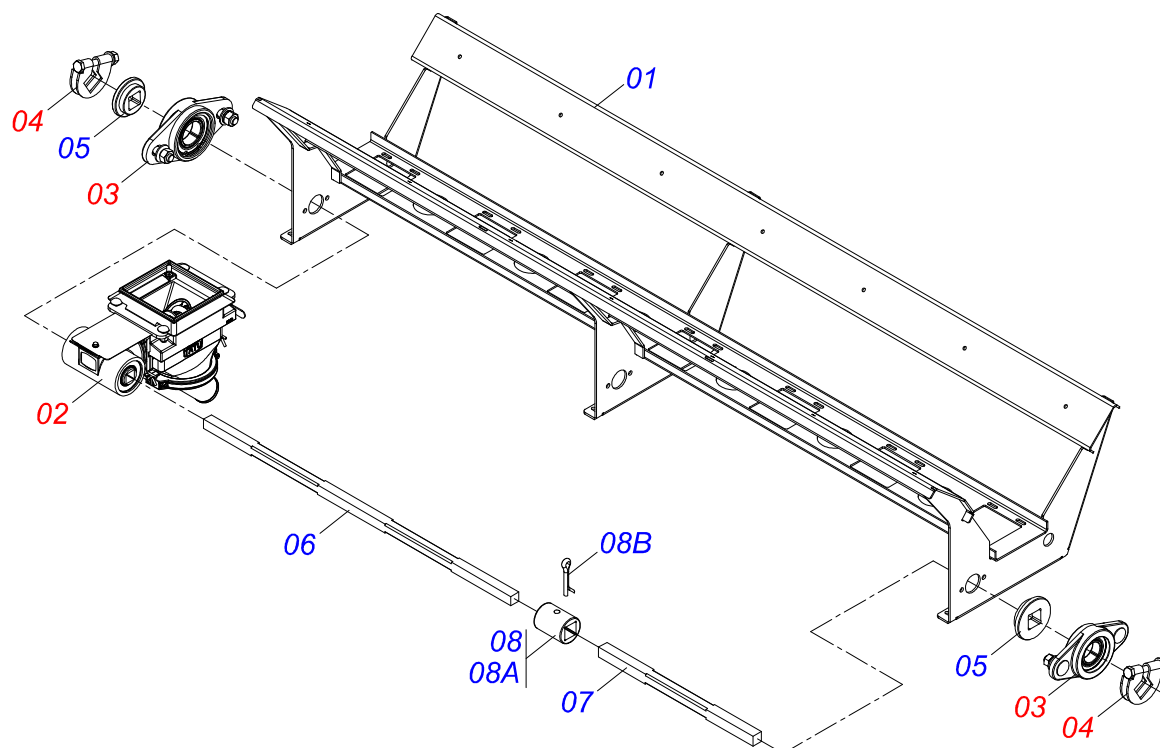


Item	Code	Description	See page	QT
01	0531064103	CENTRAL SILO SUPPORT 07 MOUTHS		01
02	0531059144	FERTILIZER DOSER ALPHA II	83	07
03	0521054282	BEARING	170	02
04	0501053788	3/4" SQUARE AXLE FASTENER	90	04
05	0503031527	AGRICULTURAL BEARING		04
06	0501218575	SQUARE AXIS 3/4 X 730MM WITH RELIEVE		02
07	0501218487	3/4 X 390 AXLE		03
08	0531057908	SLEEVE 1/4 X 2		04
08A	0502013069	SLEEVE 21 X 38 X 50		01
08B	0503010523	1/4" X 2" SPLIT PIN		01

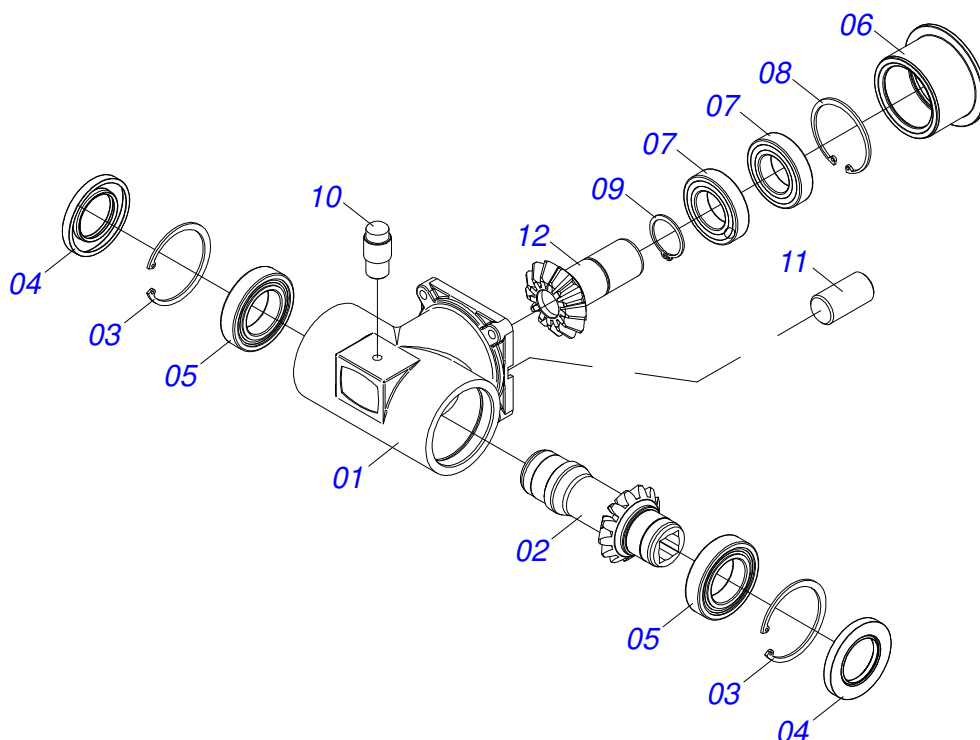


Item	Code	Description	See page	QT
01	0502013050	TRANSMISSION ALPHA FERTILIZER METERING HOPPER		01
02	0502013056	CONICAL PINION MOTOR 13Z ALPHA FERTILIZER METERING		01
03	0503011800	SEAL RING		02
04	0513010740	RETAINER 62 X 35 X 7 BRG 7159		02
05	0503016065	ROLLER BEARING		02
06	0501214237	TRANSMISSION HOPPER ALPHA FERTILIZER METERING SLEEVE		01
07	0503019373	6006 2RS1 NATIONAL BEARING		02
08	0503012858	502075 CLAMPING RING (FOR HOLE)		01
09	0503010707	501030 CLAMPING RING (FOR AXLE)		01
10	0501214501	ALPHA FERTILIZER METERING LID LOCK AXIS		01
11	0501214238	SHAFT LOCK SLEEVE HOPPER TRANSMISSION ALPHA FERTILIZER METERING		01
12	0501111141	GEAR WITH ALPHA FERTILIZER METERING CAP		01

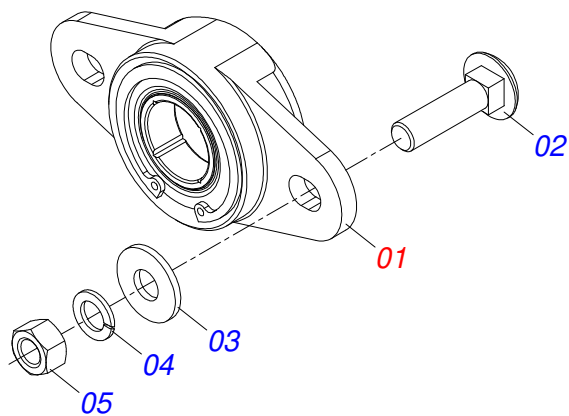


Item	Code	Description	See page	QT
01	0501056444	BEARING WITH ROLLER	171	01
02	0503011953	5/16" X 1" BOLT		02
03	0501010694	FLAT WASHER		02
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		02
05	0503010337	5/16" NUT		02

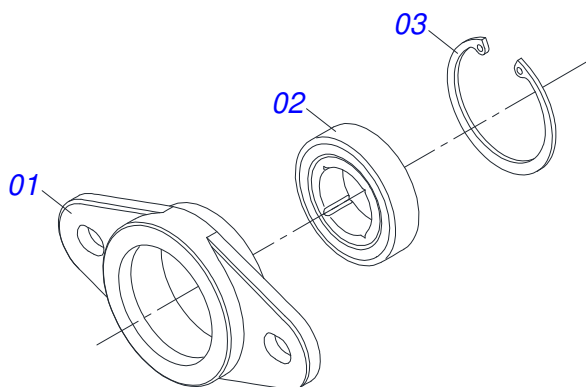


Item	Code	Description	See page	QT
01	0502011697	GEARBOX BEARING		01
02	0503013462	BEARING WITH BALL BEARING		01
03	0503011105	SEAL RING		01

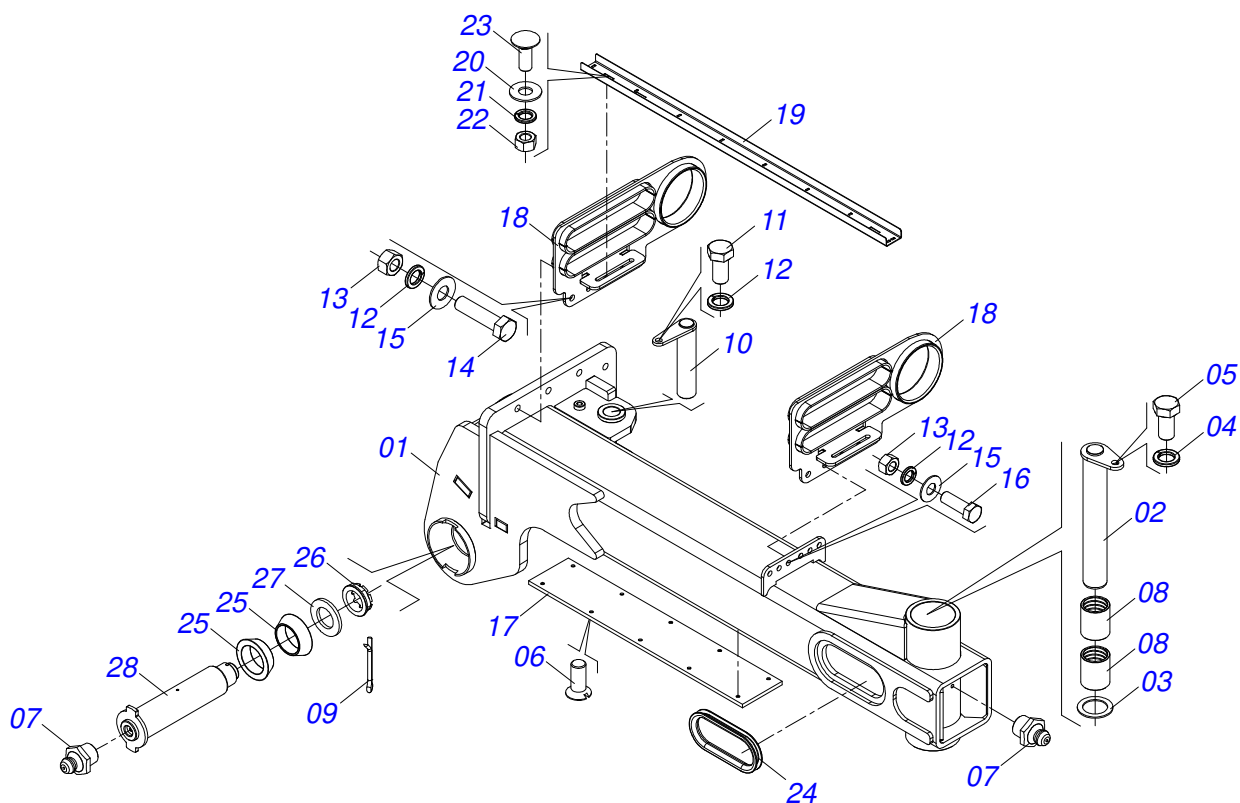


Item	Code	Description	See page	QT
01	0531064124	LEFT ARTICULATING ARM	01	
02	0521063778	RELATION AVEC AXE VERTICAL LATCH	01	
03	0571011767	LISA WASHER 125 X 88 X 4.76	01	
04	0503010408	7/8" SPRING WASHER	01	
05	0503015322	BOLT 7/8	01	
06	0503010814	5/16 BOLT	10	
07	0503010002	1800 GREASE FITTING	02	
08	0571011825	BUSHING	02	
09	0503011345	1/4" X 3-1/2" COTTERPIN	01	
10	0531062168	CYLINDER JOINT AXIS	01	
11	0503010834	1/2 X 1 BOLT	01	
12	0503010019	1/2" SPRING WASHER	05	
13	0503010060	1/2 UNC G.5 ZN HEX NUT	04	
14	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN	02	
15	0501013519	FLAT WASHER	04	
16	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT	02	
17	0591012948	700 X 130 X 10 PLATE	01	
18	0531063434	SUPPORT GUIDE HOSES SEED	02	
19	0591018508	24 X 50 X 1000 GUTTER	01	
20	0501013518	FLAT WASHER	02	
21	0503010025	3/8 SPRING WASHER	02	
22	0503010026	3/8" NUT	02	
23	0501011643	3/8 X 1" BOLT	02	
24	0503035505	HOSE PROTECTOR	01	
25	0501214491	CONIC GLOVE TIGHTENING	02	
26	0502040080	FLANGE NUT R.2.1/2 UN	01	
27	0501214492	FIXING WASHER	01	
28	0531064126	ARTICULATING AXLE	01	

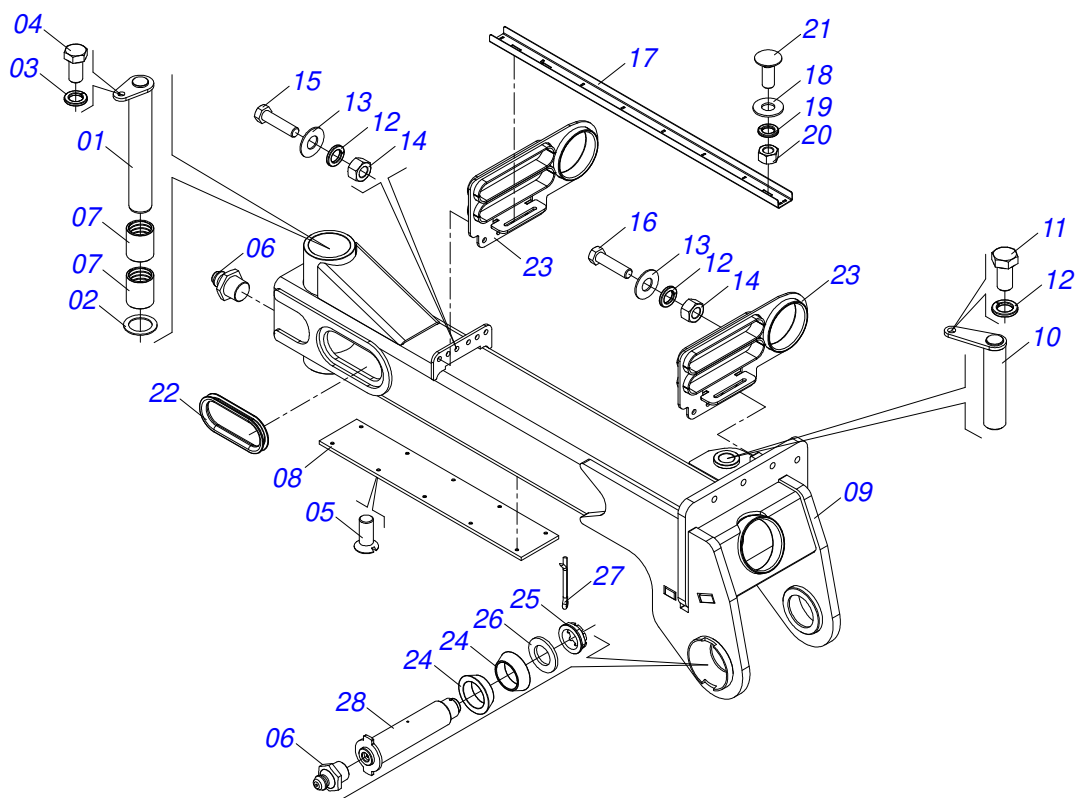


Item	Code	Description	See page	QT
01	0521063778	RELATION AVEC AXE VERTICAL LATCH		01
02	0571011767	LISA WASHER 125 X 88 X 4.76		01
03	0503010408	7/8" SPRING WASHER		01
04	0503015322	BOLT 7/8		01
05	0503010814	5/16 BOLT		10
06	0503010002	1800 GREASE FITTING		02
07	0571011825	BUSHING		02
08	0591012948	700 X 130 X 10 PLATE		01
09	0531064125	RIGHT ARTICULATING ARM		01
10	0531062168	CYLINDER JOINT AXIS		01
11	0503010834	1/2 X 1 BOLT		01
12	0503010019	1/2" SPRING WASHER		05
13	0501013519	FLAT WASHER		02
14	0503010060	1/2 UNC G.5 ZN HEX NUT		04
15	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		02
16	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
17	0591018508	24 X 50 X 1000 GUTTER		01
18	0501013518	FLAT WASHER		02
19	0503010025	3/8 SPRING WASHER		02
20	0503010026	3/8" NUT		02
21	0501011643	3/8 X 1"BOLT		02
22	0503035505	HOSE PROTECTOR		01
23	0531063434	SUPPORT GUIDE HOSES SEED		02
24	0501214491	CONIC GLOVE TIGHTENING		02
25	0502040080	FLANGE NUT R.2.1/2 UN		01
26	0501214492	FIXING WASHER		01
27	0503011345	1/4" X 3-1/2" COTTERPIN		01
28	0531064126	ARTICULATING AXLE		01

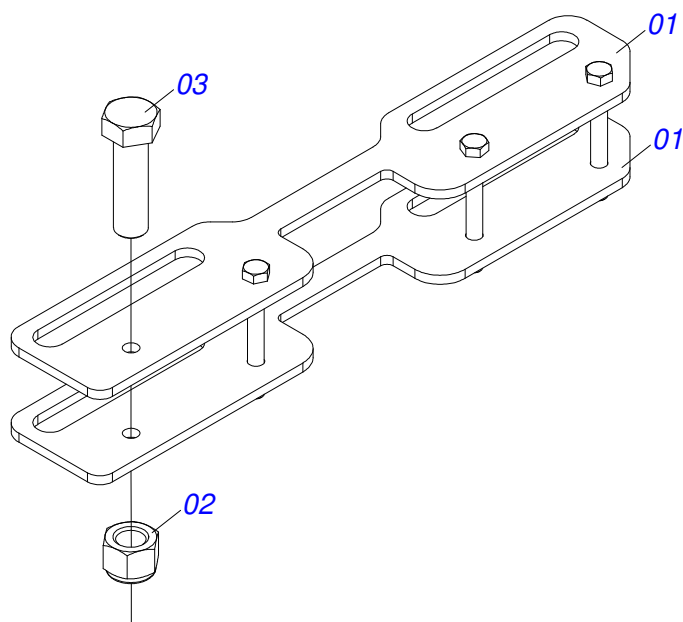


Item	Code	Description	See page	QT
01	0501212948	DEPOSIT SUPPORT BODY		02
02	0503011075	3/4" UNC NUT		04
03	0501011545	3/4" X 6-1/2" BOLT		04

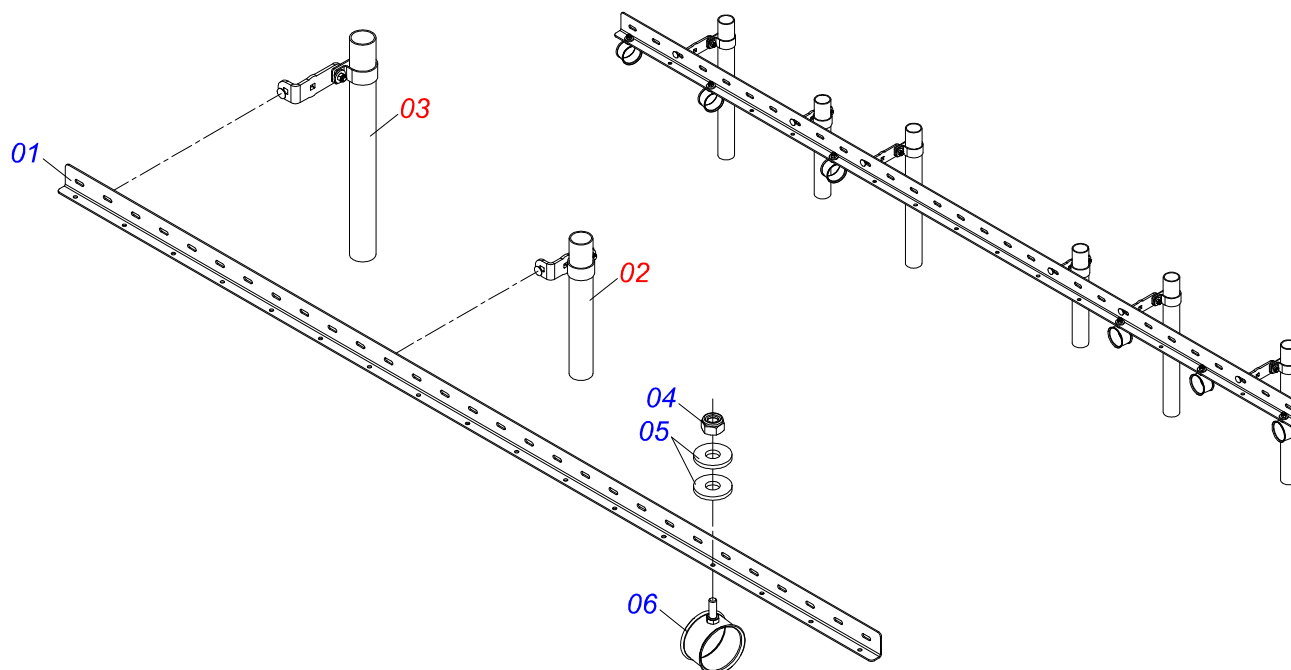


Item	Code	Description	See page	QT
01	0591019407	FERTILIZER CONDUCTOR GUTTER		01
02	0531055920	MINOR DUCT COMPLETE FERTILIZER	80	02
03	0531055919	MINOR DUCT COMPLETE FERTILIZER	176	04
04	0503013357	3/8 SELF-ADJUSTING NUT		06
05	0501010984	10,50 X 27 X 3,00 FLAT WASHER		12
06	0531062574	GUIDE		06

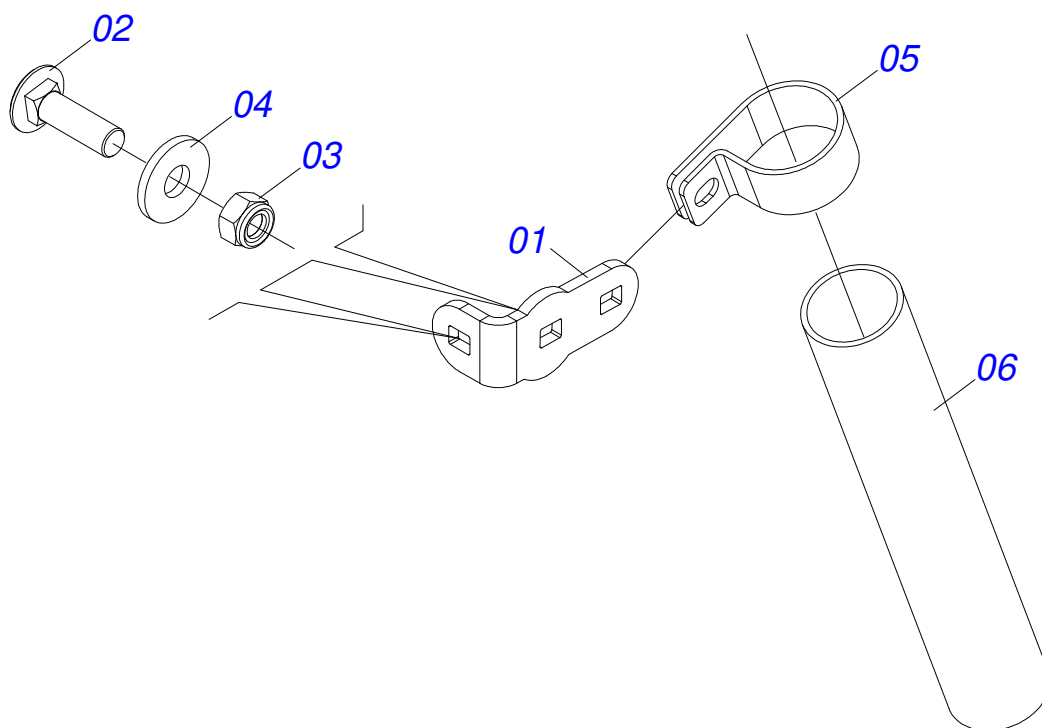

Item	Code	Description	See page	QT
01	0501215024	TUBE FIXER BODY		01
02	0501010942	3/8" X 1-1/4" BOLT		02
03	0503013357	3/8 SELF-ADJUSTING NUT		02
04	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
05	0591015578	CLAMP		01
06	0591018875	LONG FERTILIZER DISTRIBUTOR TUBE		01

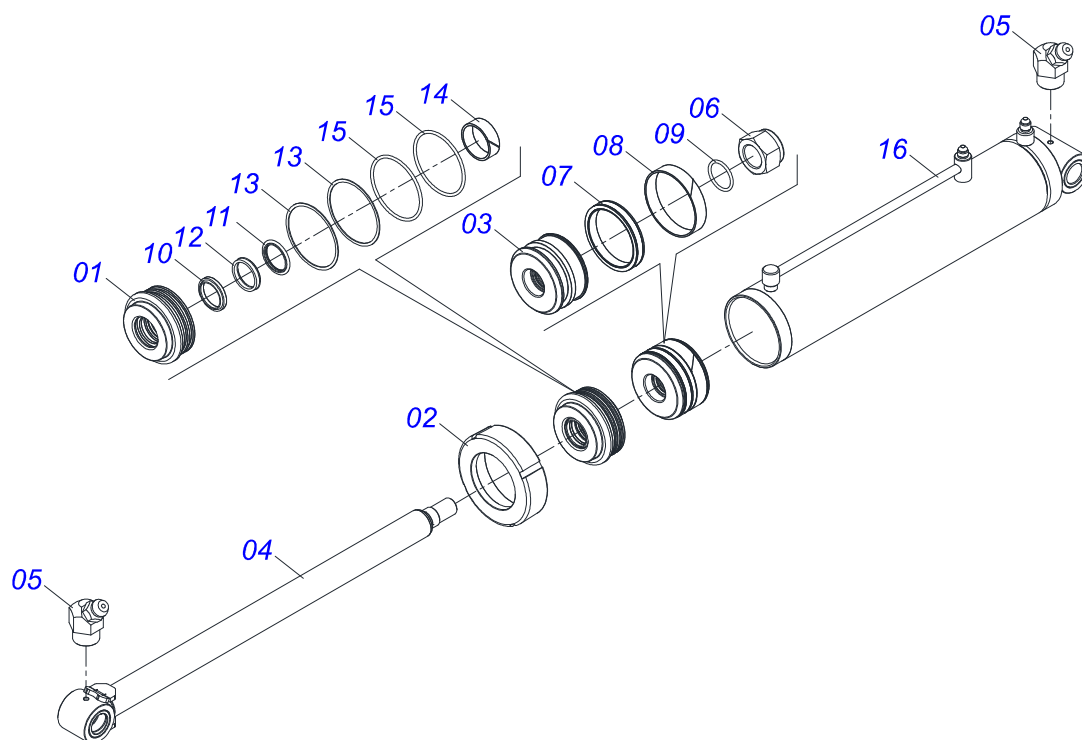

Item	Code	Description	See page	QT
01	0581010353	RING SUPPORT		01
02	0502010382	5" END CAP		01
03	0581013698	PISTON		01
04	0531062932	EXTENSION 50.80 X 898 MM		01
05	0503010003	1845 GREASE FITTING		02
06	0503010817	1.1/4" SELF LOCKING NUT		01
07	0503018439	WIPER SEAL		01
08	0503018150	RING GUIDE		01
09	0503010173	2-220 N 3006-9B O'RING		01
10	0503018024	RING BS		01
11	0503018026	1870-2000-375 B GASKET		01
12	0503010039	D-2000 SCRAPER RING		01
13	0503018152	O'RING		02
14	0503018025	RING GUIDE		01
15	0503011453	O'RING		02
16	0531066066	CILINDER CASE 127 X 773MM		01

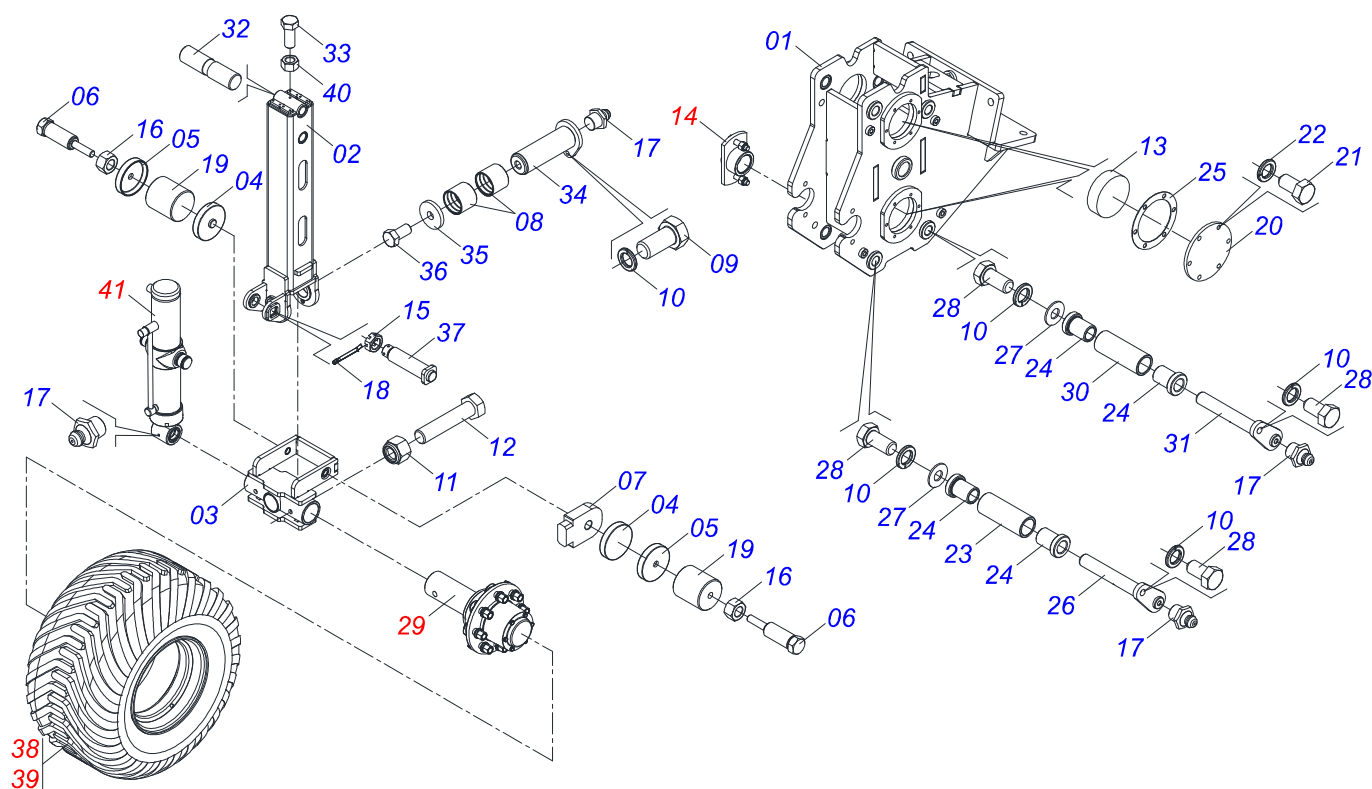


Item	Code	Description	See page	QT
01	0531065709	TELESCOPIC WHEEL SUPPORT		01
02	0531064105	CENTRAL WHEEL TOWER		01
03	0531064106	CROSSHEAD WITH SUPPORT		01
04	0501210807	PLASTIPRENE LOWER SUPPORT		02
05	0501210806	PLASTIPRENE TOP SUPPORT		02
06	0501214452	DAMPER SPINDLE		02
07	0501214453	PLASTIPRENE EAR		01
08	0501214454	GLOVE ARTICULATION AXLE		02
09	0503010834	1/2 X 1 BOLT		05
10	0503010019	1/2" SPRING WASHER		09
11	0503011075	3/4" UNC NUT		02
12	0503013185	3/4" X 5-1/2" BOLT		02
13	0501214303	WHEEL CHAIN		05
14	0531054036	ASSY CENTER CYLINDER BEARING	180	02
15	0503011052	1.1/4" X 0.77" CASTLE NUT		01
16	0503012182	1" NUT		02
17	0503010002	1800 GREASE FITTING		11
18	0503010038	3/16 X 2 COTTERPIN		01
19	0591016434	PLASTIPRENE		02
20	0501214302	ADJUSTMENT COVER PLATE		05
21	0503034377	3/8 UNC X 3/4 BOLT		30
22	0503010025	3/8 SPRING WASHER		30
23	0501215027	CENTRAL WHEEL PULLEY		03
24	0501214462	NYLON PULLEY BUSHING		06
25	0501216430	ADJUSTING COVER CALCO		05
26	0531065712	CENTRAL PULLEY LOCK SHAFT		03
27	0561010960	FLAT WASHER		04
28	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04
29	0541050194	COMPLETE CENTRAL CUBE	181	02
30	0501111193	FULL PULLEY		01
31	0531065710	MAJOR AXLE LOCK CENTRAL PULLEY		01

LEFT TELESCOPIC WHEELSET

0541050565

Item	Code	Description	See page	QT
32	0531059817	HYDRAULIC CYLINDER 44,45X85,70X326	182	01
33	0501311051	BEATER SHAFT 200 WITH GROUP		01
34	0503012623	3/8" X 1-1/2" BOLT		01
35	0531064108	ARTICULATOR AXLE CENTRAL WHEEL		01
36	0591011057	WASHER		01
37	0503011250	1" X 2" BOLT		01
38	0531064361	CYLINDER AXLE 170.50MM		01
39	0541050195	MOUNTED LEFT WHEEL	100	01
40	0541050196	MOUNTED RIGHT WHEEL	183	01
41	0503010208	HEX NUT 3/8 UNF G.5 ZN		01

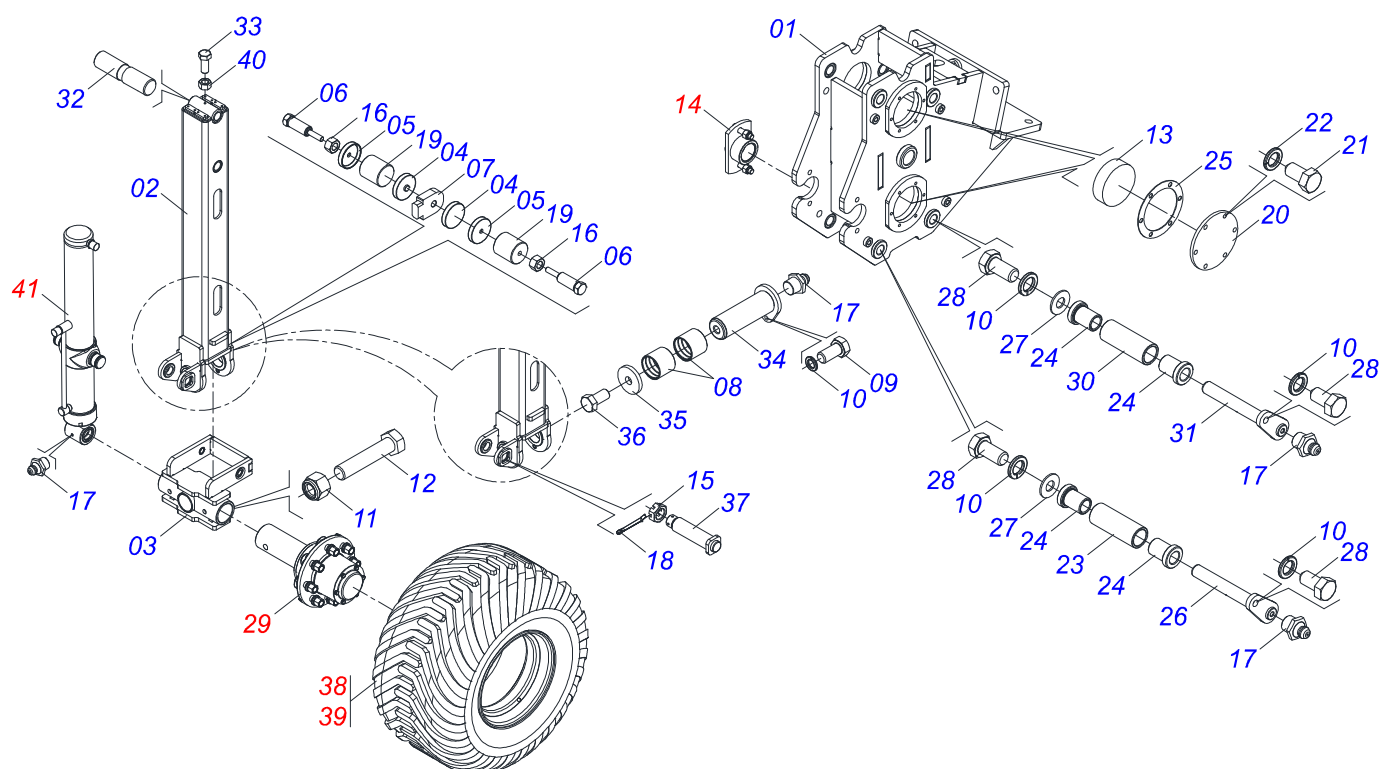


Item	Code	Description	See page	QT
01	0531065709	TELESCOPIC WHEEL SUPPORT		01
02	0531064105	CENTRAL WHEEL TOWER		01
03	0531064106	CROSSHEAD WITH SUPPORT		01
04	0501210807	PLASTIPRENE LOWER SUPPORT		02
05	0501210806	PLASTIPRENE TOP SUPPORT		02
06	0501214452	DAMPER SPINDLE		02
07	0501214453	PLASTIPRENE EAR		01
08	0501214454	GLOVE ARTICULATION AXLE		02
09	0503010834	1/2 X 1 BOLT		05
10	0503010019	1/2" SPRING WASHER		09
11	0503011075	3/4" UNC NUT		02
12	0503013185	3/4" X 5-1/2" BOLT		02
13	0501214303	WHEEL CHAIN		05
14	0531054036	ASSY CENTER CYLINDER BEARING	180	02
15	0503011052	1.1/4" X 0.77" CASTLE NUT		01
16	0503012182	1" NUT		02
17	0503010002	1800 GREASE FITTING		11
18	0503010038	3/16 X 2 COTTERPIN		01
19	0591016434	PLASTIPRENE		02
20	0501214302	ADJUSTMENT COVER PLATE		05
21	0503034377	3/8 UNC X 3/4 BOLT		30
22	0503010025	3/8 SPRING WASHER		30
23	0501215027	CENTRAL WHEEL PULLEY		03
24	0501214462	NYLON PULLEY BUSHING		06
25	0501216430	ADJUSTING COVER CALCO		05
26	0531065712	CENTRAL PULLEY LOCK SHAFT		03
27	0561010960	FLAT WASHER		04
28	0503010920	1/2 UNC X 1.1/2 C S G.5 ZN BOLT		04
29	0541050194	COMPLETE CENTRAL CUBE	181	02
30	0501111193	FULL PULLEY		01
31	0531065710	MAJOR AXLE LOCK CENTRAL PULLEY		01


RIGHT TELESCOPIC WHEELSET

0541050564


Item	Code	Description	See page	QT
32	0501311051	BEATER SHAFT 200 WITH GROUP		01
33	0503012623	3/8" X 1-1/2" BOLT		01
34	0531064108	ARTICULATOR AXLE CENTRAL WHEEL		01
35	0591011057	WASHER		01
36	0503011250	1" X 2" BOLT		01
37	0531064361	CYLINDER AXLE 170.50MM		01
38	0541050195	MOUNTED LEFT WHEEL	100	01
39	0541050196	MOUNTED RIGHT WHEEL	183	01
40	0503010208	HEX NUT 3/8 UNF G.5 ZN		01
41	0531059818	HYDRAULIC RIGHT CYLINDER	98	01

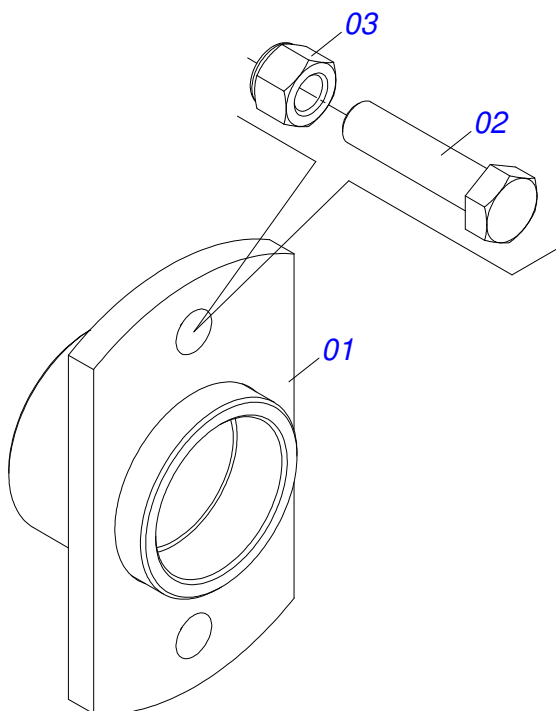


Item	Code	Description	See page	QT
01	0501111056	BEARING SUPPORT CYLINDER WITHOUT LUBRICATION		01
02	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN		02
03	0503010589	1/2" UNC SELF ADJUSTING NUT		02

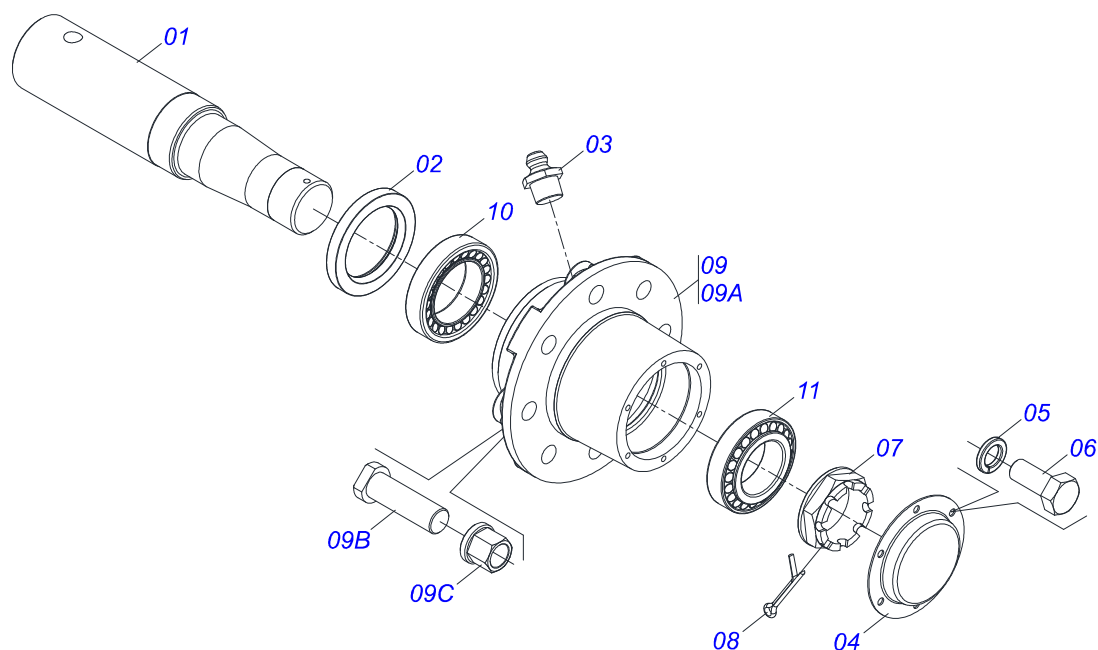


Item	Code	Description	See page	QT
01	0501214451	CENTRAL WHEEL AXLE		01
02	0503010050	SEAL 00085-B		01
03	0503010002	1800 GREASE FITTING		01
04	0541013225	WHEEL HUB LID		01
05	0503011444	SPRING WASHER		06
06	0503010240	BOLT		06
07	0502040080	FLANGE NUT R.2.1/2 UN		01
08	0503011345	1/4" X 3-1/2" COTTERPIN		01
09	0501111223	BOX ROUND WITH SCREW		01
09A	0501213765	WHEEL BOX		01
09B	0503810007	WHEEL BOLT		08
09C	0503014048	22 X 1.5 HEX NUT		08
10	0503013633	BEARING 33287/33462		01
11	0503013496	3982/3920 ROLLER BEARING		01

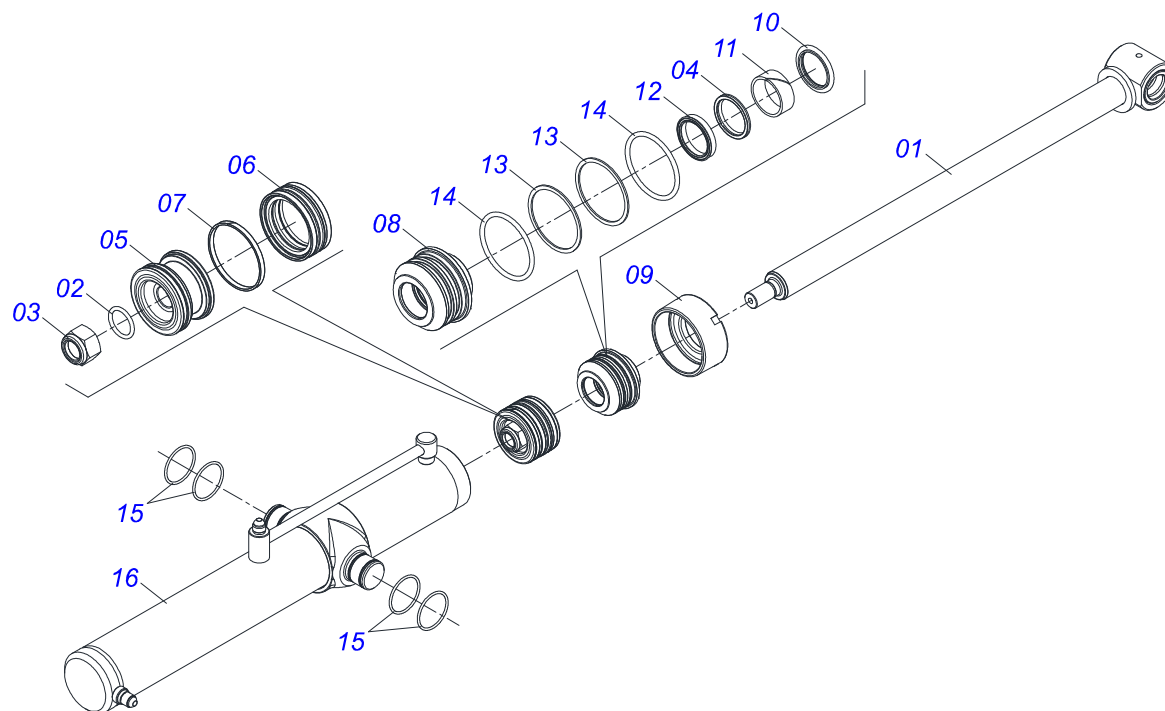


Item	Code	Description	See page	QT
01	0531064358	ROD 1.3/4 X 745MM		01
02	0503010042	2-214 N 3006-9B O'RING		01
03	0503010063	1" SELF-ALIGNING NUT		01
04	0503010761	D-1750 SCRAPER RING		01
05	0571019710	1.7" X 3.4" PISTON		01
06	0503017935	RING		01
07	0503018144	RING		01
08	0571019711	RING SUPPORT		01
09	0571019709	DETACHABLE COVER		01
10	0503017936	RING		01
11	0503017938	RING GUIDE		01
12	0503017937	GASKET		01
13	0503017940	8-337 BACK-UP RING		02
14	0503017939	2-337 N 3006-9B O' RING		02
15	0503018045	2-130 (AGEL) O'RING		04
16	0531066042	CYLINDER 85,70 X 253		01

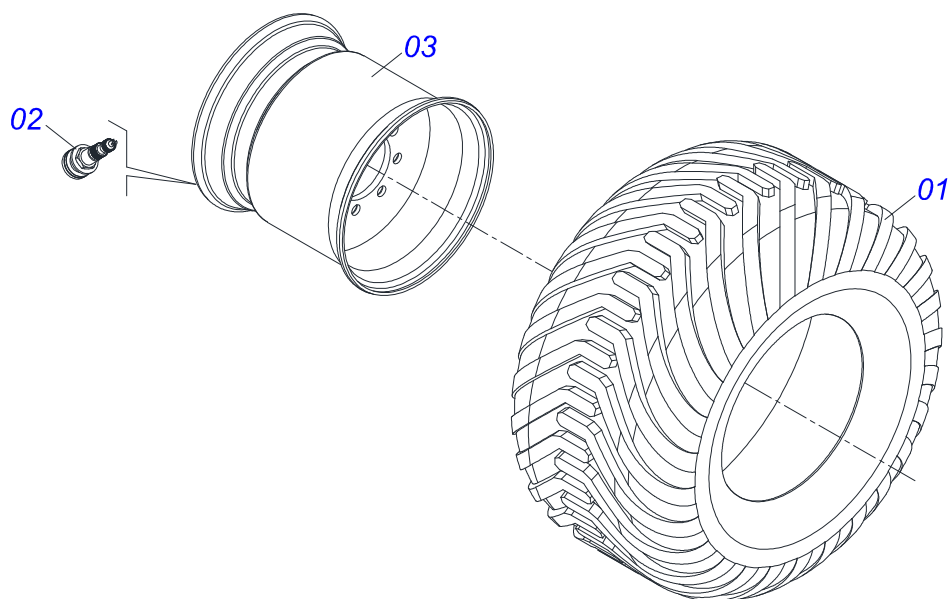


Item	Code	Description	See page	QT
01	0513010700	TIRE 500-50-17 FLOTATION T422 I1 18PR TECH SHEET		01
02	0503013999	VALVE		01
03	0503036301	RIM 16 X 17		01

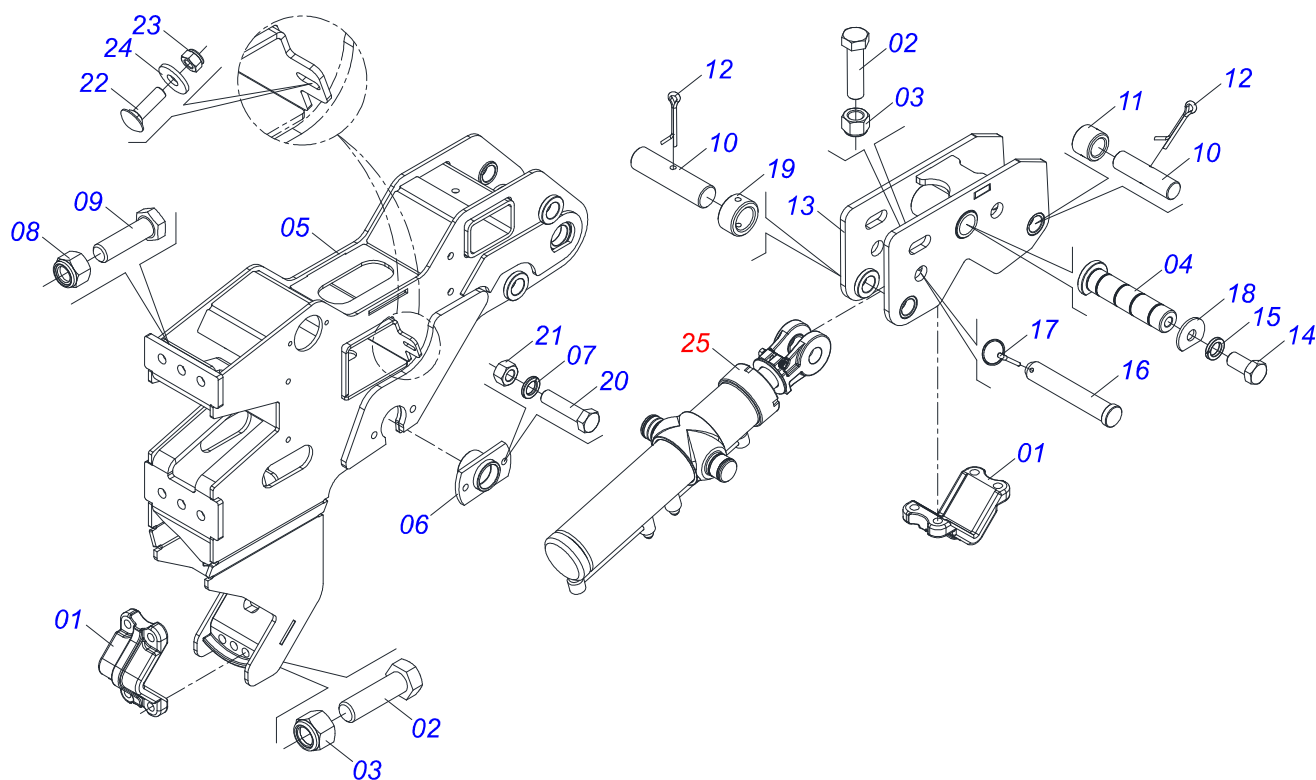


Item	Code	Description	See page	QT
01	0502012789	FIXER SUPPORT FERTILIZER ROW	02	
02	0503017857	BOLT 5/8 UNF 4	08	
03	0503010811	5/8" UNF SELF ADJUSTING NUT	08	
04	0591017796	ARTICULATION AXIS 222 R.1.1 / 4 UNF	01	
05	0531064321	UNIVERSAL SUPPORT	01	
06	0501111056	BEARING SUPPORT CYLINDER WITHOUT LUBRICATION	02	
07	0503010019	1/2" SPRING WASHER	04	
08	0503011075	3/4" UNC NUT	06	
09	0501010125	3/4" X 2-1/2" BOLT	06	
10	0591013172	31.75 X126 AXLE WITH 8 HOLE	02	
11	0591013173	CYLINDER INTERMEDIATE BUSHING	01	
12	0503012231	1/4" X 3" COTTERPIN	02	
13	0501111072	SIDE SUPPORT ARTICULATOR	01	
14	0501011544	3/4" X 1-1/2" BOLT	01	
15	0503010023	3/4" SPRING WASHER	01	
16	0591018408	PIN LOCK LINES	01	
17	0503030085	LOCK PIN	01	
18	0591019305	FLAT WASHER 20 X 60 X 4.75 WITH CUT OUT	01	
19	0501211496	GLOVE 16 X 25 X 27 WITH HOLE	01	
20	0503010740	BOLT 1/2 UNC X 2 CS G.5 ZN	04	
21	0503010060	1/2 UNC G.5 ZN HEX NUT	04	
22	0501010942	3/8" X 1-1/4" BOLT	02	
23	0503013357	3/8 SELF-ADJUSTING NUT	02	
24	0501010984	10,50 X 27 X 3,00 FLAT WASHER	02	
25	0541050570	SIDE ARTICULATION CYLINDER 104 44,45X85,70X291X657 DKO	01	

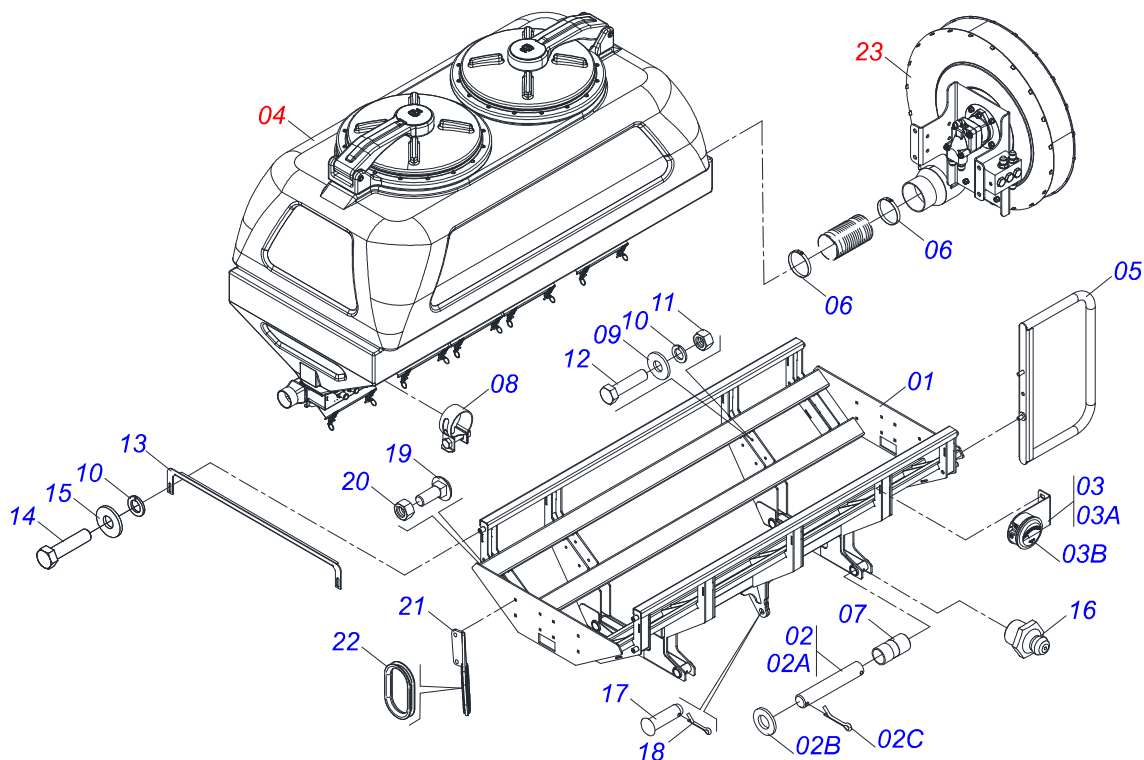


Item	Code	Description	See page	QT
01	0531063641	CENTRAL SEED BOX SUPPORT 2500 LITERS		01
02	0531054352	AXLE 1.1/2 X 167 MM WITH WASHER		04
02A	0501212952	PASADOR 1.1/2 X 167 MM		01
02B	0501212953	FLAT WASHER 39 X 60 X 3		04
02C	0503010010	1/4" X 2.1/2" COTTERPIN		02
03	0531054355	SUPPORT WITH VACUOMETER 18 TO 25 LINES		01
03A	0503013584	VACUUM GAUGE		01
03B	0501212956	18/25 CENTRAL VACUUM SUPPORT		01
04	0531054354	CENTRAL SEED BOX 2500 LITERS	186	01
05	0531063639	CSC HANDRAIL 2500 LITERS		02
06	0503011372	102 TO 121 CLAMP		02
07	0501213035	SILO SUPPORT GLOVE CSC 2500L		04
08	0513010405	CLAMP		28
09	0511017302	FLAT WASHER 13,50 X 32,50 X 3,0 ZN		04
10	0503010019	1/2" SPRING WASHER		08
11	0503010060	1/2 UNC G.5 ZN HEX NUT		02
12	0503010547	1/2" X 4" BOLT		02
13	0501212957	SILO LOCK CSC 2500 LITERS		02
14	0503014007	1/2" X 1-1/4" BOLT		06
15	0521018517	FLAT WASHER		02
16	0503010002	1800 GREASE FITTING		04
17	0521012538	1.2" X 3.5" COUPLING SHAFT		01
18	0503010010	1/4" X 2.1/2" COTTERPIN		01
19	0503014378	1/2" X 1-1/2" BOLT		06
20	0503010589	1/2" UNC SELF ADJUSTING NUT		06
21	0501213773	HOSE GUIDE SUPPORT		01
22	0503035468	HOSE PROTECTION		01
23	0531058201	HYDRAULIC TURBINE WITH SCREEN	188	01

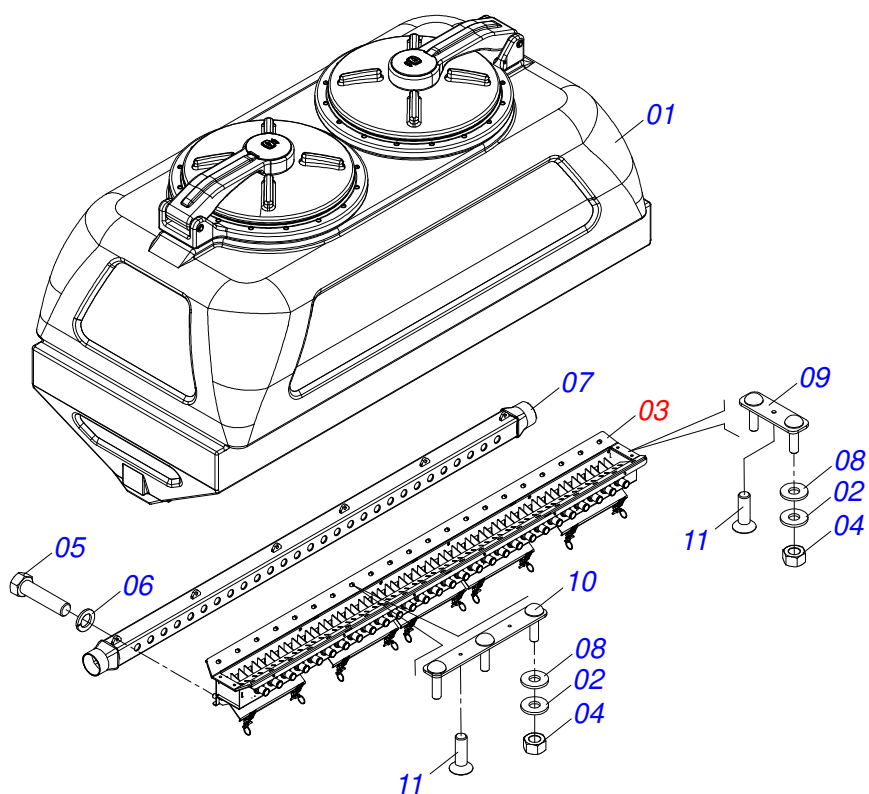


Item	Code	Description	See page	QT
01	0503063436	COMPLETE POSITIVE AIR DOUBLE SEED BOX		01
02	0501010984	10,50 X 27 X 3,00 FLAT WASHER		46
03	0531054357	LOWER SYSTEM 28 PIPES	187	01
04	0503013357	3/8 SELF-ADJUSTING NUT		46
05	0503010849	3/8" X 1-1/2" BOLT		12
06	0503010025	3/8 SPRING WASHER		12
07	0531063644	AIR TUBE 28 OUTLETS WITH FIXER		01
08	0513010632	RUBBER SMOOTH WASHER 28 X 10 X 2.00		46
09	0531063885	SYSTEM FIXING RULE		02
10	0531063624	SYSTEM FIXING RULE		14
11	0513010630	SCREW M6 X1 X 20 CCSI 10.9 SA		30

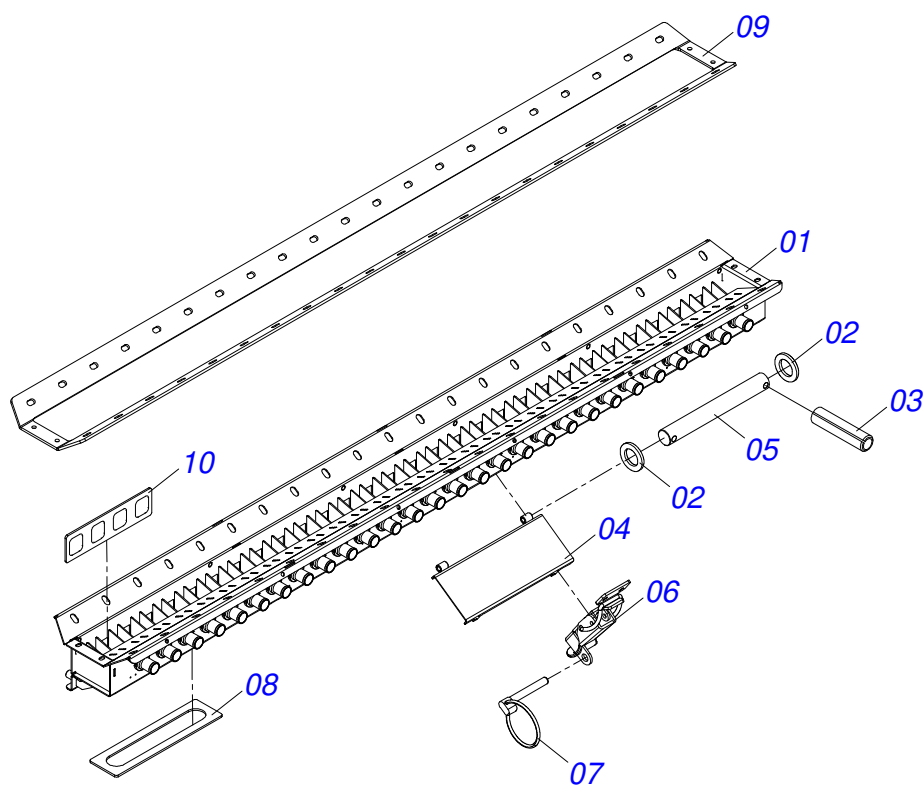


Item	Code	Description	See page	QT
01	0531063643	OUTLET BODY WITH DUCTS		01
02	0503015135	FLAT WASHER 10 X 18 X 2		10
03	0503011823	0.1" X 0.6" SPRING PIN		10
04	0521068978	CASH FUND COVER		05
05	0581017529	ROD 9,53		05
06	0503034692	FAST LOCK ASSY		10
07	0503030085	LOCK PIN		10
08	0503034573	SEALING		05
09	0503035773	BOTTOM SEAL BOX SYSTEM 28 OUTPUTS		01
10	0503063723	AIR TUBE SEAL 04 OUTLETS 290		07

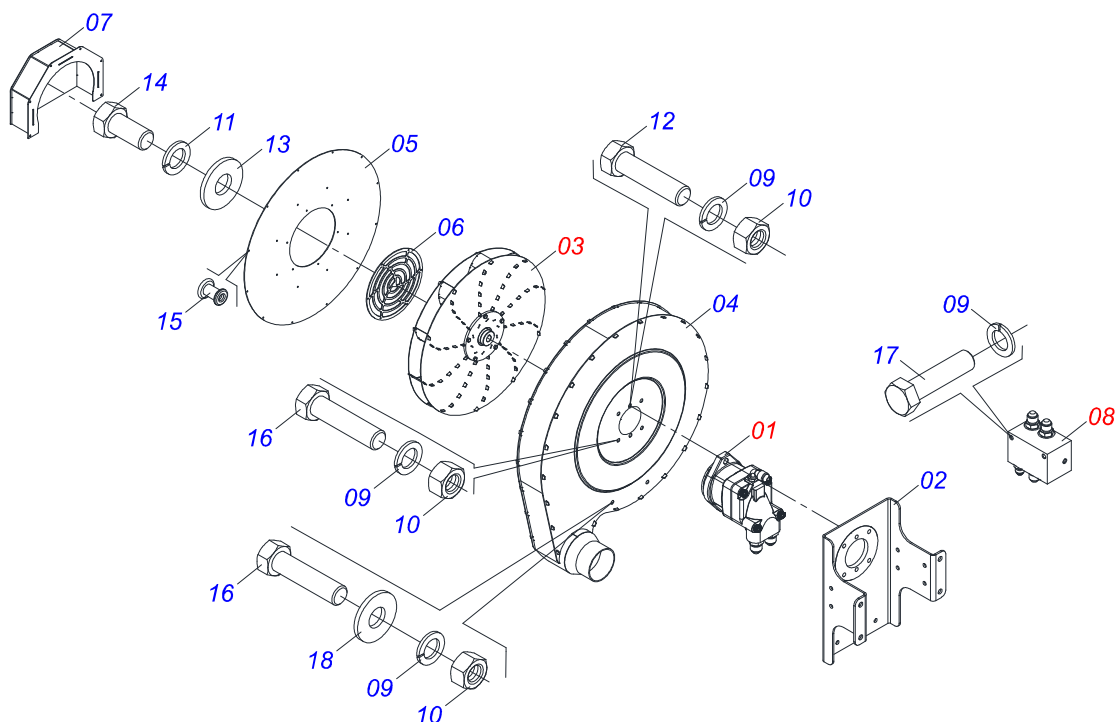

Item	Code	Description	See page	QT
01	0531056343	HYDRAULIC ENGINE		01
02	0531063640	TURBINE SUPPORT		01
03	0521044613	480 X 50 FAN (HIDRAULIC)		01
04	0531061858	MECHANICAL SNAIL		01
05	0571018577	COVER SNAIL TURBINE		01
06	0571018578	TURBINE PROTECTIVE SCREEN		01
07	0521069167	FRONT PROTECTION		01
08	0531056344	COMMAND BLOCK		01
09	0503010025	3/8 SPRING WASHER		10
10	0503010026	3/8" NUT		08
11	0503010143	1/4" SPRING WASHER		01
12	0503010849	3/8" X 1-1/2" BOLT		02
13	0531018764	FLAT WASHER		01
14	0503011104	M6 X 1" BOLT		01
15	0503012722	0.16" X 0.4" BLIND RIVET		19
16	0503010237	3/8" X 1" BOLT		06
17	0503010206	3/8 X 1/2 BOLT		02
18	0541013274	LISA WASHER 10 X 38 X 4.75		02

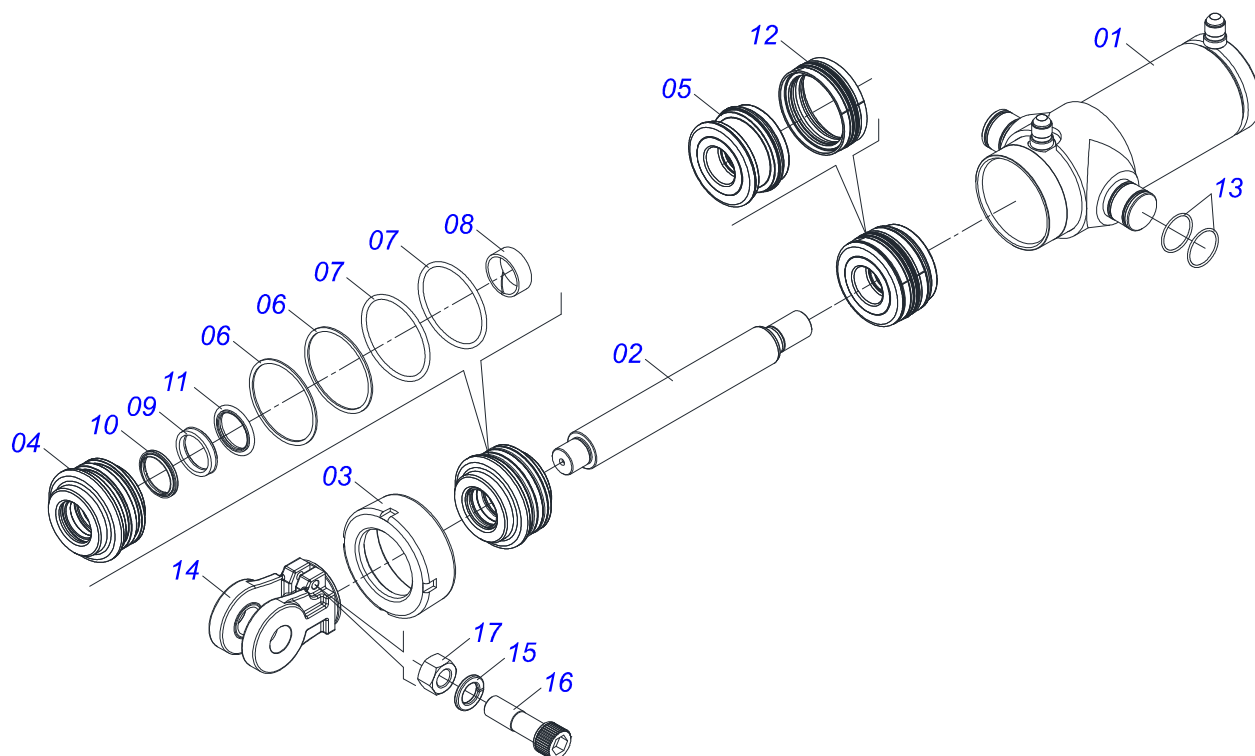


Item	Code	Description	See page	QT
01	0531066440	CYLINDER CASE 63,50 X 345 DKO		01
02	0501212949	EXTENDER 38.10 X 38.05 X 380		01
03	0502010471	63,50 MOBILE CAP		01
04	0581010668	RING SUPPORT		01
05	0502012837	PISTON		01
06	0503018163	BACK-UP RING		02
07	0503018162	O'RING		02
08	0503018004	RING		01
09	0503018003	GASKET		01
10	0503010163	D-1500 SCRAPER RING		01
11	0503011109	2-119 N 3006-9B O'RING		01
12	0503018005	RING		01
13	0503018045	2-130 (AGEL) O'RING		04
14	0511064408	FORK		01
15	0503010025	3/8 SPRING WASHER		01
16	0503011094	3/8" X 2" BOLT		01
17	0503010026	3/8" NUT		01

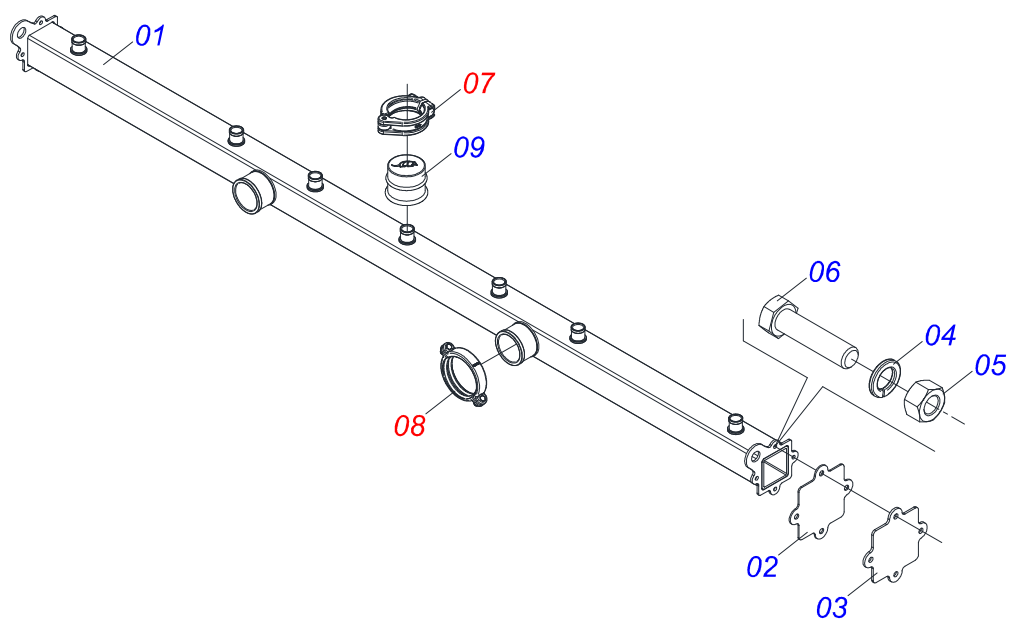

Item	Code	Description	See page	QT
01	0531066447	AIR CONDUCTOR TUBE		01
02	0503036366	SEALING AIR TUBE		02
03	0501312852	COVER AIR TUBE		02
04	0503010025	3/8 SPRING WASHER		08
05	0503010026	3/8" NUT		08
06	0503010237	3/8" X 1" BOLT		08
07	0521052549	CLAMP	166	07
08	0531050772	RIGHT CLAMP 4		02
09	0503034867	AIR DISTRIBUTOR PUMP		01

LEFT LANTERN SET


0541050679

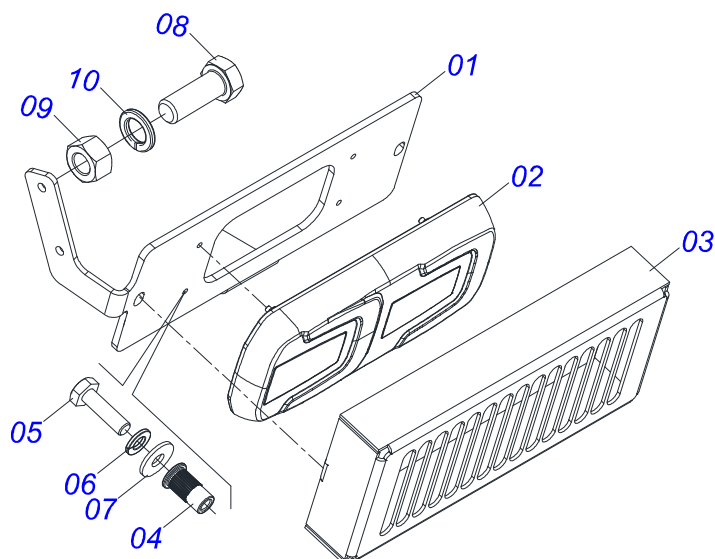


Item	Code	Description	See page	QT
01	0501312955	LEFT LANTERN SUPPORT		01
02	0503019579	LED LANTERN		01
03	0591018872	LANTERN COVER		01
04	0503019412	RIVET SCREW INTERNAL		02
05	0503013813	1/4" UNC X 7/8" BOLT		02
06	0503010143	1/4" SPRING WASHER		02
07	0503010305	FLAT WASHER		02
08	0503010237	3/8" X 1" BOLT		02
09	0503010026	3/8" NUT		02
10	0503010025	3/8 SPRING WASHER		02

RIGHT LANTERN SET


0541050678

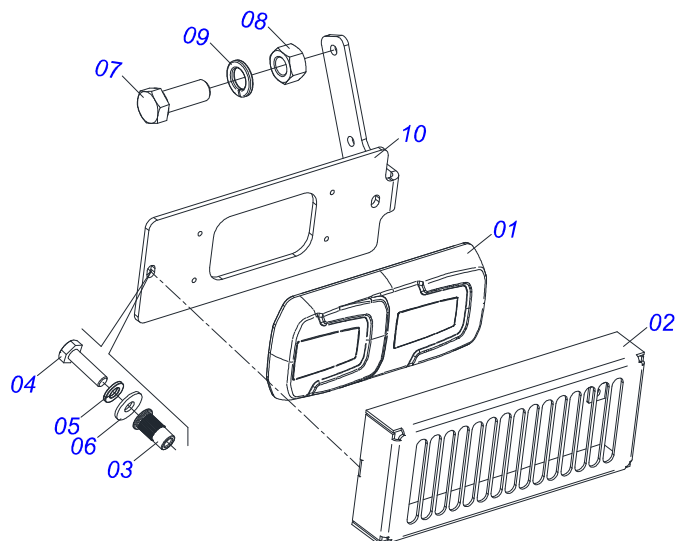

Item	Code	Description	See page	QT
01	0503019579	LED LANTERN		01
02	0591018872	LANTERN COVER		01
03	0503019412	RIVET SCREW INTERNAL		02
04	0503013813	1/4" UNC X 7/8" BOLT		02
05	0503010143	1/4" SPRING WASHER		02
06	0503010305	FLAT WASHER		02
07	0503010237	3/8" X 1" BOLT		02
08	0503010026	3/8" NUT		02
09	0503010025	3/8 SPRING WASHER		02
10	0501312954	SUPPORT RIGHT LIGHT		01

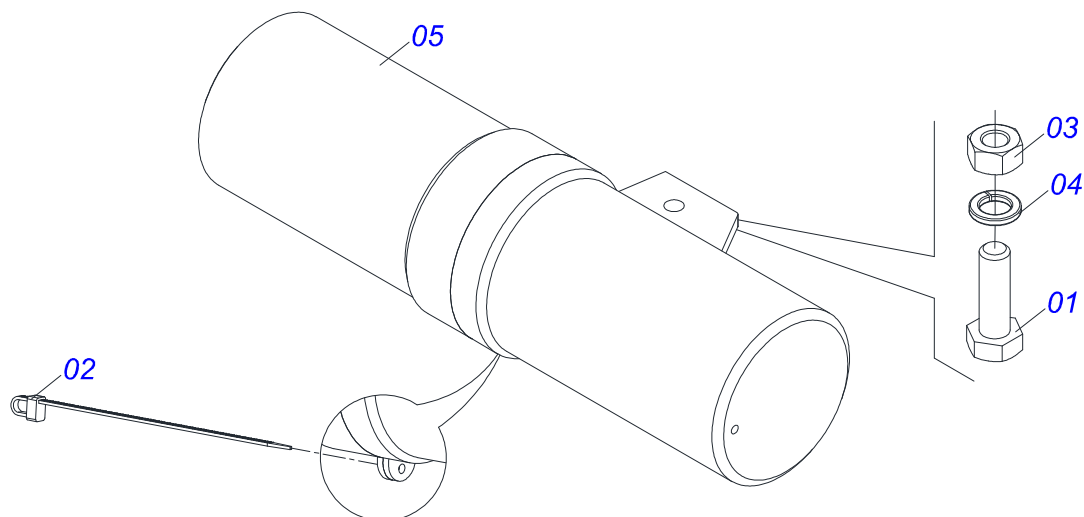


Item	Code	Description	See page	QT
01	0503010363	BOLT 5/16 UNC X 1 C S G.2 ZN		01
02	0503010267	NYLON CLAMP		01
03	0503010337	5/16" NUT		01
04	0503010179	LOCK WASHER 5/16 ZN 1K01528		01
05	0503060100	INSTRUCTIONS MANUAL CANISTER		01
06	0511034540	BAG WITH INSTRUCTION MANUAL		01

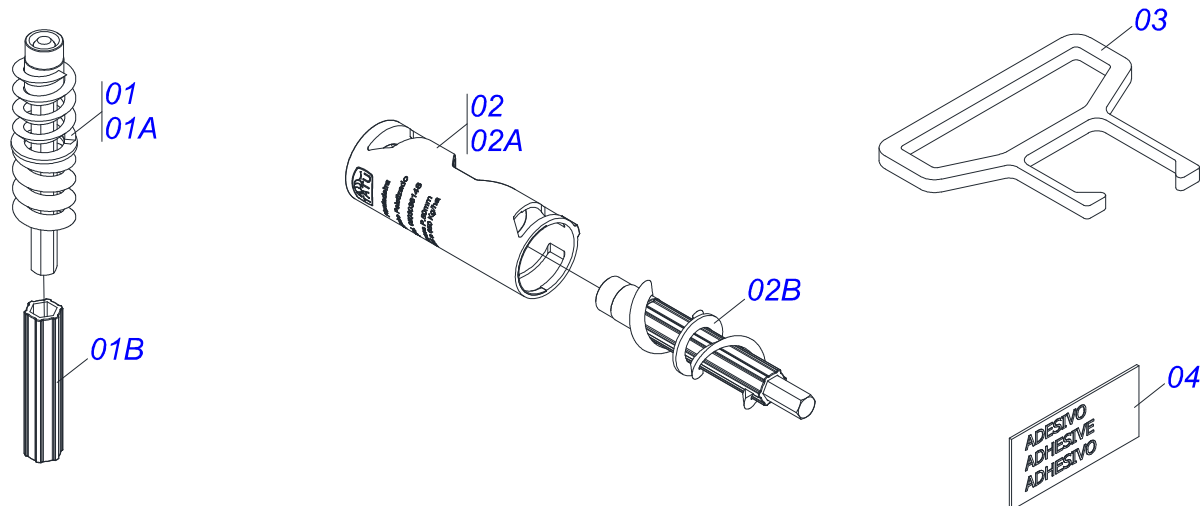


Item	Code	Description	See page	QT
01	0531058988	P.16 ENDLESS THREAD WITH COATING		20
01A	0531065012	ALPHA FERTILIZER METERING P.16MM WORM THREAD		01
01B	0503035859	SUPPORT SLEEVE		01
02	0531058992	PELLETIZED FERTILIZER KIT P.50 125 TO 650 KG/HA ALPHA		20
02A	0501111196	PELLETED FERTILIZER METERING COATING		01
02B	0531058987	ENDLESS THREAD WITH AXLE COVERING		01
03	0501214546	SPRING KEY		01
04	0503035928	ADHESIVE LABEL FERTILIZER TABLE ALPHA P16.5		01

LEFT STAIRS SET


0531052854

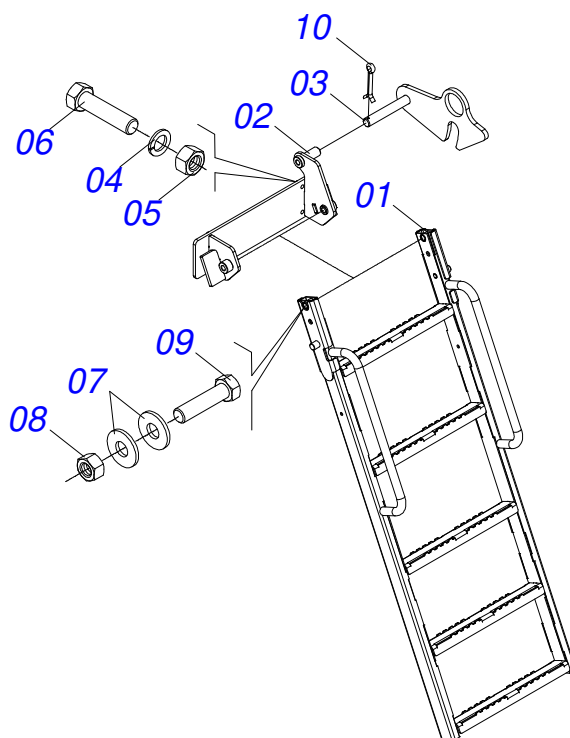


Item	Code	Description	See page	QT
01	0531061615	MOBILE LADDER		01
02	0531062927	LEFT SUPPORT STAIRCASE		01
03	0531062926	LEFT LOCK LADDER		01
04	0503010025	3/8 SPRING WASHER		04
05	0503010026	3/8" NUT		04
06	0503010751	C3/8" X 1.1/4" HEX BOLT G.5		04
07	0501010937	13,50 X 28 X 3,00 FLAT WASHER		04
08	0503010589	1/2" UNC SELF ADJUSTING NUT		02
09	0503010752	1/2" X 3.1/2" BOLT		02
10	0503010140	1/8" X 3/4" COTTERPIN		01

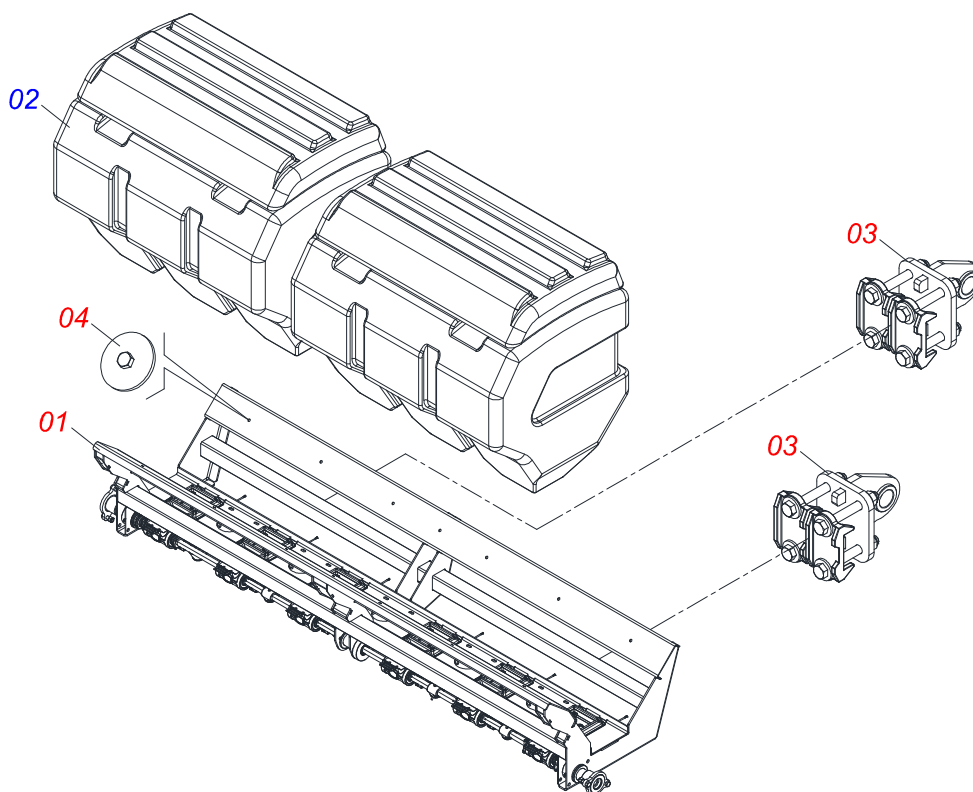

Item	Code	Description	See page	QT
01	0531058136	LEFT SIDE SILO WITH 06 MOUTHS ALPHA	197	01
02	0503063507	COMPLETE SILO 03 MOUTHS 540L		02
03	0531050918	TOP SUPPORT MOUNTED LIFT EXTENSOR	91	02
04	0521051407	FERTILIZER HOPPER FIXER	92	12

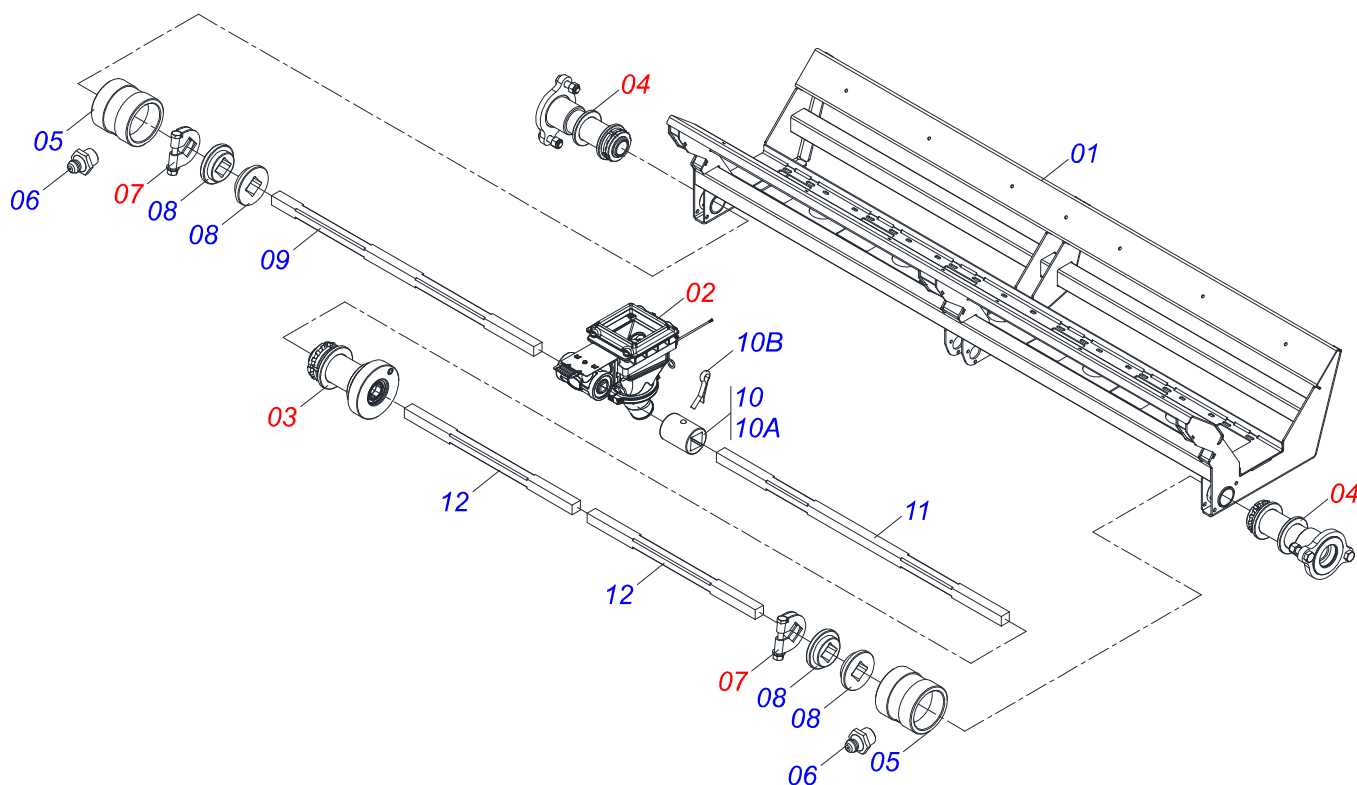

Item	Code	Description	See page	QT
01	0531065080	SUPPORT SILO 09 BOUTES		01
02	0531059144	FERTILIZER DOSER ALPHA II	83	06
03	0531051685	CENTRAL BEARING SHAFT	88	01
04	0531051684	SIDE AXLE	89	02
05	0591018936	GLOVE		02
06	0503010002	1800 GREASE FITTING		02
07	0501053788	3/4" SQUARE AXLE FASTENER	90	04
08	0503031527	AGRICULTURAL BEARING		04
09	0501218575	SQUARE AXIS 3/4 X 730MM WITH RELIEVE		01
10	0531057908	SLEEVE 1/4 X 2		03
10A	0502013069	SLEEVE 21 X 38 X 50		01
10B	0503010010	1/4" X 2.1/2" COTTERPIN		01
11	0501218576	AXIS SQUARE 3/4 X 910MM		01
12	0501218487	3/4 X 390 AXLE		02

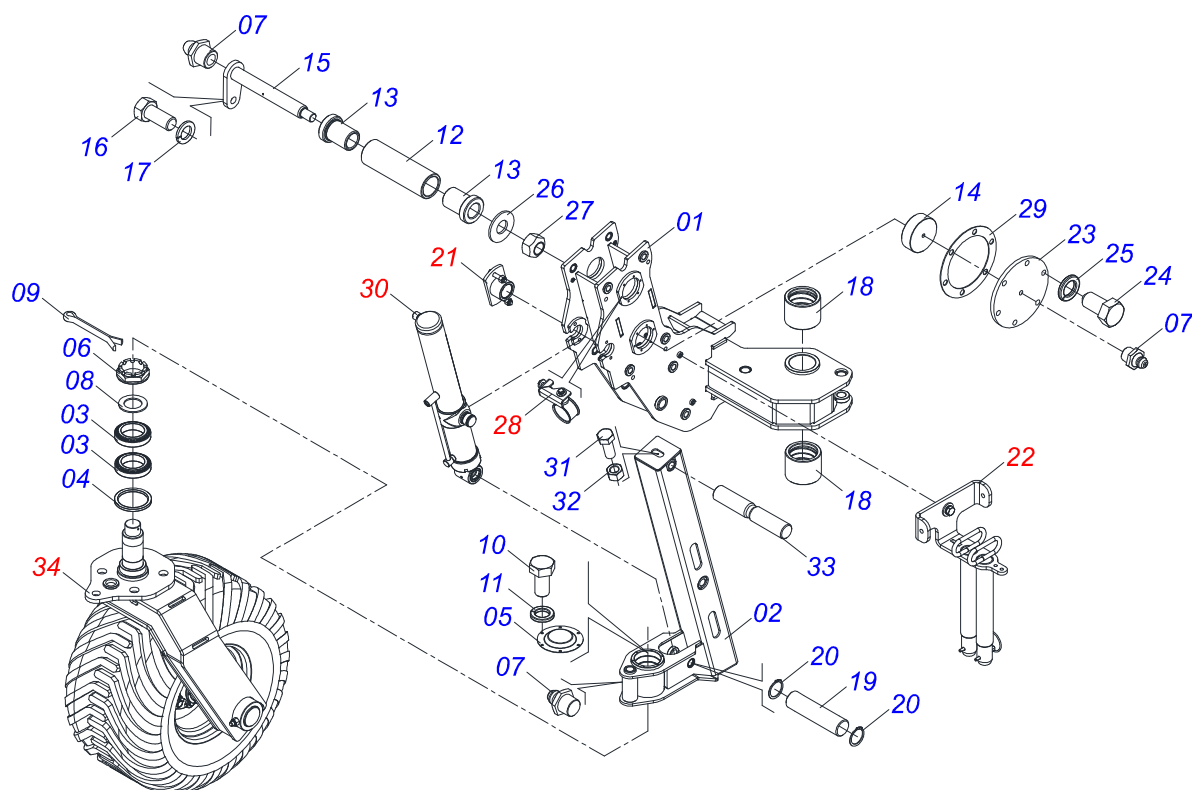


Item	Code	Description	See page	QT
01	0531064112	LEFT SIDE WHEEL CHASSI		01
02	0531064113	SIDE WHEEL TOWER		01
03	0503014559	ROLLER BEARING		02
04	0503010095	SEAL		01
05	0501213909	WHEELED HUB COVER		01
06	0502040080	FLANGE NUT R.2.1/2 UN		01
07	0503010002	1800 GREASE FITTING		11
08	0501213917	ADJUSTMENT WASHER		01
09	0503012213	1/4" COTTERPIN		01
10	0503010295	SCREW 5/16 UNC X 5/8 CS G.2 ZN		06
11	0503010179	LOCK WASHER 5/16 ZN 1K01528		06
12	0501214463	SIDE WHEEL PULLEY		06
13	0501214462	NYLON PULLEY BUSHING		12
14	0501214303	WHEEL CHAIN		04
15	0531064110	PULLEY LOCK AXLE		06
16	0503010834	1/2 X 1 BOLT		06
17	0503010019	1/2" SPRING WASHER		06
18	0591017921	BRONZE GLOVE 90.5 X 115 X 91		02
19	0501214460	AXLE 1.1/2 X 140MM		01
20	0503010390	SEAL RING		02
21	0531055358	COMPLETE SIDE CYLINDER BEARING	96	02
22	0531055357	LOCK PIN SET	97	01
23	0501214302	ADJUSTMENT COVER PLATE		04
24	0503034377	3/8 UNC X 3/4 BOLT		24
25	0503010025	3/8 SPRING WASHER		24
26	0501017065	FLAT WASHER		06
27	0503011255	3/4" LOCK NUT		06
28	0531057692	LEFT COMPLETE HOSE SUPPORT	199	01
29	0501216430	ADJUSTING COVER CALCO		04
30	0531059817	HYDRAULIC CYLINDER 44,45X85,70X326	182	01
31	0503012623	3/8" X 1-1/2" BOLT		01




Item	Code	Description	See page	QT
32	0503010208	HEX NUT 3/8 UNF G.5 ZN		01
33	0501311048	BEATER AXLE 230		01
34	0541050293	LEFT WHEEL TIRE 500 X 50	200	01

LEFT COMPLETE HOSE SUPPORT

0531057692

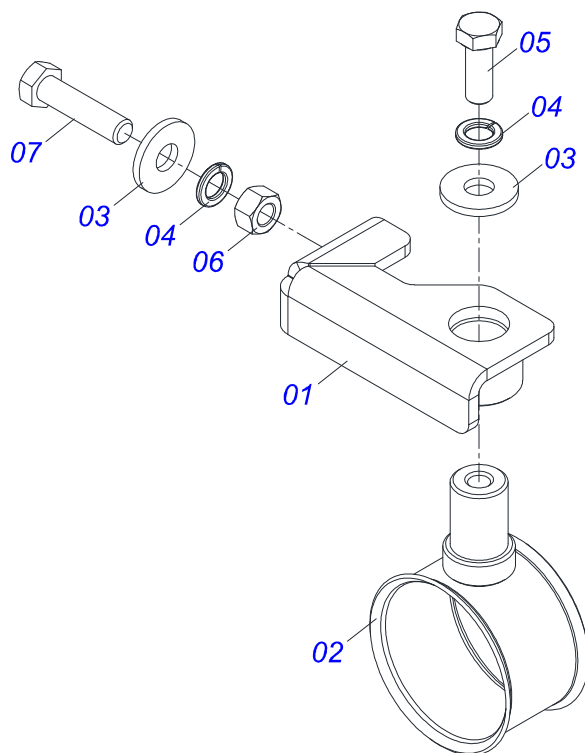


Item	Code	Description	See page	QT
01	0531065305	HOSE SUPPORT LEFT		01
02	0531065306	ARTICULATOR HOSE		01
03	0501010984	10,50 X 27 X 3,00 FLAT WASHER		02
04	0503010025	3/8 SPRING WASHER		02
05	0503010237	3/8" X 1" BOLT		01
06	0503010026	3/8" NUT		01
07	0503010849	3/8" X 1-1/2" BOLT		01

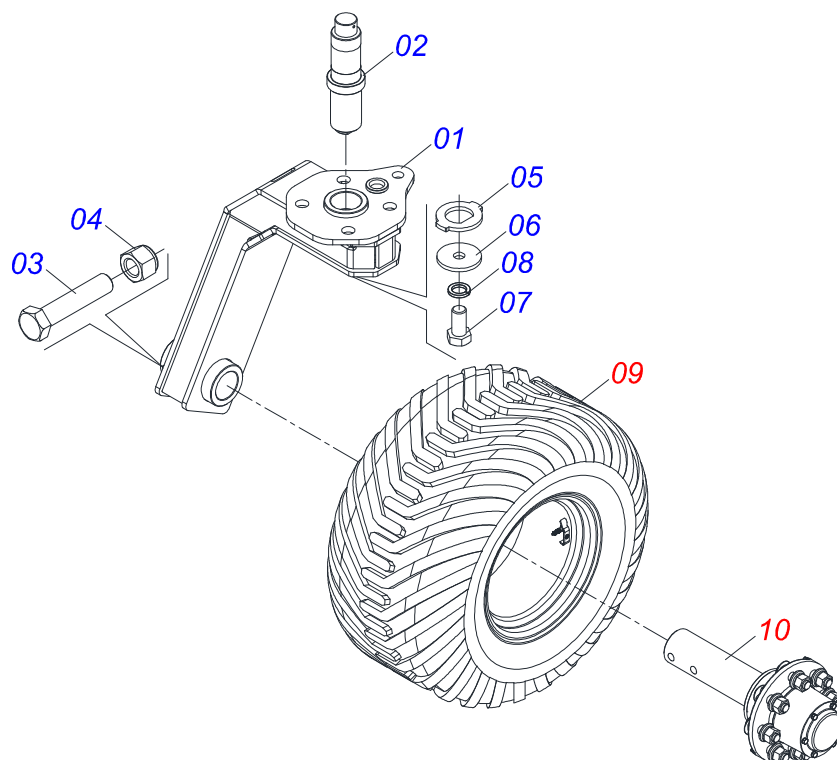


Item	Code	Description	See page	QT
01	0531064114	SINGLE LEFT WHEEL TIRE 500/50		01
02	0501213744	SINGLE ARM WHEEL AXLE		01
03	0503019246	BOLT		01
04	0503011075	3/4" UNC NUT		01
05	0501213743	LOCK AXLE		01
06	0501213742	SUPPORT WASHER		01
07	0503010953	BOLT 1 UNC X 2 C S G.5 ZN		01
08	0503010012	1" SPRING WASHER		01
09	0541050196	MOUNTED RIGHT WHEEL	183	01
10	0541050294	FULL WHEEL BOX	101	01

LEFT SIDE DUCT ASSEMBLY

0541050668

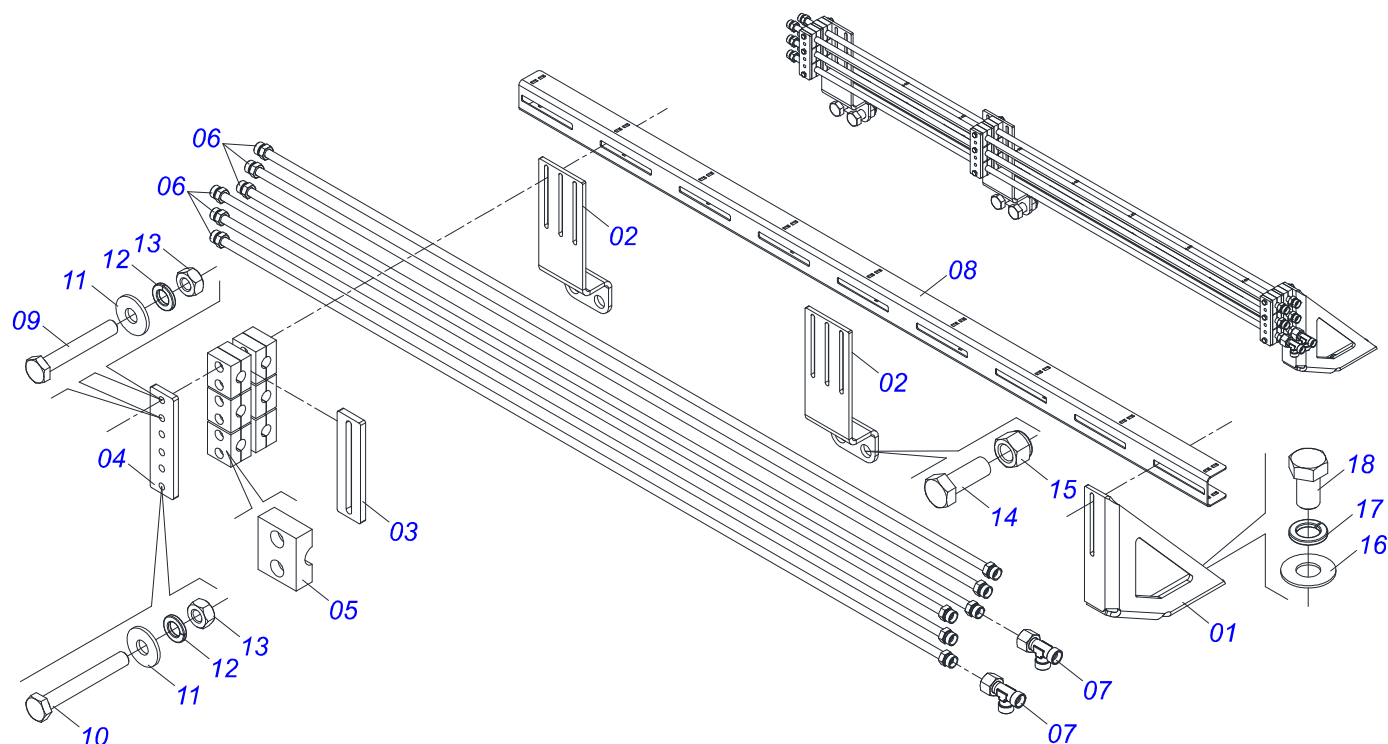

Item	Code	Description	See page	QT
01	0501312938	LEFT SIDE SUPPORT	01	
02	0501312940	SUPPORT PLATE DUCT	02	
03	0501311238	CLAMP UNION 112 X 30 X 6,30	03	
04	0501311237	FIXER	03	
05	0513010752	SINGLE STANDARD CLAMP 12 MM - BLACK	36	
06	0503036389	HYDRAULIC TUBE PT12L X PT12L X 1450	06	
07	0513011685	TEE TERMINAL MF X MF X FG TB12L	02	
08	0501312946	GUTTER 50 X 30 X 1350	01	
09	0513011664	BOLT M6 X 1,00 X 80 - SXR6X80ZI	06	
10	0513011665	BOLT M6 X 1,00 X 90 - SXR6X90ZI	03	
11	0503010305	FLAT WASHER	09	
12	0503015110	M06 SPRING WASHER	09	
13	0503014540	M6 NUT	09	
14	0501010098	3/4" UNC BOLT	04	
15	0503011075	3/4" UNC NUT	04	
16	0501013519	FLAT WASHER	02	
17	0503010019	1/2" SPRING WASHER	02	
18	0503013776	BOLT 1/2 UNC X 7/8 C S G.5 ZN	02	

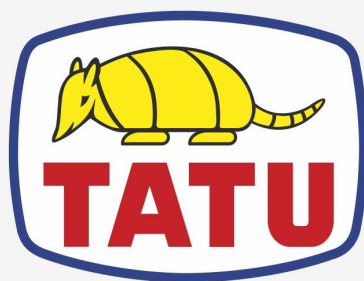

MARCHESAN

Technical Publications | Elaboration and Revision

LUIZ CANDIDO

www.marchesan.com.br

